

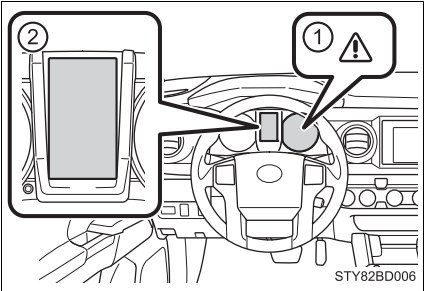
If a warning message is displayed (vehicles with a multi-information display)

If a warning is shown on the multi-information display, stay calm and perform the following actions:

① Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

② Multi-information display



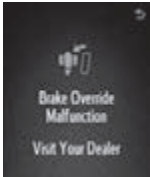
If any of the warning light comes on again after the following actions have been performed, contact your Toyota dealer.

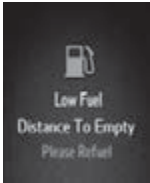
Warning message and warning buzzer list

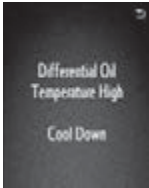
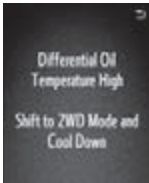
Warning message	Details/Actions
 (U.S.A.)  (Canada) BRAKE (U.S.A.)  (Canada)	Indicates the following: • The brake fluid level is low; or, • The brake system is malfunctioning*¹. → Immediately stop the vehicle in a safe place and contact your Toyota dealer.

Warning message	Details/Actions
  (If equipped)	Indicates that the automatic transmission fluid temperature is too high. A buzzer also sounds. → Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the message and light go off. If the message and light go off, you may start the vehicle again. If the message and light do not go off, contact your Toyota dealer.
 	Indicates that the engine coolant temperature is too high. A buzzer also sounds. → P. 561
 	Indicates abnormal engine oil pressure The warning light may come on if the engine oil pressure is too low. A buzzer also sounds. → Immediately stop the vehicle in a safe place and contact your Toyota dealer.
	Indicates a malfunction in the vehicle's charging system. → Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.

Warning message	Details/Actions
 (U.S.A.)  (Canada) ABS (U.S.A.)  (Canada)	Indicates a malfunction in: • The ABS; or • The brake assist system A buzzer also sounds. → Have the vehicle inspected by your Toyota dealer.
	Indicates a malfunction in: • The VSC system; • Trailer Sway Control system (if equipped); • The TRAC system; • The hill-start assist control system (if equipped); • The active traction control system (if equipped); • The AUTO LSD system; or • The Crawl Control system (if equipped) → Have the vehicle inspected by your Toyota dealer.
  (Flashes and then remains on) (If equipped)	Indicates a malfunction in the tire pressure monitoring system. The tire pressure warning light comes on after flashing for 1 minute. → Have the vehicle inspected by your Toyota dealer.

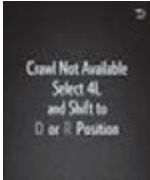
Warning message	Details/Actions
  (If equipped)	Indicates a malfunction in the cruise control system. Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system. A buzzer also sounds. → Have the vehicle inspected by your Toyota dealer.
 	Indicates a malfunction in the Brake Override System. A buzzer also sounds. → Have the vehicle inspected by your Toyota dealer.
  (2GR-FKS engine only)	Indicates that the engine oil level is low. A buzzer also sounds. → Check the level of engine oil, and add if necessary. This message may appear if the vehicle is stopped on a slope. Move the vehicle to a level surface and check to see if the message disappears.
  (Flashes)	Indicates that the accelerator and brake pedals are being depressed simultaneously, then the Brake Override System is operating. (→P. 156) → Release the accelerator or brake pedals.

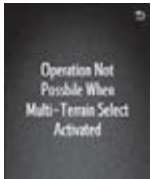
Warning message	Details/Actions
  (If equipped)	Indicates that the tire inflation pressure is low. → Check the tire inflation pressure, and adjust to the appropriate level.
 (Canada only)	Indicates that the washer fluid level is low. → Add washer fluid.
 	Indicates that remaining fuel is approximately 3.2 gal. (12.0 L, 2.6 Imp.gal.) or less → Refuel the vehicle.
  (Flashes) (4WD models only)	Indicates that the transfer mode may not successfully change. → Operate the front-wheel drive control switch again. (→P. 244)

Warning message	Details/Actions
  (Flashes) (4WD models only)	Indicates that the front differential oil temperature is too high. → Drop your speed or stop the vehicle until the message and light go off. If the message and light do not go off, contact your Toyota dealer.
  (Flashes) (4WD models only)	Indicates that the front differential oil temperature is too high. → Turn the front-wheel drive control switch to “2WD” (→P. 244) and drop your speed or stop the vehicle until the message and light go off. If the message and light do not go off, contact your Toyota dealer.
  (If equipped)	Indicates that the Crawl Control is canceled while in use. A buzzer also sounds. → Use the Crawl Control under the proper operating conditions. (→P. 259)
	Indicates that one or more of the doors is not fully closed. The system also indicates which doors are not fully closed. If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the door(s) are not yet fully closed. → Make sure that all the doors are closed.

Warning message	Details/Actions
 (If equipped)	Indicates that the hood is not fully closed. If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the hood is not yet fully closed. → Close the hood.
  (If equipped)	Indicates a malfunction in the intuitive parking assist. The malfunctioning assist-sensor is flashing. → Have the vehicle inspected by your Toyota dealer immediately.
  (If equipped)	Indicates that intuitive parking assist is dirty or covered with ice. → Clean the sensor.
 	Indicates that the parking brake is still engaged. If the vehicle reaches a speed of 3 mph (5 km/h),  flashes and a buzzer sounds to indicate that the parking brake is still engaged. → Release the parking brake.

Warning message	Details/Actions
  (Flashes) (If equipped)	Indicates a malfunction in the smart key system. A buzzer also sounds. → Have the vehicle inspected by your Toyota dealer.
  (If equipped)	Indicates that a Blind Spot Monitor sensor or the surrounding area on the bumper is dirty or covered with ice. A buzzer also sounds. → Clean the sensor and its surrounding area on the bumper.
  (If equipped)	Indicates a malfunction in the BSM (Blind Spot Monitor) system. A buzzer also sounds. → Have the vehicle inspected by your Toyota dealer.
  (Flashes)	Indicates that the engine switch is turned to the “LOCK” or “ACC” position (vehicles without a smart key system), or off or ACCESSORY mode (vehicles with a smart key system) and the driver’s door is opened while the lights are turned on. → Turn the lights off.

Warning message	Details/Actions
  (Flashes) (If equipped)	Indicates that the moon roof is not fully closed (with the engine switch off, and the driver's door open). A buzzer also sounds. → Close the moon roof.
 (If equipped)	Indicates that the Crawl Control is not available. → Select the four-wheel drive control switch in "4L" and shift the shift lever to D or R.
 (If equipped)	Indicates that the Crawl Control is not available. → Confirm the operating conditions of Crawl Control. (→P. 259)
  (U.S.A. only)	Indicates that all maintenance according to the driven distance on the maintenance schedule* should be performed soon. Comes on approximately 4500 miles (7200 km) after the message has been reset. → If necessary, perform maintenance.

Warning message	Details/Actions
  (U.S.A. only)	Indicates that all maintenance is required to correspond to the driven distance on the maintenance schedule*2. Comes on approximately 5000 miles (8000 km) after the message has been reset. (The indicator will not work properly unless the message has been reset.) → Perform the necessary maintenance. Please reset the message after the maintenance is performed. (→P. 441)
 (U.S.A. only)	Indicates that the system fails to reset. A buzzer also sounds. → Resetting the maintenance data again. (→P. 441)
 (If equipped)	Indicates that the transfer mode needs to be changed to "4L". → Turn the front-wheel drive control switch to "4L".
 (If equipped)	Indicates that the VSC and active traction control cannot be disabled while Multi-terrain Select is operating. → While the Multi-terrain Select is in use, VSC and active traction control cannot be turned off.
 (If equipped)	Indicates that the Multi-terrain Select cannot be operated because the VSC and/or 4WD system may be malfunctioning. → Contact your Toyota dealer.

Warning message	Details/Actions
 (If equipped)	Indicates that the Multi-terrain Select is canceled while in use. A buzzer also sounds. → Use the Multi-terrain Select under the proper operating conditions. (→P. 255)
 (If equipped)	Indicates that the Multi-terrain Select cannot be operated because Crawl Control is operating. → Turn Crawl Control off. (→P. 259)

- *1: The buzzer sounds when Multi-terrain Select or active traction control is equipped.
- *2: Refer to the separate “Scheduled Maintenance Guide” or “Owner’s Manual Supplement” for the maintenance interval applicable to your vehicle.

■ Conditions that the tire pressure warning system may not function properly (vehicles with the tire pressure warning system)

→P. 468

■ Warning buzzer

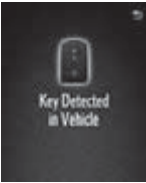
→P. 516

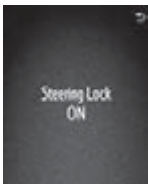
Have the malfunction repaired immediately. (vehicles with a smart key system)

After taking the specified steps to correct the suspected problem, check that the warning message and light go off.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Contin-uous	—	  (Flashes)	The driver's door was opened when the shift lever was not in P and the engine switch was not turned off. → Shift the shift lever to P.
Contin-uous	Contin-uous	  (Displayed alternately)  (Flashes)	The driver's door was opened and closed while the elec-tronic key was not in the vehi-cle, the shift lever was not in P and the engine switch was not turned off. → Shift the shift lever to P. → Bring the electronic key back into the vehicle.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	3 times	  (Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the engine switch was not turned off. → Turn the engine switch off. → Bring the electronic key back into the vehicle. The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the engine switch was in a mode other than off. → Bring the electronic key back into the vehicle.
Once	Continuous	  (Displayed alternately)  (Flashes)	An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the engine switch off when the shift lever was in P. → Turn the engine switch off and lock the doors again.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	  (Flashes)	The electronic key is not detected when an attempt is made to start the engine. → Start the engine with the electronic key present.
9 times	—	  (Flashes)	An attempt was made to drive when the electronic key was not inside the vehicle. → Confirm that the electronic key is inside the vehicle.
—	Continuous	  (Flashes)	An attempt was made to lock the doors using the smart key system while the electronic key was still inside the vehicle. → Retrieve the electronic key from the vehicle and lock the doors again.
Once	Continuous	  (Flashes)	An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position, then closing the door with the electronic key still inside the vehicle. → Retrieve the electronic key from the vehicle and lock the doors again.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	 	The electronic key has a low battery. → Replace the electronic key battery. (→P. 481)
Once	—	  (Flashes)	The steering lock could not be released within 3 seconds of the engine switch being pressed. → Press the engine switch while depressing the brake pedal and moving the steering wheel left and right.
Once	—		• When the doors were unlocked with the mechanical key and then the engine switch was pressed, the electronic key could not be detected in the vehicle. • The electronic key could not be detected in the vehicle even after the engine switch was pressed two consecutive times. → Touch the electronic key to the engine switch while depressing the brake pedal.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—		Indicates that: • With the engine switch off, the doors were unlocked and then the driver's door was opened and closed • The engine switch was turned to ACCESSORY mode without starting the engine → Press the engine switch while depressing the brake pedal.
Once	—	  (Flashes)	The engine switch has been turned off with the shift lever in a position other than P. → Shift the shift lever to P.
Once	—	  (Flashes)	After the engine switch has been turned off with the shift lever in a position other than P, the shift lever has been shifted to P. → Turn the engine switch off.
—	—		Power was turned off due to the automatic power off function. → Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.

Interior buzzer	Exterior buzzer	Warning message	Details/Actions
Once	—	  (Flashes)	During a engine starting procedure in the event that the electronic key was not functioning properly (→P. 555), the engine switch was touched with the electronic key. → Press the engine switch within 10 seconds of the buzzer sounding.

■ **Warning buzzer**

→P. 516