

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. The settings of these features can be changed using the multi-information display, the multi-media system, or at your Toyota dealer.



Customizing vehicle features

■ Changing by using the multimedia system

- 1 Press the “APPS” button.

► Entune Audio Plus

► Entune Premium Audio

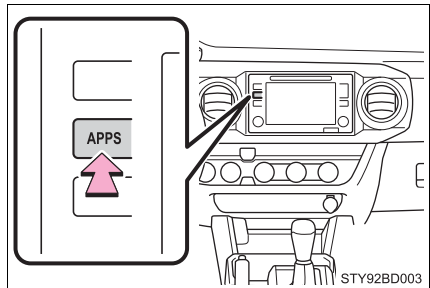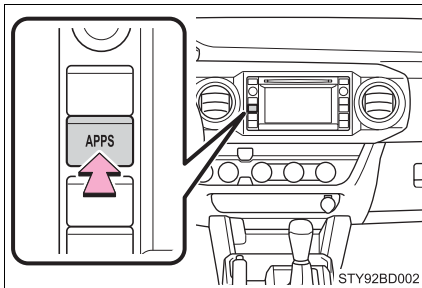

- 2 Select “Setup” on the “Apps” screen.
- 3 Select “Vehicle” on the “Setup” screen.
- 4 Select “Vehicle Customization” on the “Vehicle Settings” screen. “Vehicle Customization” screen will appear.
- 5 Choose a category displayed on the screen to display the settings.

- 6
- Select the setting to be changed. Change each setting.

For items that can be enabled/disabled, and for items with an operating time that can be changed, select “On” or “Off”, or select the desired operating time.

For items with sensor sensitivity that can be changed, select “+” or “-” to choose the desired level, then select “OK”.
- 7
- A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

■ **Changing by using the multi-information display**

- 1
- Select  using the meter control switch.
- 2
- Select an item and then set it with the center button.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- 1
- Settings that can be changed using the multi-information display.
- 2
- Settings that can be changed using the multimedia system.
- 3
- Settings that can be changed by your Toyota dealer.

Definition of symbols: O = Available, — = Not available

■ **Gauges, meters and multi-information display*1 (→P. 88, 93)**

Function*2	Default setting	Customized setting	①	②	③
Language*3	English	French	O	O	O
		Spanish			
Units*3	miles (MPG US)	km (km/L)	O	O	O
		km (L/100 km)			
		miles (MPG Imperial)			

Function*2	Default setting	Customized setting	①	②	③
Drive information 1	Digital speedometer	6 of the following items: →P. 94	O	—	O
	Distance to empty				
Drive information 2	Average fuel economy (after reset)		O	—	O
	Current fuel economy				
Drive information 3	Trip distance (after reset)		O	—	O
	Trip elapsed time				
Pop-up display	On	Off	O	—	O
Accent color	Light blue	Blue	O	O	O
		Orange			
		Yellow			
Speed limit display*4	On with the speed limit caution indicator (yellow) enabled	On with the speed limit caution indicator (yellow) not enabled	O	—	O
		Off			
Maintenance system initialization*5	Off	On	O	—	O

*1: Vehicles with a multi-information display

*2: For details about each function: →P. 96

*3: The default setting varies according to country.

*4: Speed limit display may not be available for some regions.

*5: For U.S.A. only

■ Door lock (→P. 109, 555)

Function	Default setting	Customized setting	①	②	③
Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	—	—	O
Speed-detecting auto-automatic door lock function*	On	Off	—	O	O
Shifting gears to position other than P locks all doors*	Off	On	—	O	O
Shifting gears to P unlocks all doors*	On	Off	—	O	O
Opening the driver's door unlocks all doors*	Off	On	—	O	O

*: Vehicles with an automatic transmission

■ Smart key system and wireless remote control* (→P. 109)

Function	Default setting	Customized setting	①	②	③
Operation signal (Emergency flashers)	On	Off	—	O	O
Operation signal (Buzzer)	On	Off	—	—	O
Operation buzzer volume	Level 5	Off to level 7	O	O	O
Time elapsed before auto-automatic door lock function is activated if door is not opened after being unlocked	60 seconds	Off	—	O	O
		30 seconds			
		120 seconds			
Open door warning buzzer	On	Off	—	—	O

*: If equipped

■ Smart key system* (→P. 109, 121)

Function	Default setting	Customized setting	①	②	③
Smart key system	On	Off	—	—	O
Number of permissible times of continuous smart lock	Twice	Unlimited	—	—	O

*: If equipped

■ Wireless remote control* (→P. 103, 109)

Function	Default setting	Customized setting	①	②	③
Wireless remote control	On	Off	—	—	O
Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	—	O	O
Automatic door lock function to be activated if door is not opened after being unlocked	On	Off	—	—	O
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	0 seconds	—	O	O
		30 seconds			
		120 seconds			
Operation signal (Emergency flashers)	On	Off	—	O	O
Operation signal (Buzzer)	On	Off	—	—	O
Panic function	On	Off	—	—	O
Open door reminder buzzer (When locking the vehicle)	On	Off	—	—	O

*: If equipped

■ Automatic light off system* (→P. 203)

Function	Default setting	Customized setting	①	②	③
Light sensor sensitivity	Level 3	Level 1 to 5	—	O	O
Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds	—	O	O
		60 seconds			
		90 seconds			

*: If equipped

■ Illumination (→P. 385)

Function	Default setting	Customized setting	①	②	③
Time elapsed before lights turn off	15 seconds	7.5 seconds	—	O	O
		30 seconds			
Operation after the engine is off	On	Off	—	—	O
Operation when the doors are unlocked	On	Off	—	—	O
Operation when you approach the vehicle with the electronic key on your person*	On	Off	—	—	O

*: Vehicles with a smart key system

■ Intuitive parking assist* (→P. 220)

Function	Default setting	Customized setting	①	②	③
Detection distance of the rear center sensor	Far	Near	—	O	O
Buzzer Volume	Level 3	Level 1 to 5	—	O	O
Display setting	All sensors displayed	Display off	—	O	O

*: If equipped

■ **Seat Belt Reminder Buzzer (→P. 512)**

Function	Default setting	Customized setting	①	②	③
Vehicle speed linked seat belt reminder buzzer	On	Off	—	—	0

■ **Vehicle customization**

- When the speed-detecting automatic door lock function and shift position linked door locking function (shifting gears to a position other than P locks all doors) are both on, the door lock operates as follows.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
 - If the vehicle is started with all the doors locked, the speed-detecting automatic door lock function would not operate.
 - If the vehicle is started with any the door unlocked, the speed-detecting automatic door lock function will operate.
- When the doors remain closed after unlocking the doors and the automatic door lock function (Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked) activates, the signals will be generated in accordance with operation signal (buzzers) and the operation signal (emergency flashers) settings.

 WARNING

■ **During customization**

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or serious health hazard.

 NOTICE

■ **During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.

Items to initialize

The following items must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Moon roof*1	• After reconnecting or changing the battery • After changing a fuse	P. 152
Maintenance required reminder light (vehicles without a multi-information display) or message indicating maintenance is required (vehicles with a multi-information display)*2	• After the maintenance is performed	P. 441
Tire pressure warning system*1	• When rotating the tires. • When changing the tire size.	P. 464

*1: If equipped

*2: For U.S.A. only