

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM0000022AC00DX
Title: 1GR-FE STARTING: STARTER: REMOVAL (2010 4Runner)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected [INFO](#) .

2. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY LH


(a) Remove the exhaust manifold sub-assembly LH [INFO](#) .

3. REMOVE STARTER COVER

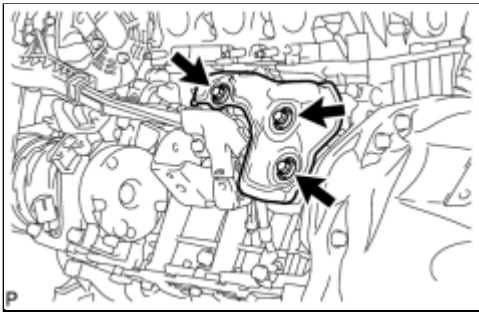

(a) Remove the 3 bolts and starter cover.

4. REMOVE STARTER ASSEMBLY

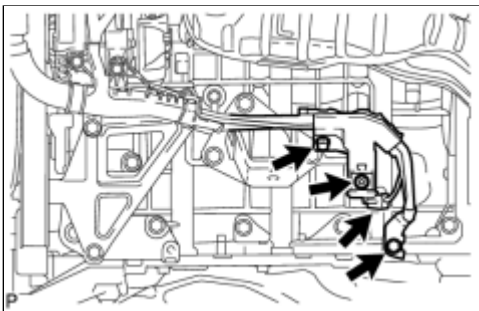



(a) Remove the bolt and disconnect the ground wire.

(b) Disconnect the starter connector.

(c) Open the terminal cap.

(d) Remove the nut and bolt, and then disconnect the starter wire.

(e) Remove the 2 bolts and starter.

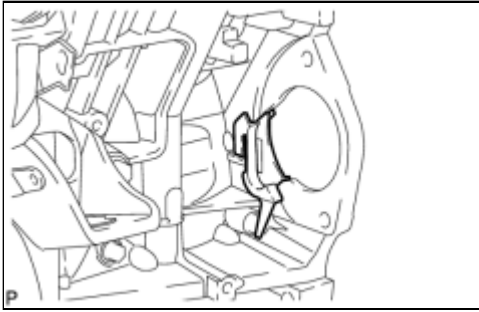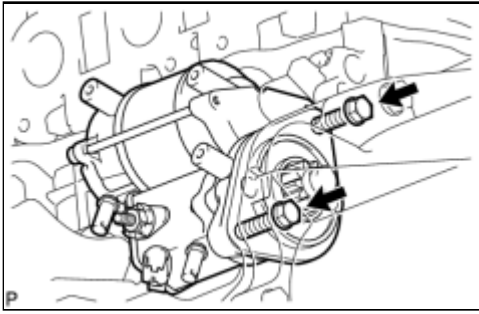

5. REMOVE FLYWHEEL HOUSING SIDE COVER

