


H POWER SOURCE (Current Flow Chart)



The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

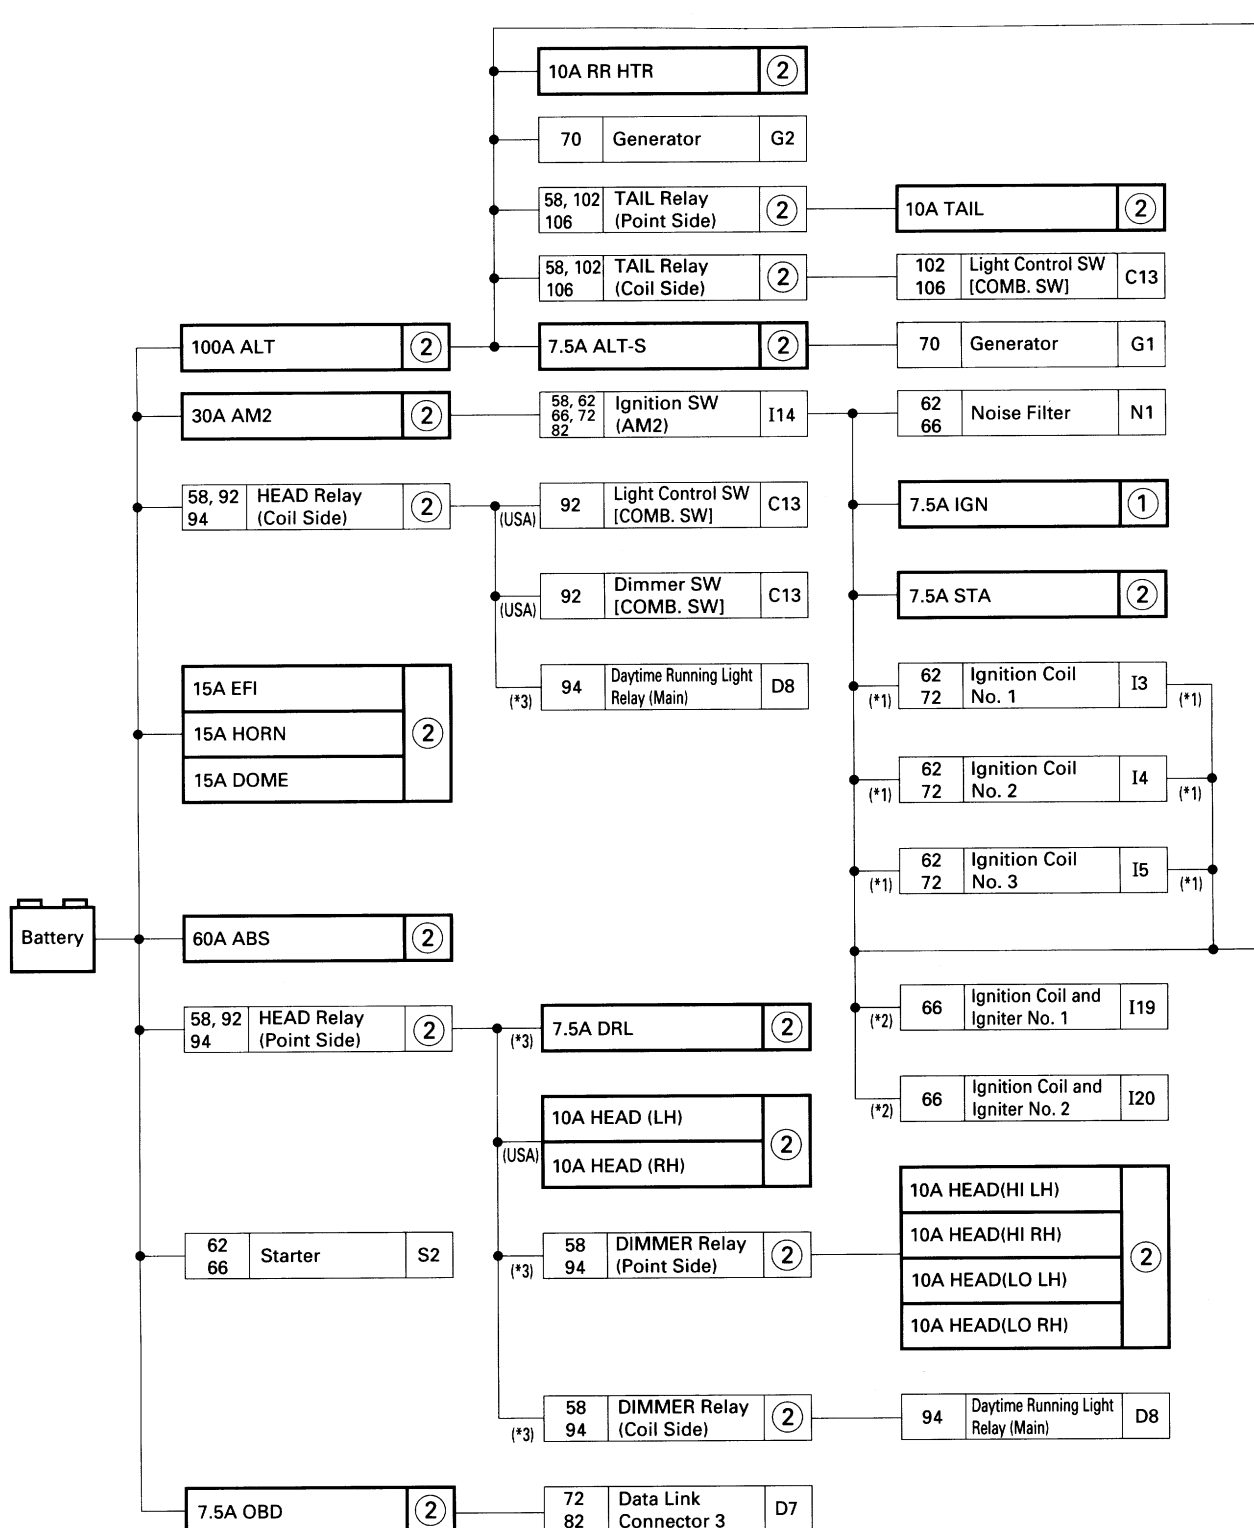


[LOCATION] ①: Driver Side J/B(See page 22) ②: Engine Room R/B(See page 20,21)

*1: 5VZ-FE
 *2: 3RZ-FE
 *3: Canada

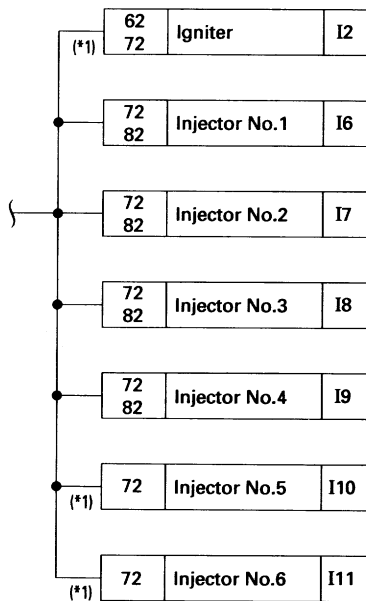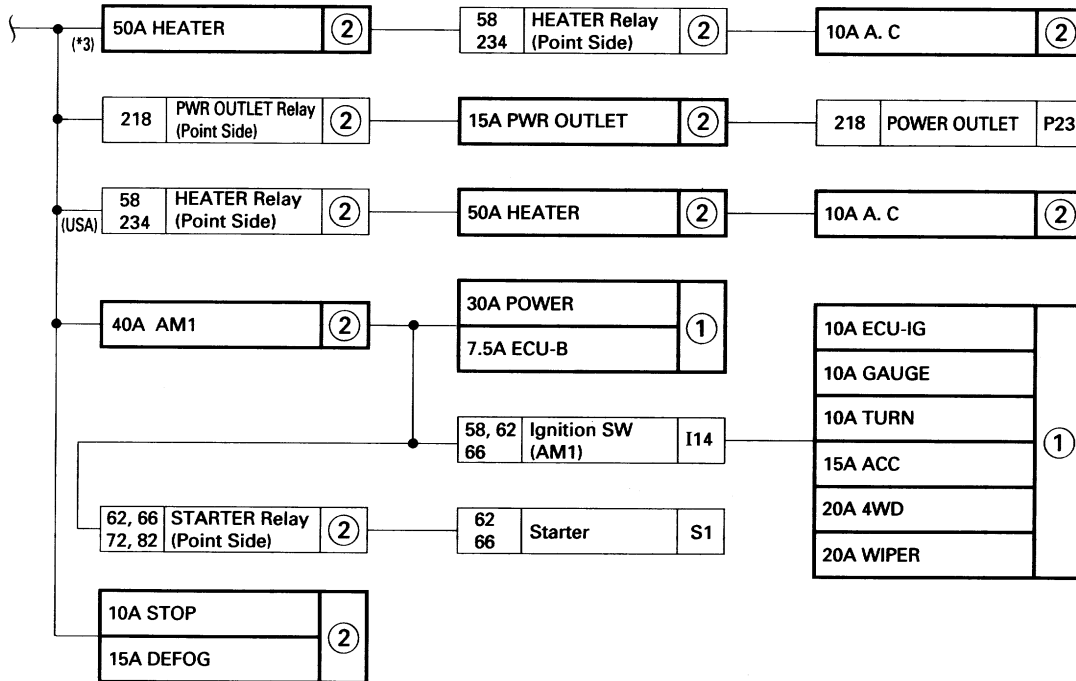

* These are the page numbers of the first psge on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

Example

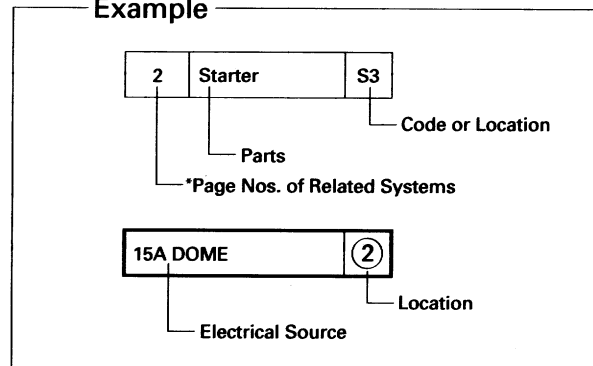

H POWER SOURCE (Current Flow Chart)

Location	•Paga Nos. of Related Systems		234	148	148	148	158 164	234	106 234	148	148	148 158 164 168	164	153	106	224 226	116	228	106 204	106	106	234	234	106 204	
	Parts																								
Code or Location																									
CB or Fuse		A/C Dual Pressure SW	ABS Actuator	ABS Relay	ABS Relay	ADD Indicator SW	A/C Amplifier	A/C SW	ABS Deceleration Sensor	ABS ECU	ADD Control Relay	Airbag Sensor Assembly	Ashtray Illumination	Auto Antenna Control Relay	Back-Up Light SW	Brake Fluid Level Warning SW	Back Door Lock Control SW	Back Window Control SW	Back Window Lock SW	Blower Motor	Blower Resistor	Blower SW			
		A1	A5	A6	A7	A10	A12	A13	A15	A16	A17	A18	A19	A22	A23	B1	B2	B3	B4	B5	B6	B7	B8		
①	7.5A	ECU-B											●												
	7.5A	IGN											●												
	10A	ECU-IG							●		●				●										
	10A	GAUGE		●		●	●			●	●					●	●						●		
	10A	TURN																							
	15A	ACC											●		●										
	20A	4WD											●												
	20A	WIPER																							
	30A	POWER																●							
②	7.5A	ALT-S																							
	7.5A	DRL																							
	7.5A	OBD																							
	7.5A	STA																							
	10A	A.C	●					●	●																
	10A	HEAD (LH)(USA)																							
	10A	HEAD (RH)(USA)																							
	10A	HEAD (HI LH)(Canada)																							
	10A	HEAD (HI RH)(Canada)																							
	10A	HEAD (LO LH)(Canada)																							
	10A	HEAD (LO RH)(Canada)																							
	10A	RR HTR																							
	10A	STOP										●													
	10A	TAIL							●					●				●	●	●			●		
	15A	DEFOG													●										
	15A	DOME													●										
	15A	EFI																							
	15A	HORN																							
	50A	HEATER		●	●	●					●										●	●	●		
	60A	ABS		●	●	●					●														

- * There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system,not necessarily on the page indicated here.

↓
[LOCATION] ①: Driver Side J/B(See page 22) ②: Engine Room R/B(See page 20,21)

49

H POWER SOURCE (Current Flow Chart)

Location			•Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		194	198	136 142	128 142	120 136	120 128 158 164	72, 82 136, 148 153	94	158 164	120 128 158 164	94	94	234	94	94	98	98	98	98	98	98
											Front Wiper and Washer SW [Comb. SW]	Rear Wiper and Washer SW [Comb. SW]	Cruise Control Clutch SW	Cruise Control ECU	Cruise Control Actuator with ECU	Combination Meter	Data Link Connector 1	Daytime Running Light Resistor	Detection SW (Transfer 4WD Position)	Detection SW (Transfer Neutral Position)	Daytime Running Light Relay (Main)	Daytime Running Light Relay No.4	Defroster Mode SW	Diode (Daytime Running Light No.1)	Diode (Daytime Running Light No.2)	Diode (Door Courtesy)	Diode (Power Window)	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH
											C15	C16	C17	C18	C19	D1	D2	D3	D5	D8	D9	D10	D12	D13	D14	D15	D16	D17	D18	D19	
①	7.5A	ECU-B							●																						
	7.5A	IGN																													
	10A	ECU-IG				●	●																								
	10A	GAUGE			●	●	●	●	●		●	●	●																		
	10A	TURN																													
	15A	ACC																													
	20A	4WD											●																		
	20A	WIPER	●	●																											
	30A	POWER																													
②	7.5A	ALT-S																													
	7.5A	DRL																		●	●		●	●							
	7.5A	OBD																													
	7.5A	STA																													
	10A	A.C																				●									
	10A	HEAD (LH)(USA)																													
	10A	HEAD (RH)(USA)																													
	10A	HEAD (HI LH)(Canada)										●										●									
	10A	HEAD (HI RH)(Canada)										●										●									
	10A	HEAD (LO LH)(Canada)										●										●									
	10A	HEAD (LO RH)(Canada)										●										●									
	10A	RR HTR																													
	10A	STOP					●	●																							
	10A	TAIL																													
	15A	DEFOG																													
	15A	DOME																		●				●	●	●	●	●	●	●	
	15A	EFI									●																				
	15A	HORN																													
	50A	HEATER																													
	60A	ABS																													

- There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ①: Driver Side J/B(See page 22) ②: Engine Room R/B(See page 20,21)

51

H POWER SOURCE (Current Flow Chart)

Location		*Page Nos. of Related Systems	Parts	Code or Location	CB or Fuse	72 82 228	70	106	92 94	92 94	92 94	92 94	186	186	106 110	114	72 82	228	212	98	98	102	72 82	176	176	176
						F10	G1	G3	H1	H2	H3	H4	H5	H6	H7	H8	I1	I2	I15	I17	I18	L1	M1	M2	M3	M4
①	7.5A ECU-B																									
	7.5A IGN						●																			
	10A ECU-IG																									
	10A GAUGE					●	●											●	●							
	10A TURN														●											
	15A ACC																									
	20A 4WD																									
	20A WIPER																									
	30A POWER																						●	●	●	
②	7.5A ALT-S																									
	7.5A DRL																									
	7.5A OBD																									
	7.5A STA																									
	10A A.C																									
	10A HEAD (LH)(USA)								●																	
	10A HEAD (RH)(USA)									●																
	10A HEAD (HI LH)(Canada)								●																	
	10A HEAD (HI RH)(Canada)									●																
	10A HEAD (LO LH)(Canada)								●																	
	10A HEAD (LO RH)(Canada)									●																
	10A RR HTR																									
	10A STOP															●										
	10A TAIL							●							●							●				
	15A DEFOG																									
	15A DOME																		●	●						
	15A EFI					●					●	●					●					●				
	15A HORN												●	●	●											
	50A HEATER																									
	60A ABS																									

- * There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

【LOCATION】 ①: Driver Side J/B(See page 22) ②: Engine Room R/B(See page 20,21)

53

H POWER SOURCE (Current Flow Chart)

[illegible]

- There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

【LOCATION】 ①: Driver Side J/B(See page 22) ②: Engine Room R/B(See page 20,21)

98	V9	Vanity Light RH	98, 102 118, 176 180, 188 212, 232
194	W1	Washer Motor (USA)	176 180
194, 228	W1	Washer Motor and Washer Level Warning SW (Canada)	110
228	W2	Water Temp. Sender	72 82 120 128
206	①	Defogger Relay (Coil Side)	72 82 120 128
82 206		Defogger Relay (Point Side)	234
186		Horn Relay	62 66
		Integration Relay	
	②	Power Relay (Point Side)	
		Turn Signal Flasher	
		EFI Relay (Coil Side)	
		EFI Relay (Point Side)	
		HEATER Relay (Coil Side)	
		STARTER Relay (Coil Side)	

