


H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.



The next page and following pages show the parts to which each electrical source outputs current.

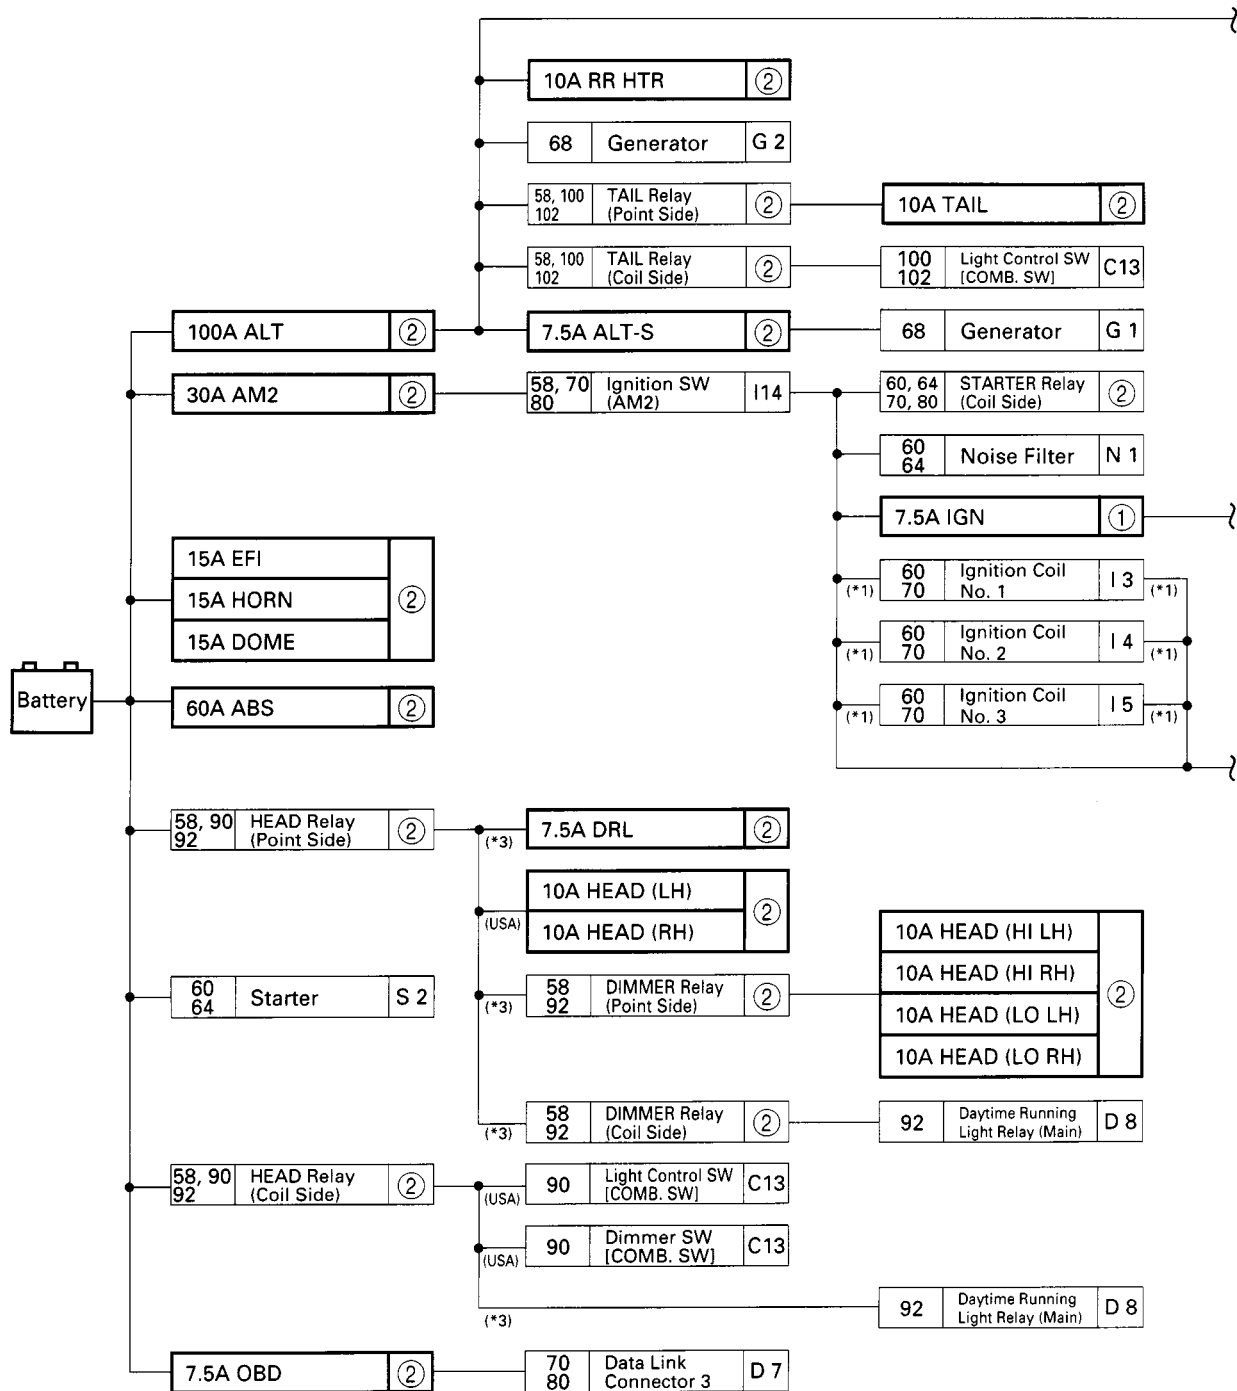


[LOCATION] ① : Driver Side J/B (See page 22)

② : Engine Room R/B (See page 20, 21)

*1: 5VZ-FE
 *2: 3RZ-FE
 *3: Canada

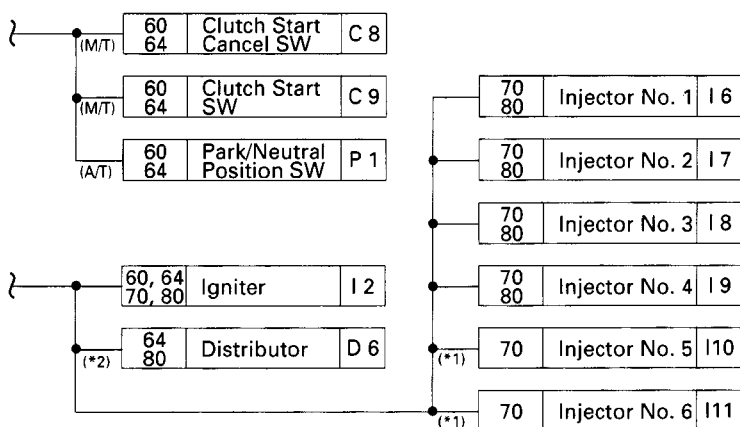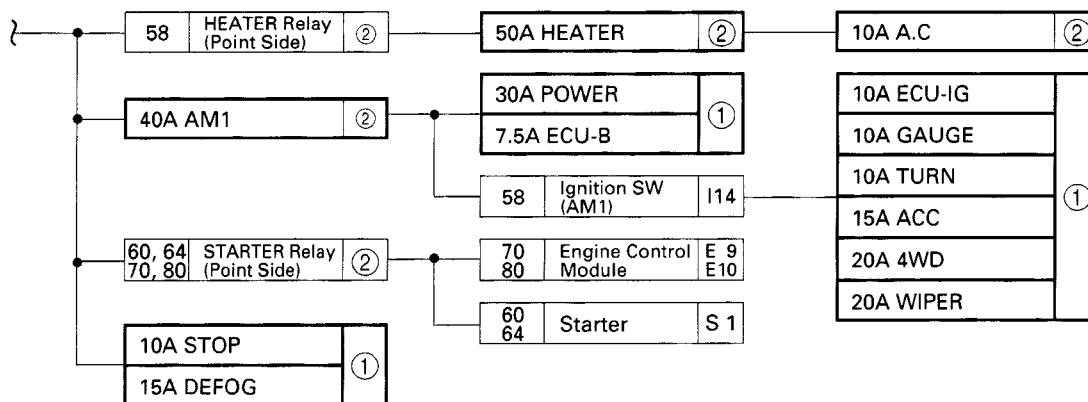

* There are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

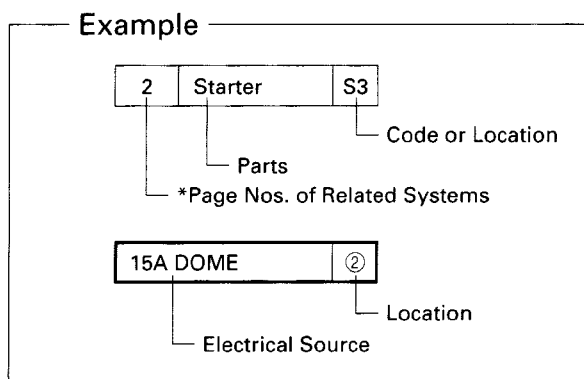

H POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 22)

② : Engine Room R/B (See page 20, 21)

96	166 180	174	174	190	102	70 80	190	60 64	60 64	114, 120 132, 142 147, 150 200	126	187	114, 120 132, 147 150, 200	70 80	90	106	68	147 200	102	96	137	90	92	106	165	171
B 9	B10	B11	B12	C 4	C 5	C 6	C 7	C 8	C 9	C10			C11					C12				C13		C14	C15	
Back Door Courtesy SW	Back Door Lock Motor	Back Window Limit SW	Back Window Motor	Cigarette Lighter	Cigarette Lighter Illumination	Circuit Opening Relay	Clock	Clutch Start Cancel SW	Clutch Start SW	Combination Meter	Cruise Control Indicator Light [Comb. Meter]	Seat Belt Warning Light [Comb. Meter]	Combination Meter	Malfunction Indicator Lamp [Comb. Meter]	High Beam Indicator Light [Comb. Meter]	Turn Signal Indicator Light [Comb. Meter]	Charge Warning Light [Comb. Meter]	Combination Meter	Meter Illumination [Comb. Meter]	Open Door Warning Light [Comb. Meter]	SRS Warning Ligh [Comb. Meter]	Dimmer SW [Comb. SW]	Light Control SW [Comb. SW]	Turn Signal SW [Comb. SW]	Horn SW [Comb. SW]	Front Wiper and Washer SW [Comb. SW]

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		174	126	126	70 80 132 137	92	142 147	114 120 142 147	70 80	92	92	206	174	92	92	96	96	96 166	96	96	96	166	166
											Rear Wiper and Washer SW [Comb. SW]	Cruise Control Clutch SW	Cruise Control ECU	Data Link Connector 1	Daytime Running Light Resistor	Detection SW (Transfer 4WD Position)	Detection SW (Transfer Neutral Position)	Data Link Connector 3	Daytime Running Light Relay (Main)	Daytime Running Light Relay No. 4	Defroster Mode SW	Diode (Back Window)	Diode (Daytime Running Light Relay No. 1)	Diode (Daytime Running Light Relay No. 2)	Diode (Door Courtesy)	Diode (Power Window)	Door Courtesy SW Front LH	Door Courtesy SW Front RH	Door Courtesy SW Rear LH	Door Courtesy SW Rear RH	Door Key Lock and Unlock SW Front LH	Door Key Lock and Unlock SW Front RH
			C15	C16	C17	D 1	D 2	D 3	D 5	D 7	D 8	D 9	D10	D11	D12	D13	D14	D15	D16	D17	D18	D19	D20	D21								
①	7.5A	ECU-B				●																										
	7.5A	IGN																														
	10A	ECU-IG			●																											
	10A	GAUGE		●	●	●		●	●		●																					
	10A	TURN																														
	15A	ACC																														
	20A	4WD						●																								
	20A	WIPER	●																													
	30A	POWER													●					●				●					●	●		
②	7.5A	ALT-S																														
	7.5A	DRL														●	●															
	7.5A	OBD									●																					
	10A	A.C											●																			
	10A	HEAD (LH)																														
	10A	HEAD (RH)																														
	10A	HEAD (HI LH)						●																								
	10A	HEAD (HI RH)						●																								
	10A	HEAD (LO LH)						●																								
	10A	HEAD (LO RH)						●																								
	10A	RR HTR																														
	10A	STOP			●																											
	10A	TAIL																														
	15A	DEFOG																														
	15A	DOME			●																					●		●				
	15A	EFI				●													●	●												
	15A	HORN																														
	50A	HEATER																														
	60A	ABS																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 22)

② : Engine Room R/B (See page 20, 21)

[illegible]

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	165	165	102 106	108	70 80	100 204	96	96	100	70 80	156	156	156	200	110, 114 120, 126 142, 147	200	96	160	160	160	
			Parts	Code or Location	CB or Fuse	H 5	H 6	H 7	H 8	I 1	I 15	I 17	I 18	L 1	M 1	M 2	M 3	M 4	O 1	P 1	P 2	P 3	P 4	P 5
①	7.5A	ECU-B																						
	7.5A	IGN																						
	10A	ECU-IG																						
	10A	GAUGE							●								●	●	●					
	10A	TURN				●																		
	15A	ACC																						
	20A	4WD																						
	20A	WIPER																						
	30A	POWER													●	●	●					●	●	●
②	7.5A	ALT-S																						
	7.5A	DRL																						
	7.5A	OBD																						
	10A	A.C																						
	10A	HEAD (LH)																						
	10A	HEAD (RH)																						
	10A	HEAD (HI LH)																						
	10A	HEAD (HI RH)																						
	10A	HEAD (LO LH)																						
	10A	HEAD (LO RH)																						
	10A	RR HTR																						
	10A	STOP					●						●											
	10A	TAIL				●			●			●												
	15A	DEFOG								●	●									●				
	15A	DOME																						
	15A	EFI						●						●										
	15A	HORN	●	●	●																			
	50A	HEATER																						
	60A	ABS																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 22)

② : Engine Room R/B (See page 20, 21)

H POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : Driver Side J/B (See page 22)

② : Engine Room R/B (See page 20, 21)

	(1)	(2)
Defogger Relay (Coil Side)	●	
Defogger Relay (Point Side)		
Horn Relay		
Integration Relay	● ● ●	
Turn Signal Flasher	●	
EFI Relay (Coil Side)		●
EFI Relay (Point Side)		
HEATER Relay (Coil Side)	●	
POWER Relay (Point Side)		●