



POWER SOURCE

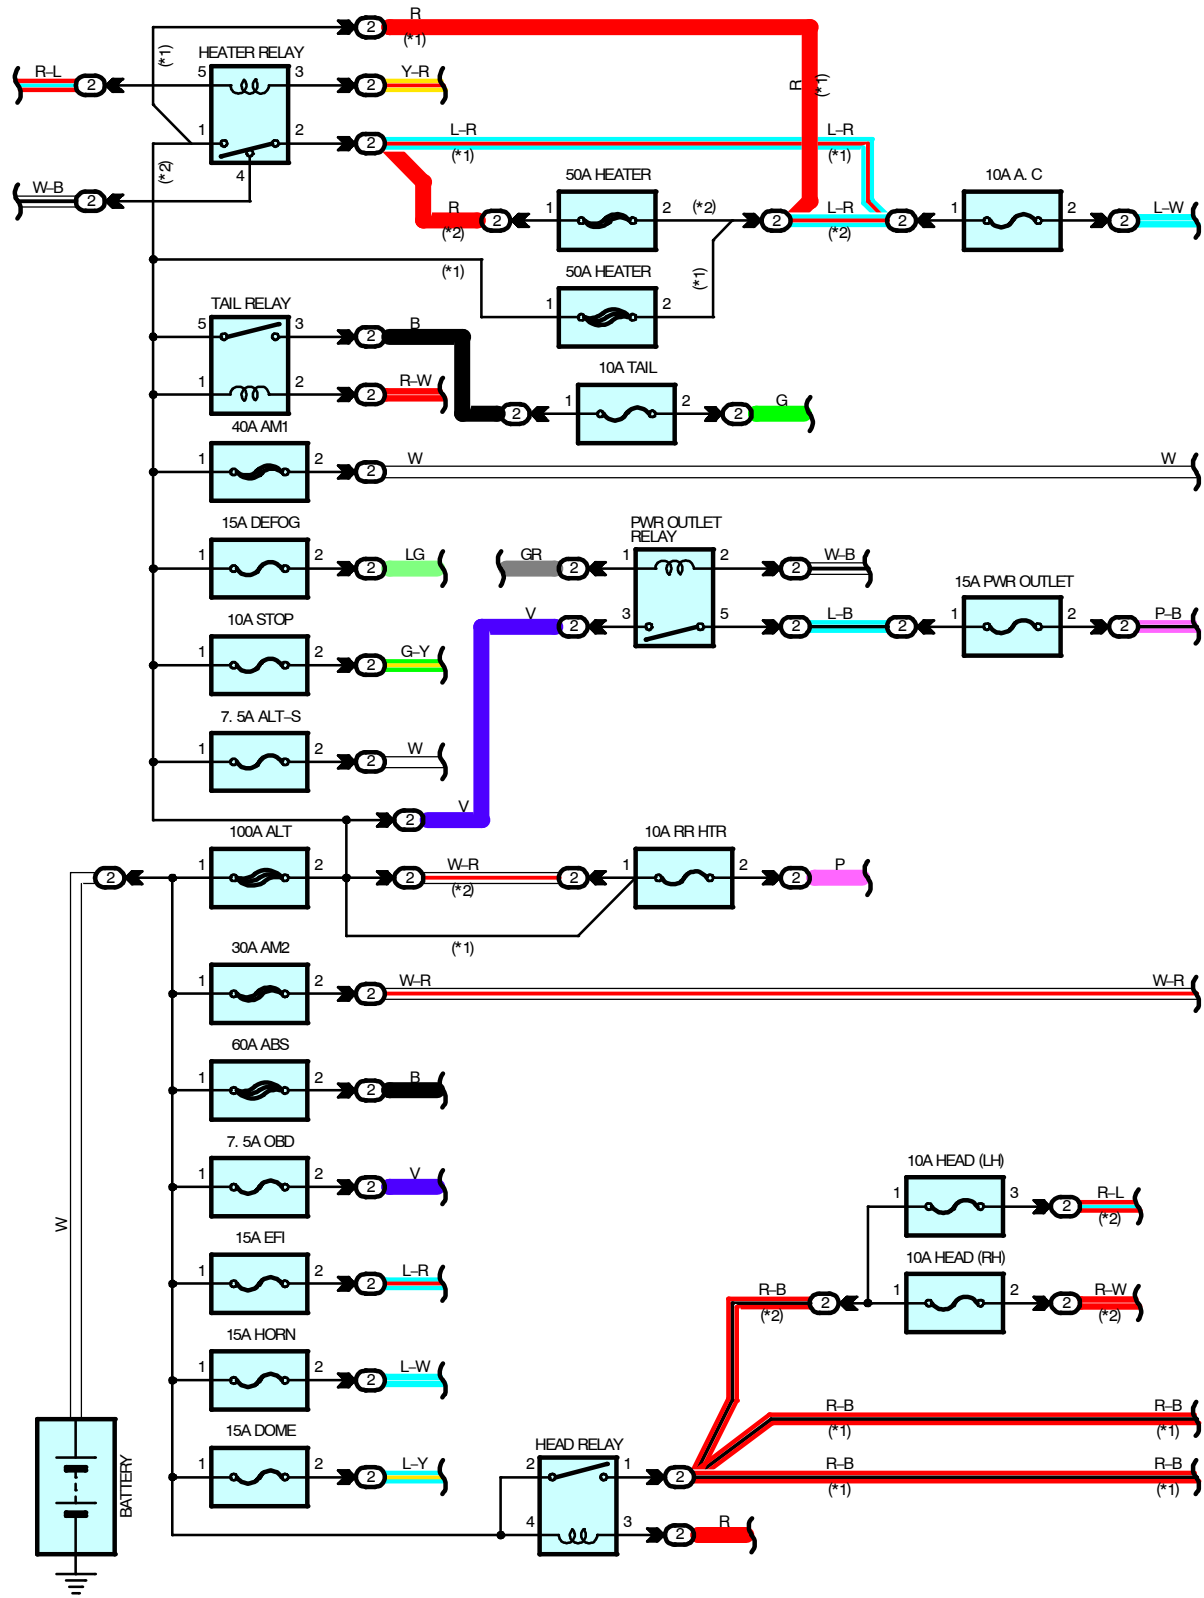

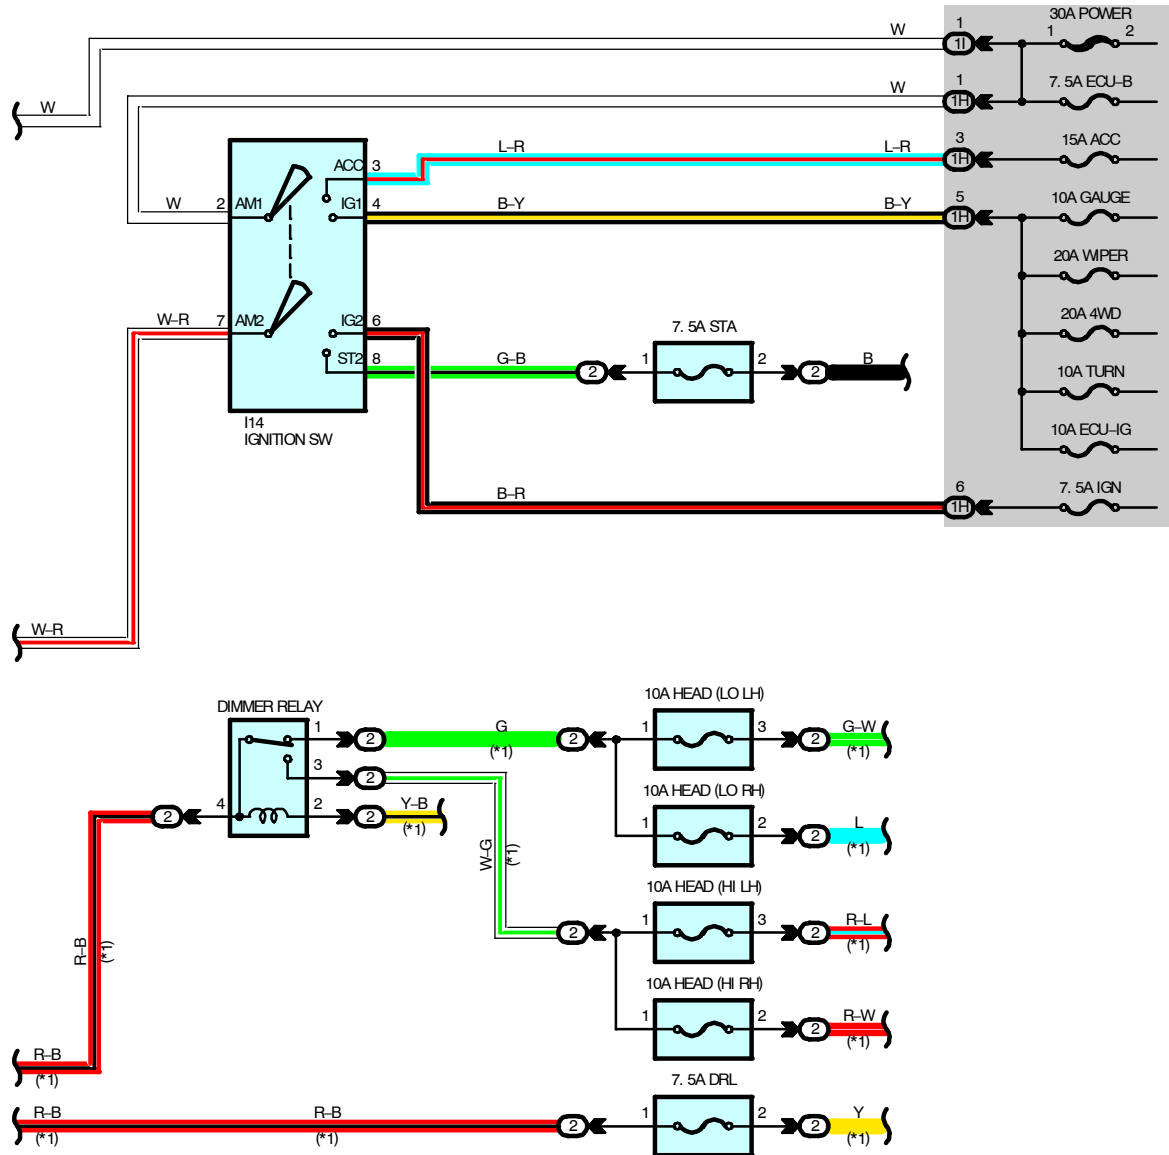

POWER SOURCE

SERVICE HINTS

HEATER RELAY [ENGINE ROOM R/B]

2-1 : Closed with ignition SW on and blower SW on

HEAD RELAY [ENGINE ROOM R/B]

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position
Closed with engine running and parking brake lever released (Canada)

I14 IGNITION SW

2-3 : Closed with ignition key at **ACC** or **ON** position
2-4 : Closed with ignition key at **ON** or **ST** position
7-6 : Closed with ignition key at **ON** or **ST** position

TAIL RELAY [ENGINE ROOM R/B]

3-5 : Closed with light control SW at **TAIL** or **HEAD** position

DIMMER RELAY [ENGINE ROOM R/B]

Changed from HEAD (LO) to HEAD (HI) with dimmer SW at **FLASH** position or with HEAD relay on and dimmer SW at **HIGH** position (Canada)

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I14	31				

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20 (USA)	Engine Room R/B (Engine Compartment Left)
	21 (Canada)	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1I		

I14

