



# Seat Heater

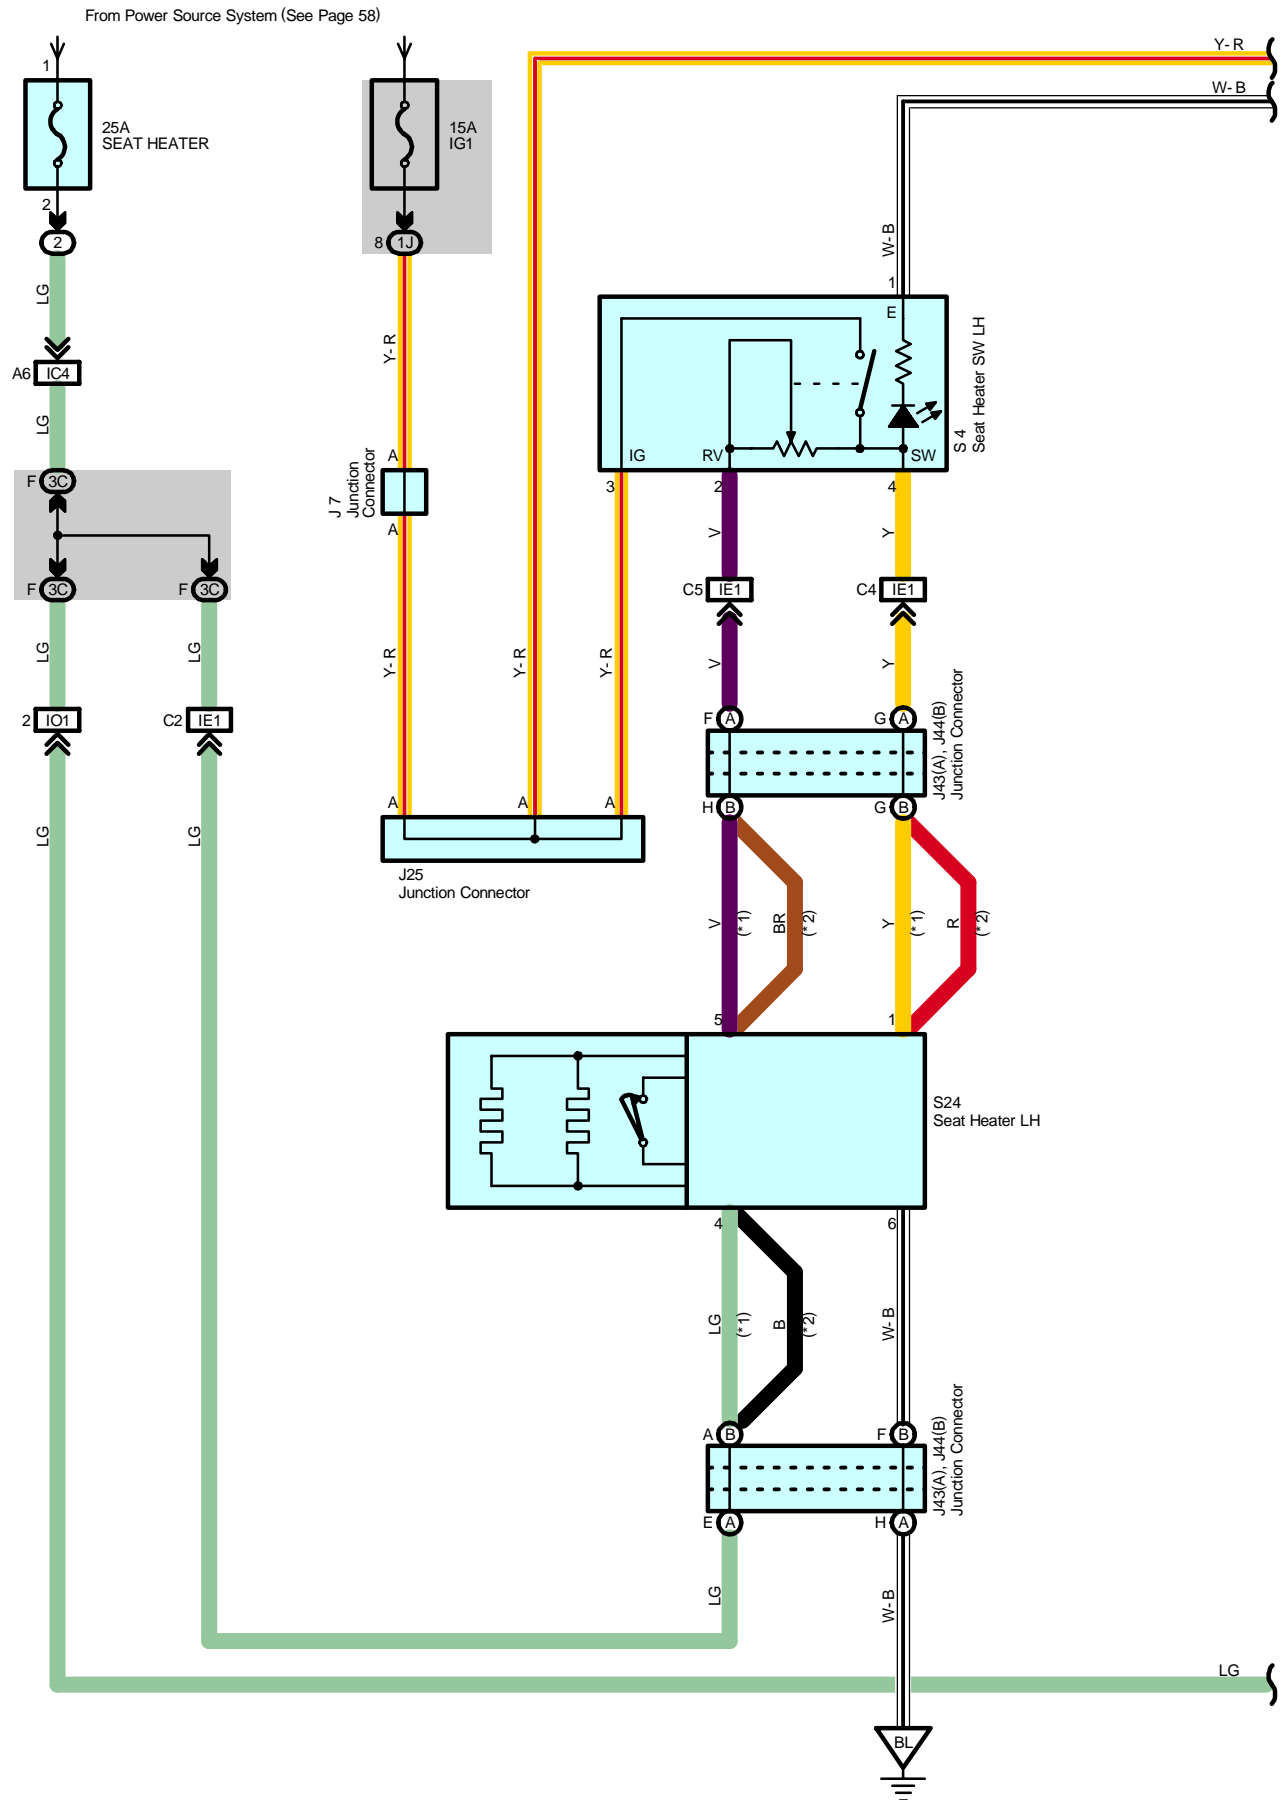

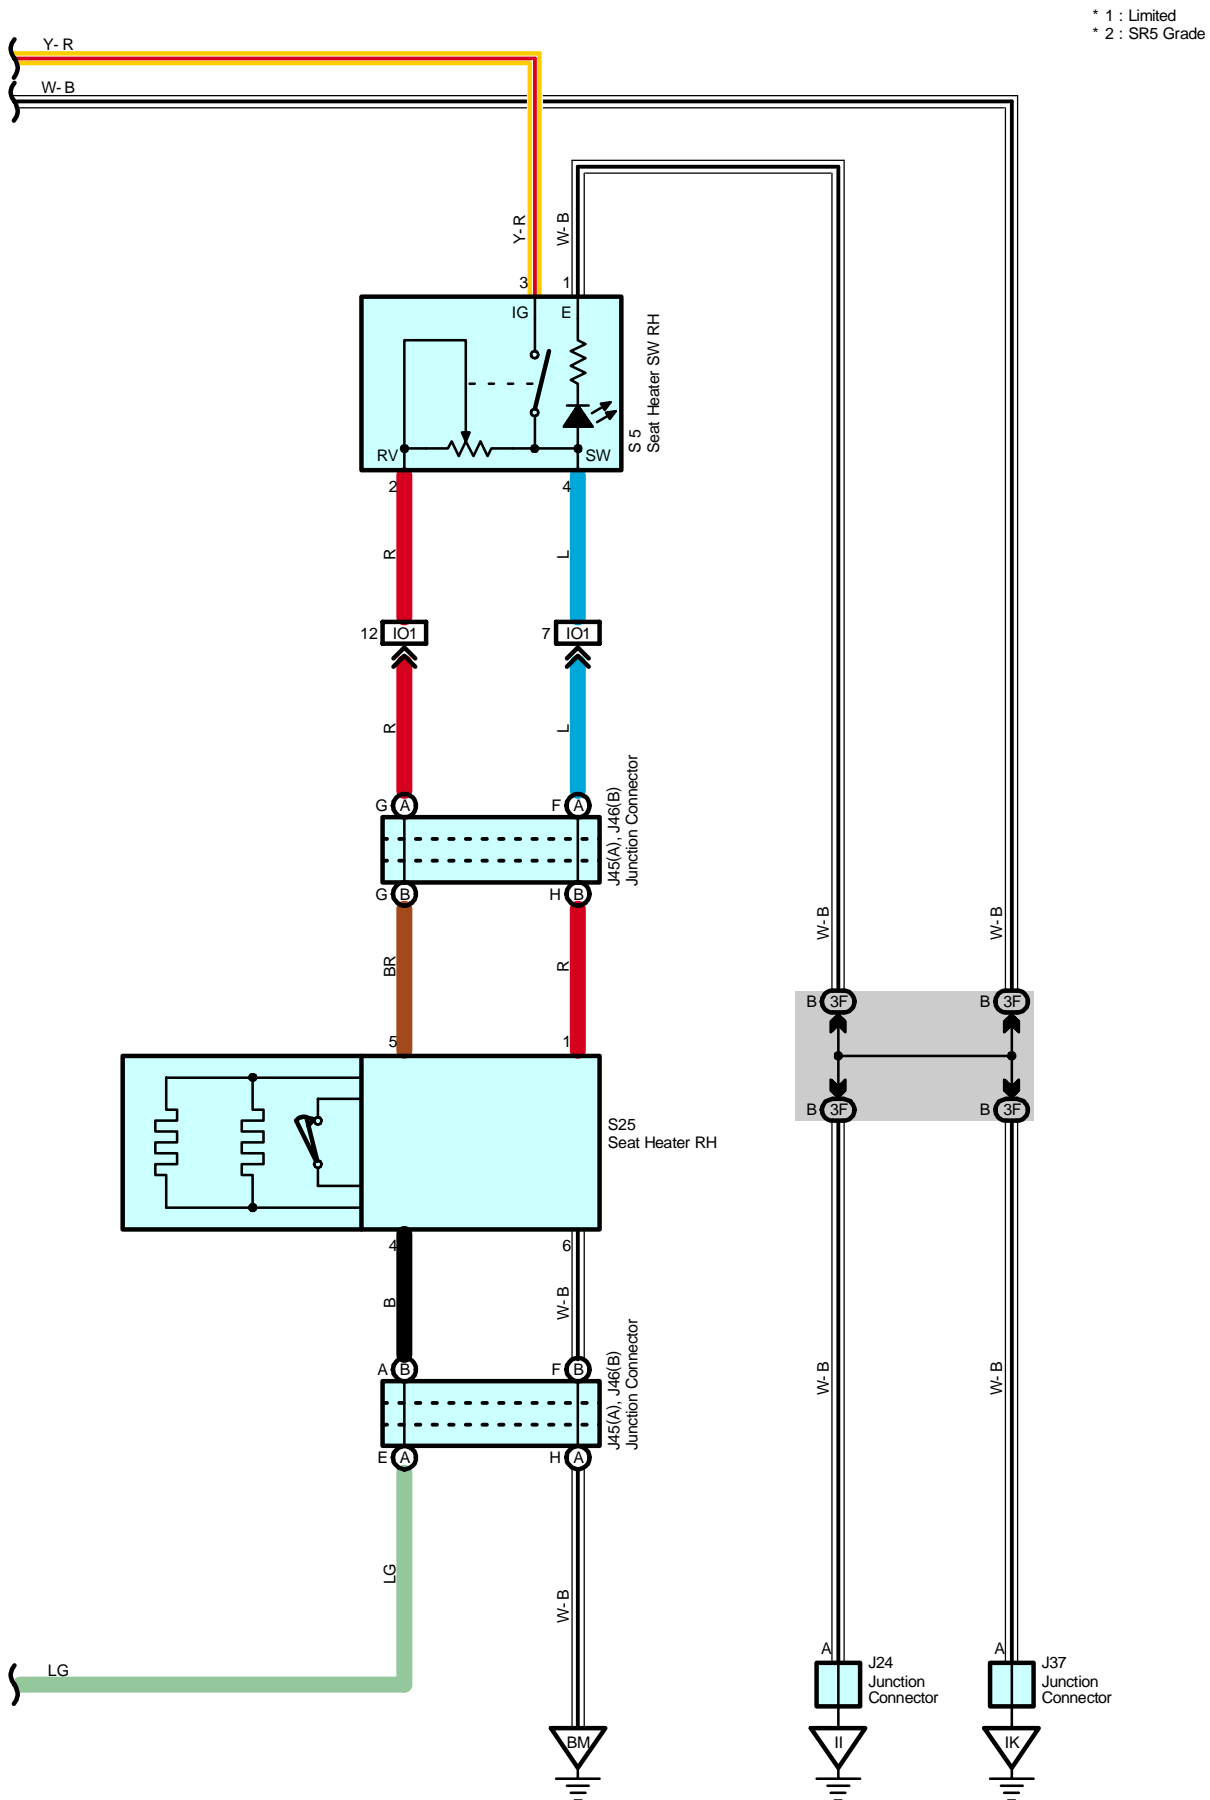

# Seat Heater

## Service Hints

### S4, S5 Seat Heater SW LH, RH

3-Ground : Approx. 12 volts with the ignition SW at ON position

1-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J7	<a href="#">38</a>	J43	A <a href="#">42</a>	S4	<a href="#">39</a>
J24	<a href="#">38</a>	J44	B <a href="#">42</a>	S5	<a href="#">39</a>
J25	<a href="#">38</a>	J45	A <a href="#">42</a>	S24	<a href="#">42</a>
J37	<a href="#">38</a>	J46	B <a href="#">42</a>	S25	<a href="#">42</a>

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	<a href="#">25</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3C	<a href="#">28</a>	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3F		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	<a href="#">48</a>	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	<a href="#">50</a>	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IO1	<a href="#">52</a>	Instrument Panel Wire and Floor Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
II	<a href="#">48</a>	Instrument Panel Brace RH
IK	<a href="#">48</a>	Right Kick Panel
BL	<a href="#">54</a>	Floor Seat Crossmember LH
BM	<a href="#">54</a>	Floor Seat Crossmember RH

