



## F RELAY LOCATIONS

---


### [Engine Compartment]

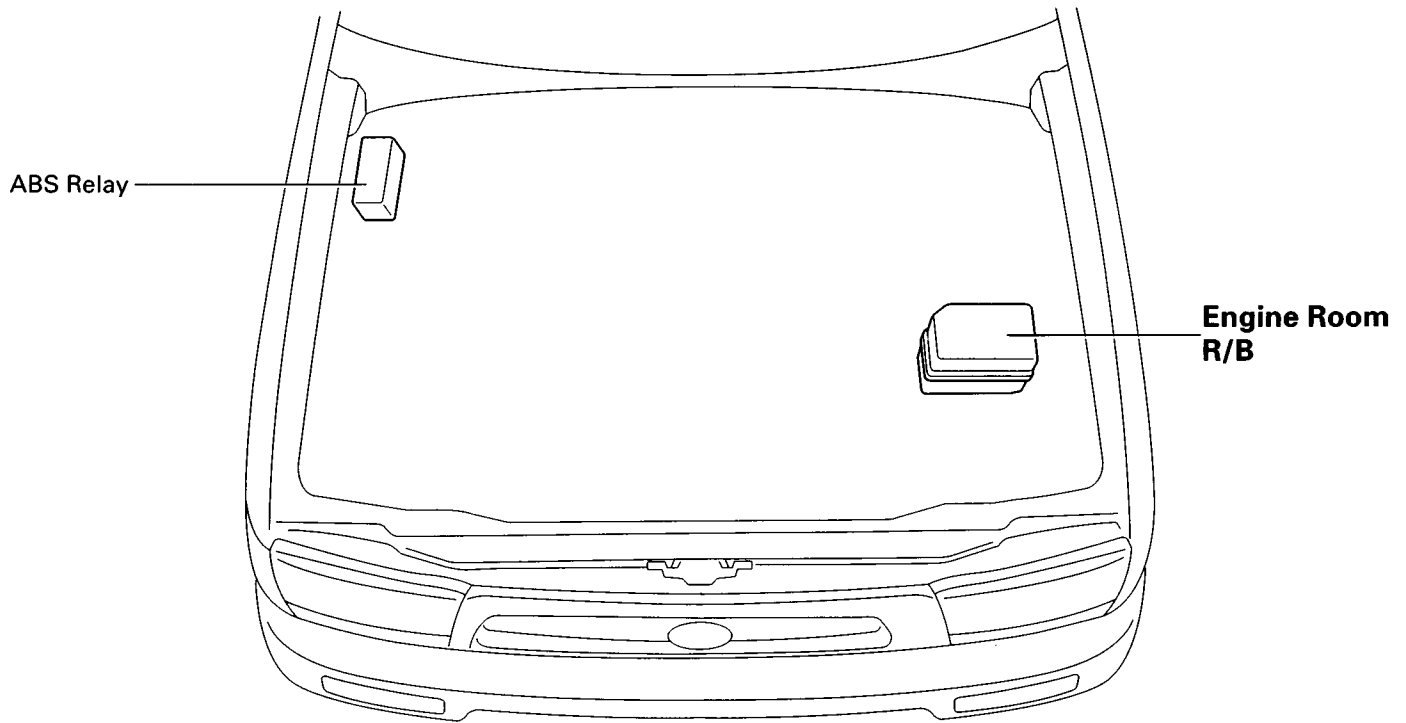

### [Body]

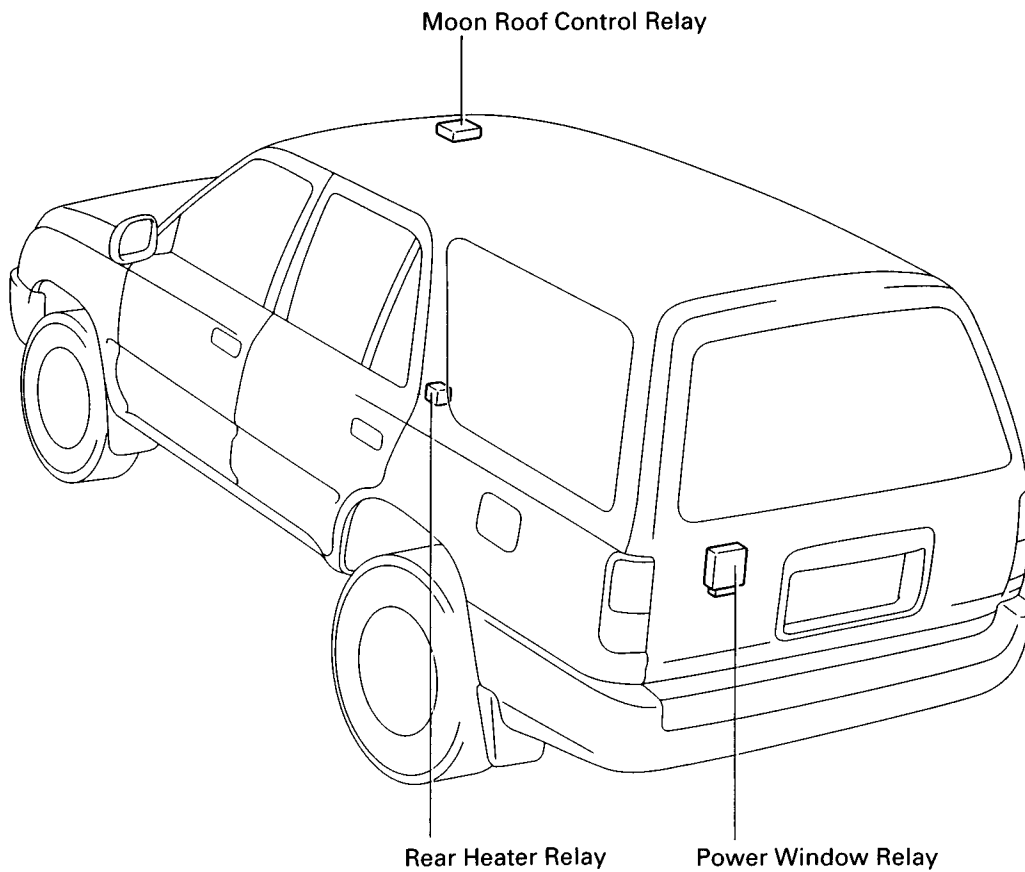

## [Instrument Panel]

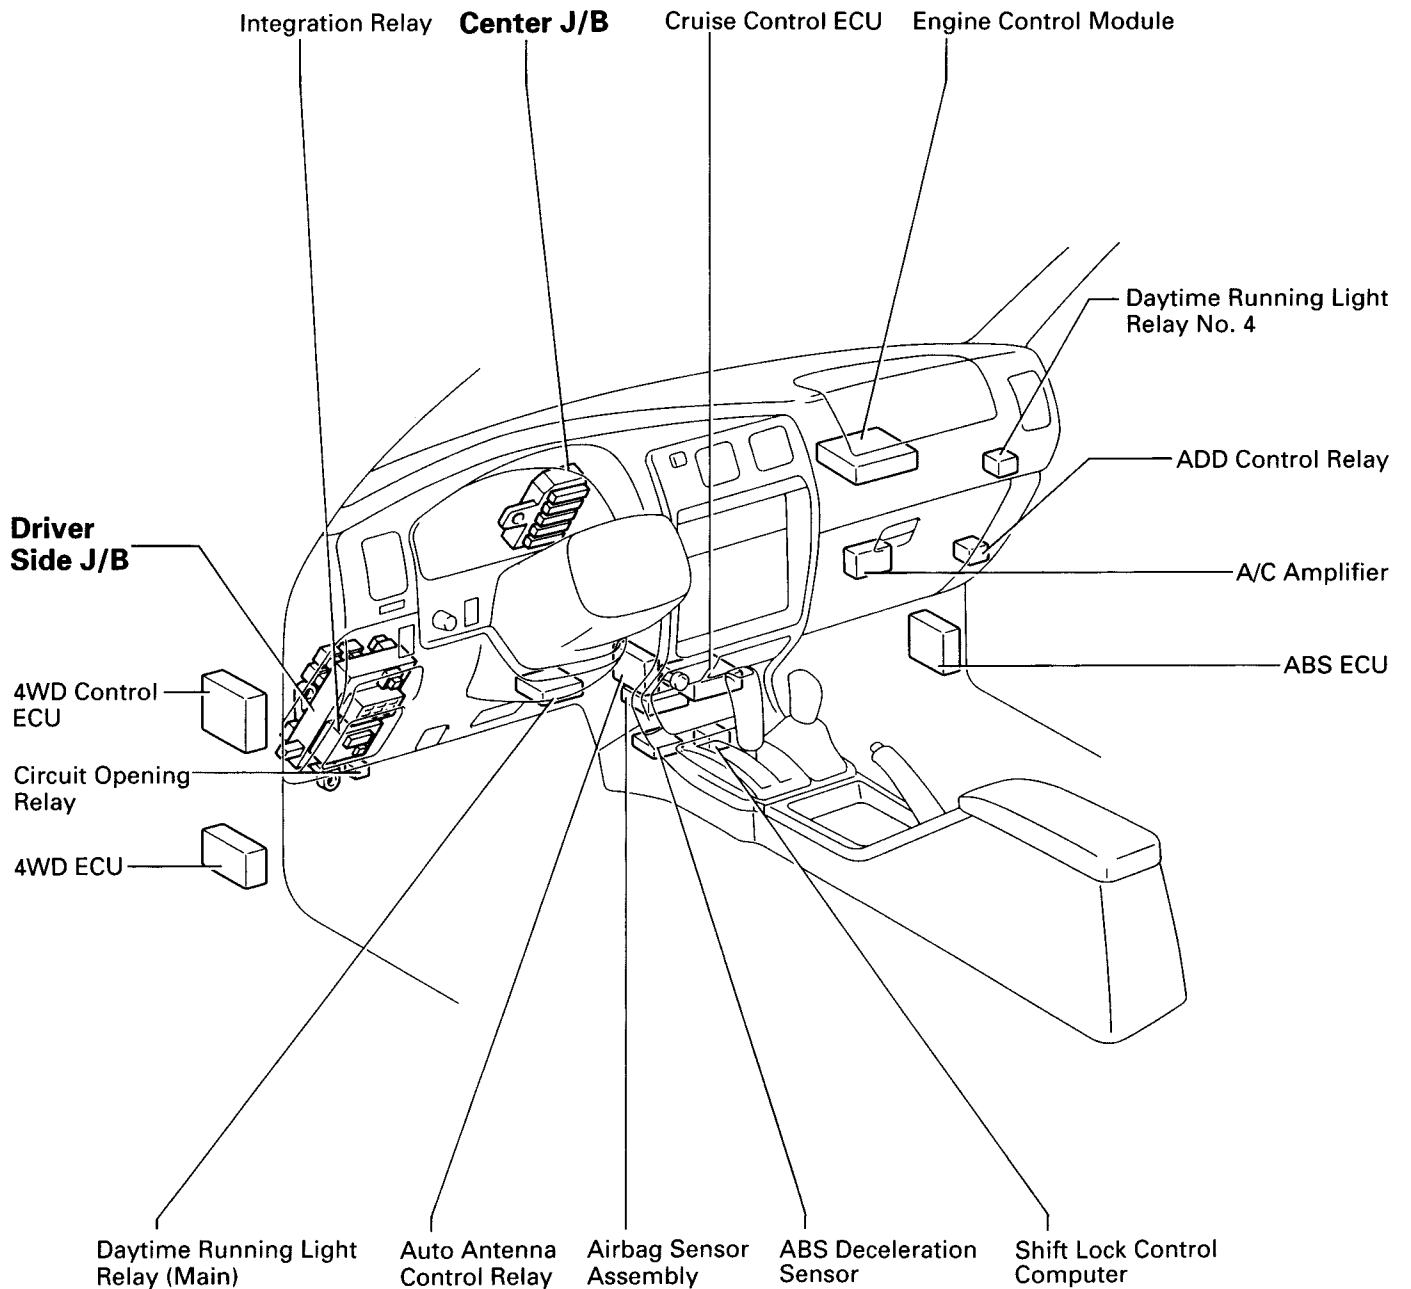


## F RELAY LOCATIONS


② : Engine Room R/B

Engine Compartment Left (See Page 18)

[USA]

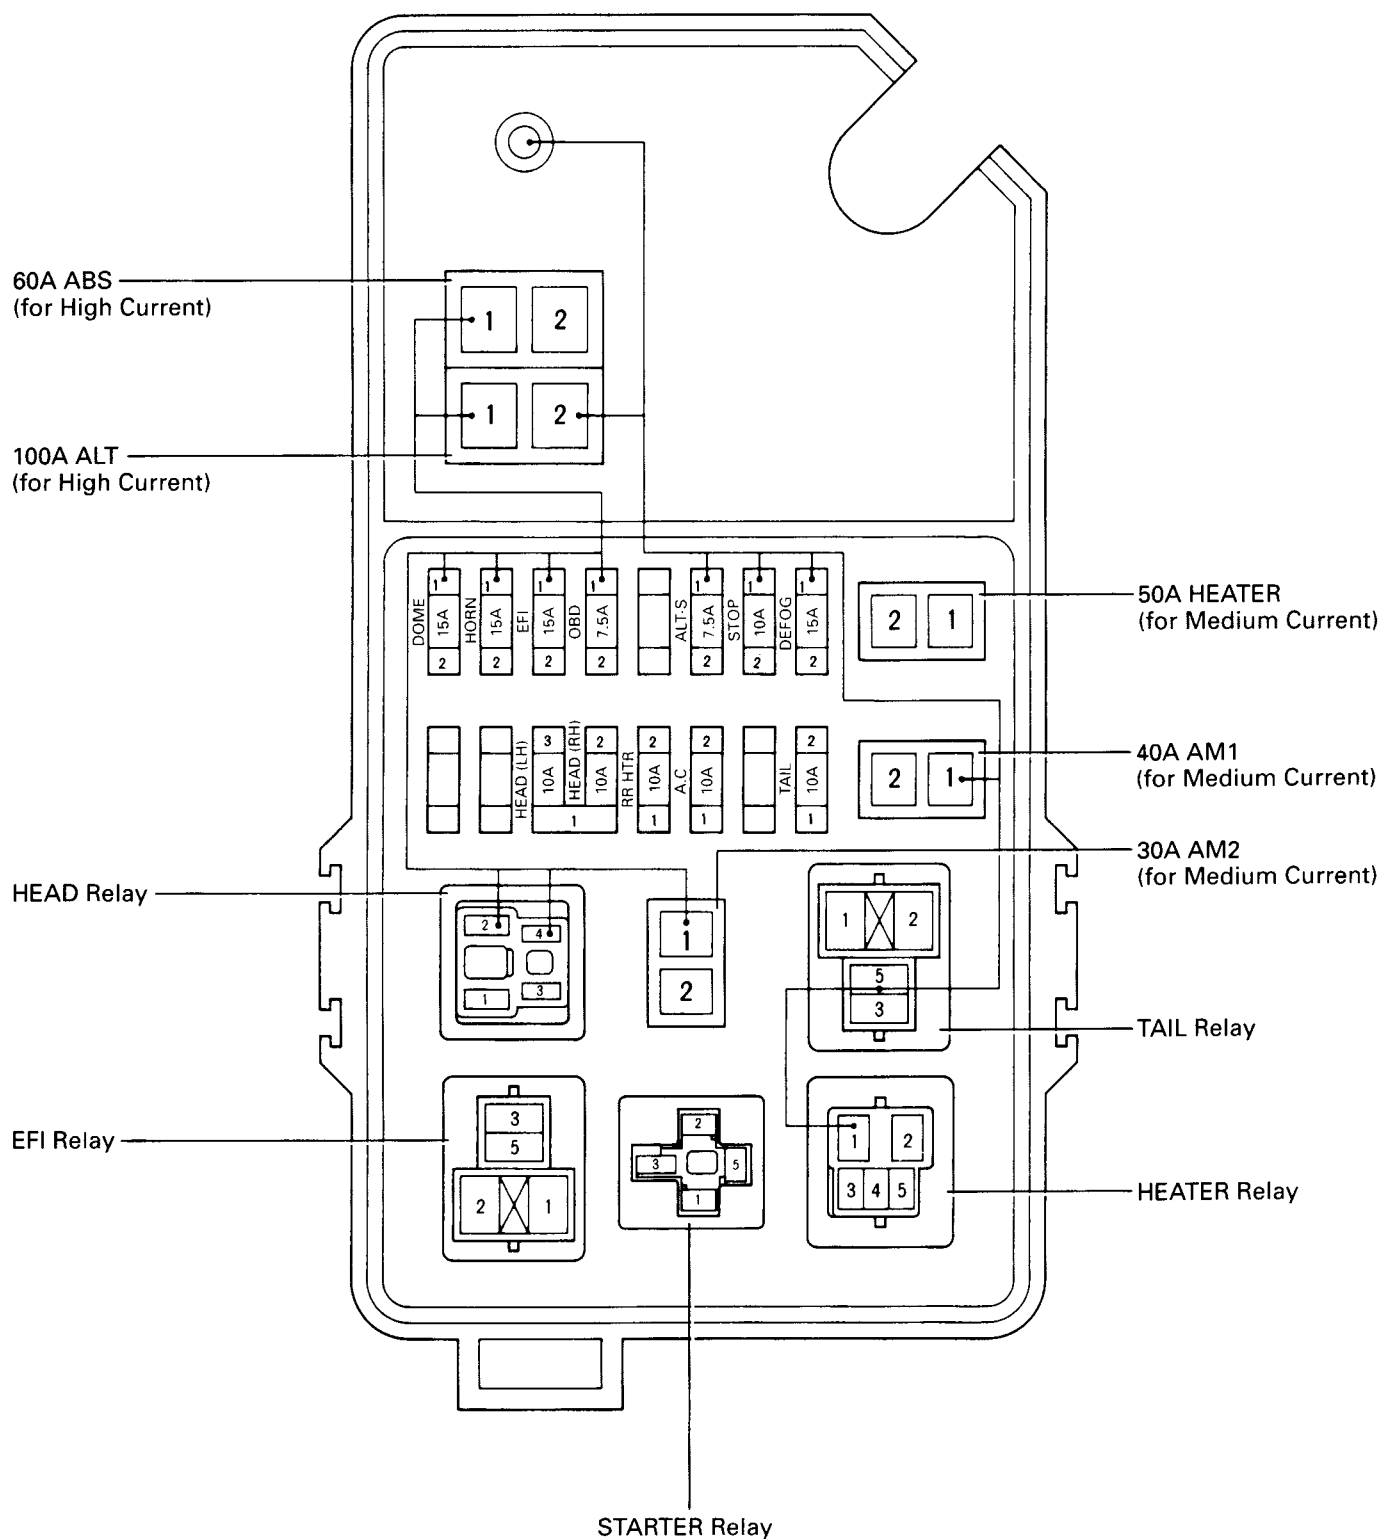


## [Canada]

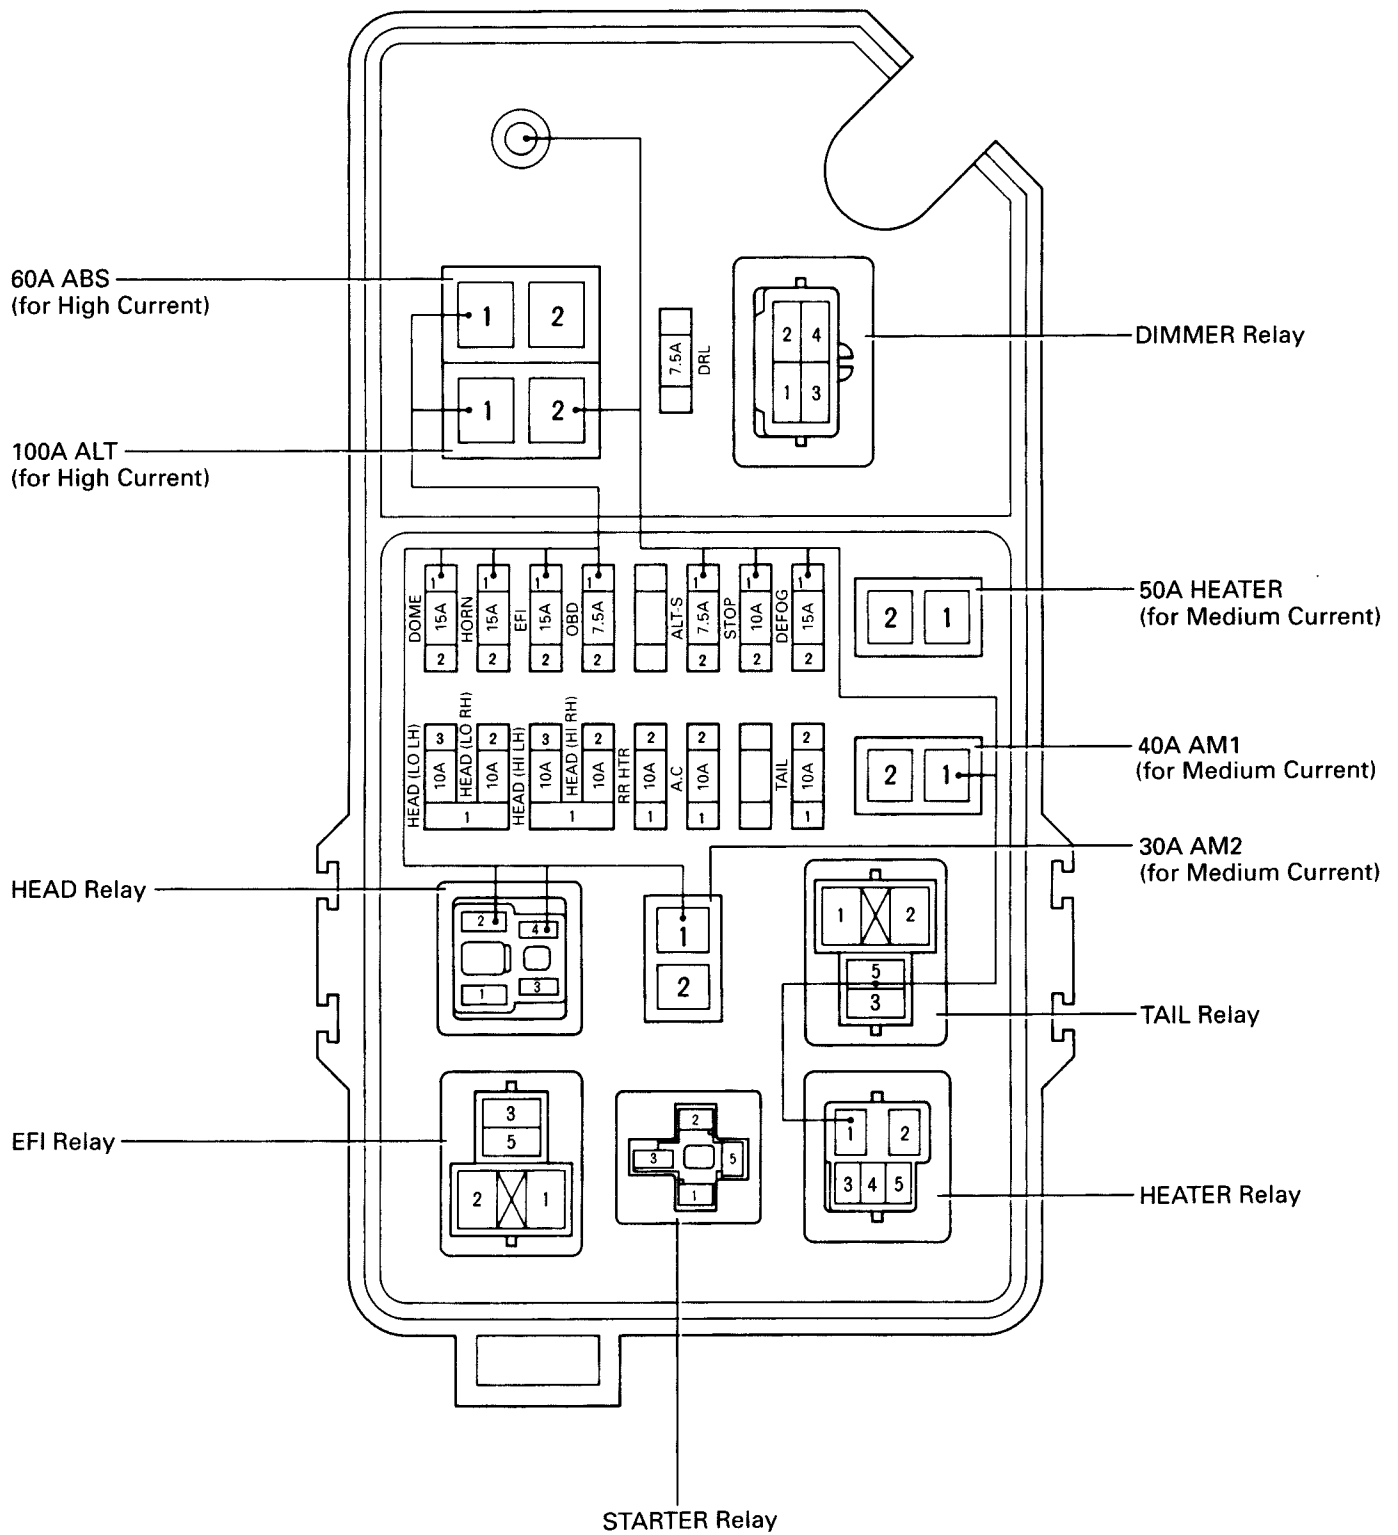


## F RELAY LOCATIONS

○ : Driver Side J/B

Lower Finish Panel (See Page 19)

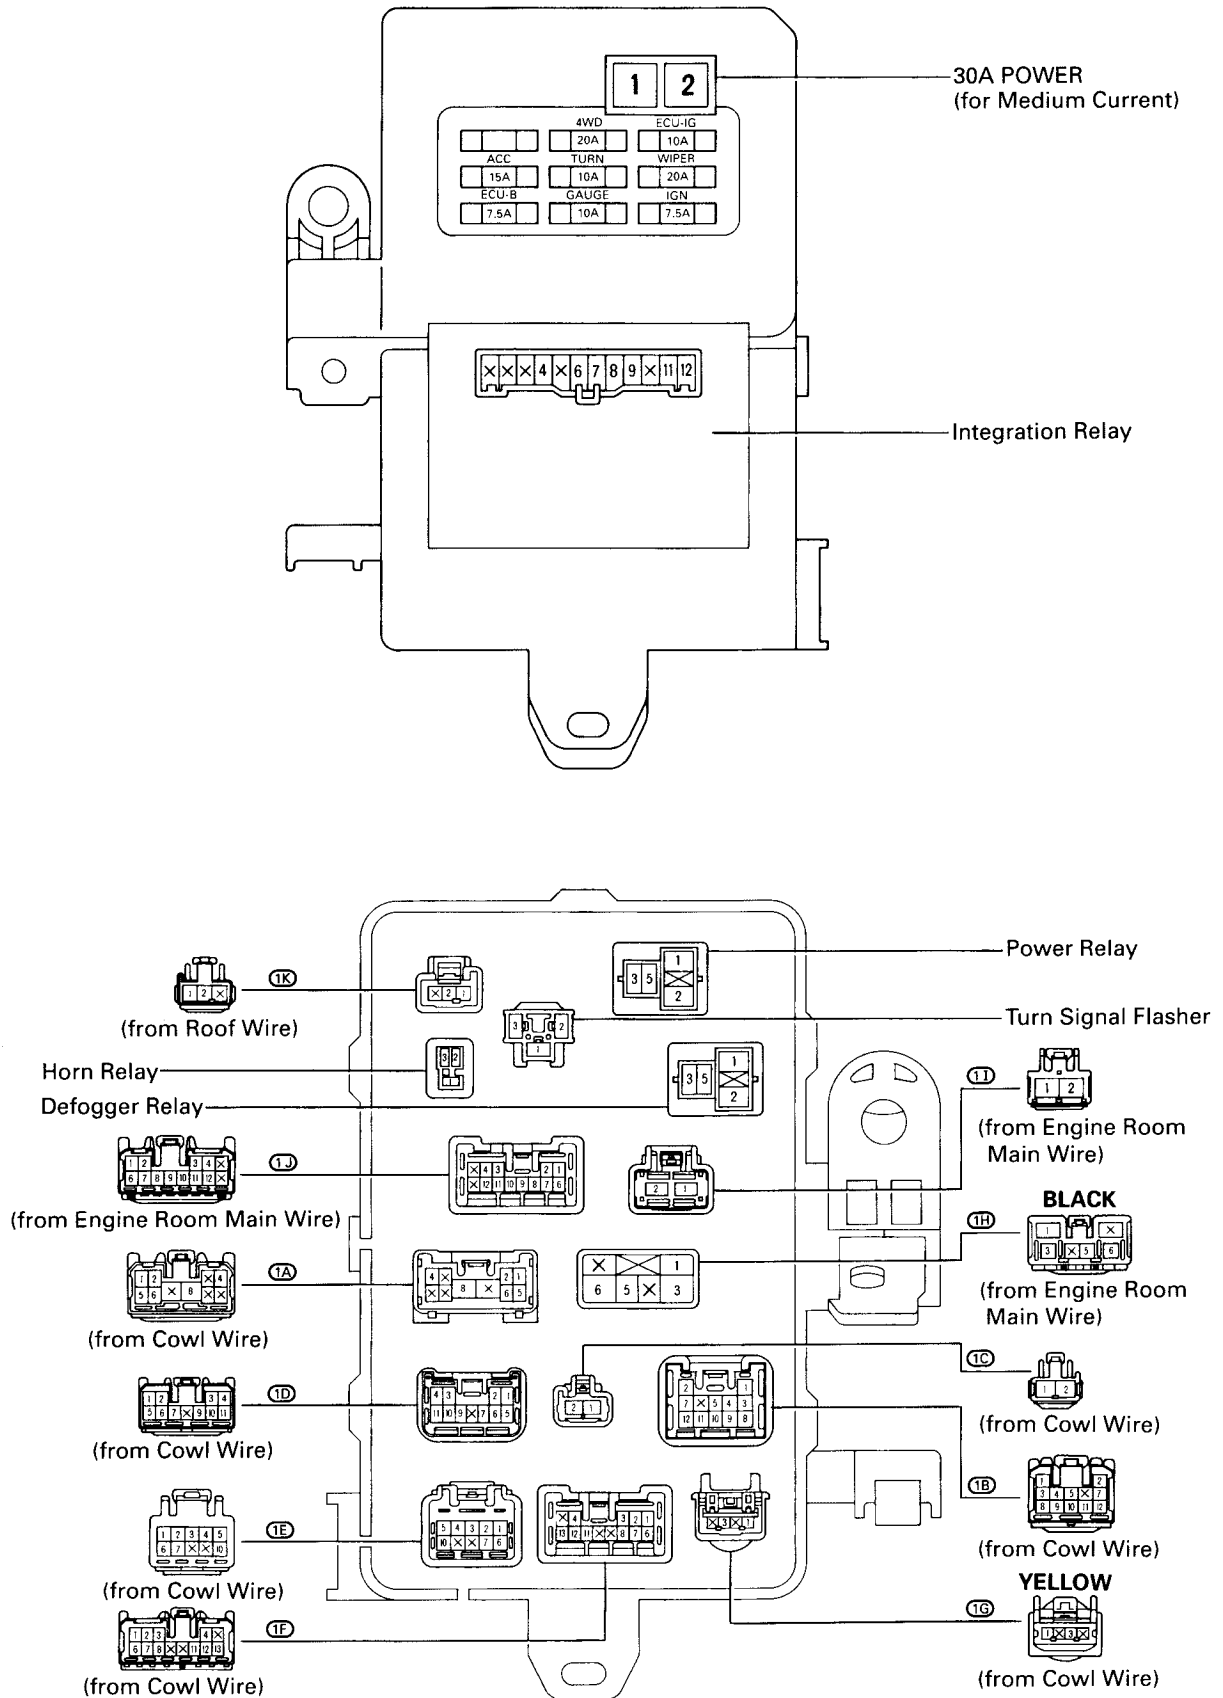


# [Driver Side J/B Inner Circuit]

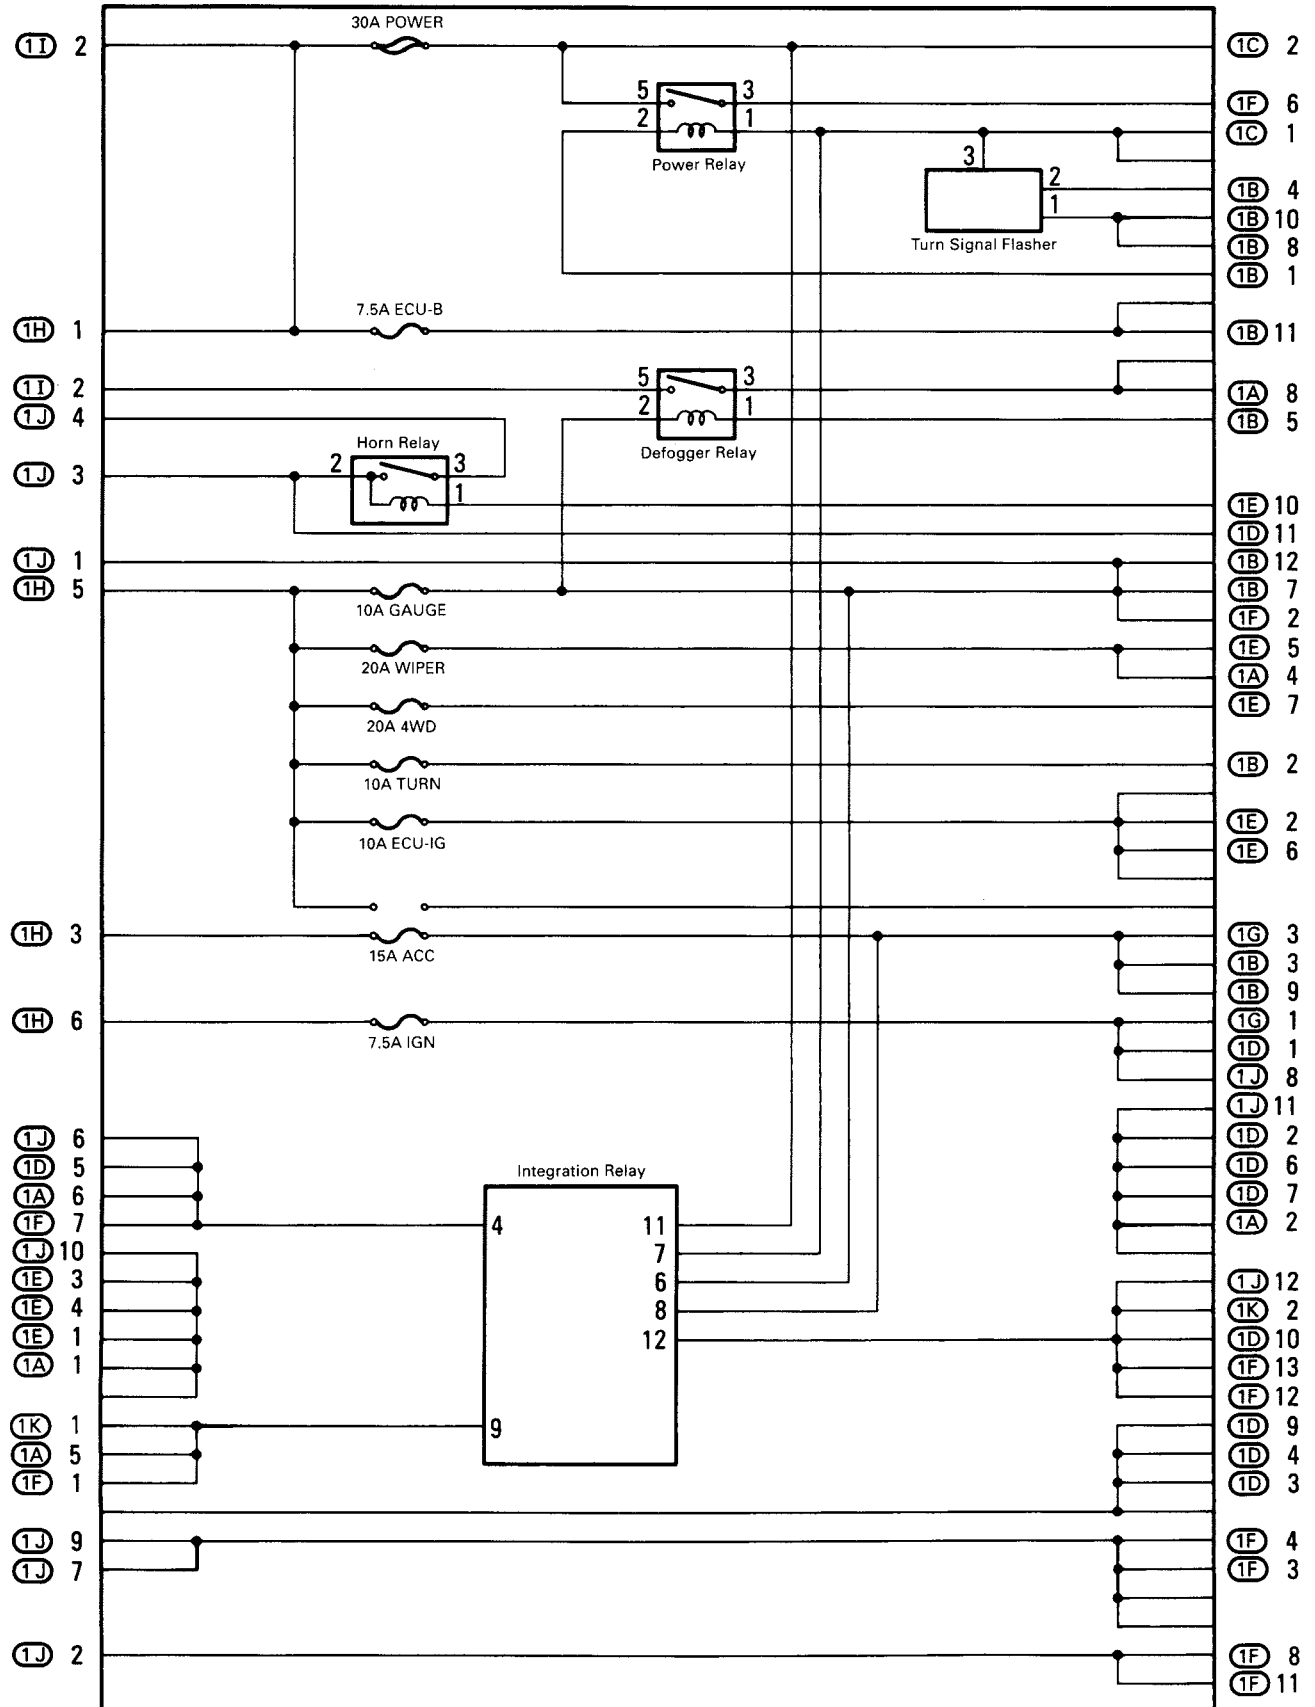

## F RELAY LOCATIONS

○ : Center J/B

Near The Steering Column Tube (See Page 19)

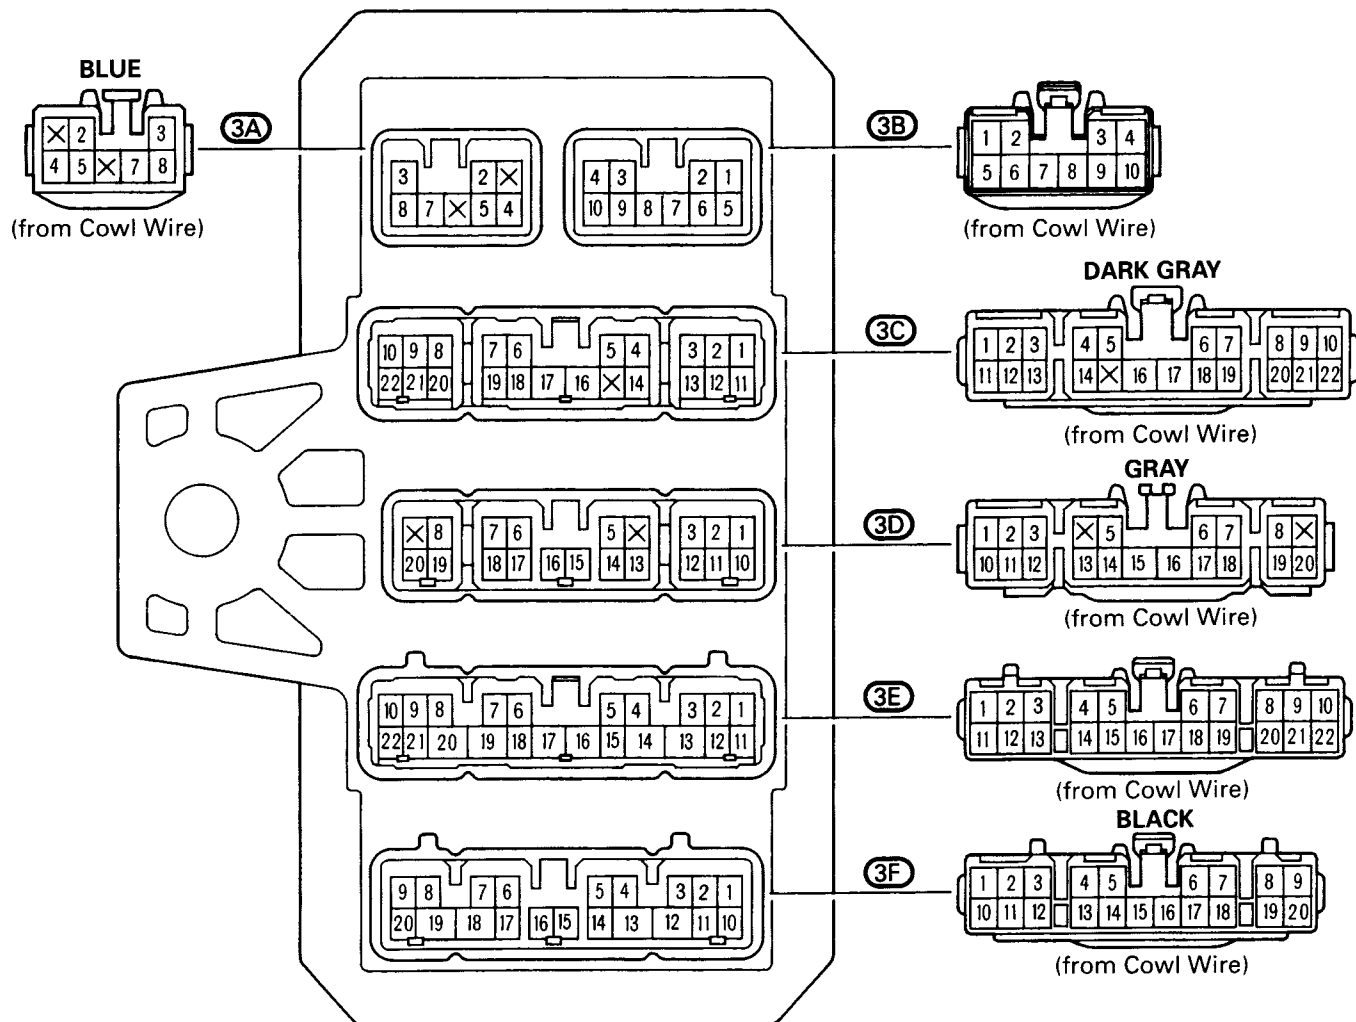

## [Center J/B Inner Circuit]

