



F RELAY LOCATIONS


[Engine Compartment]

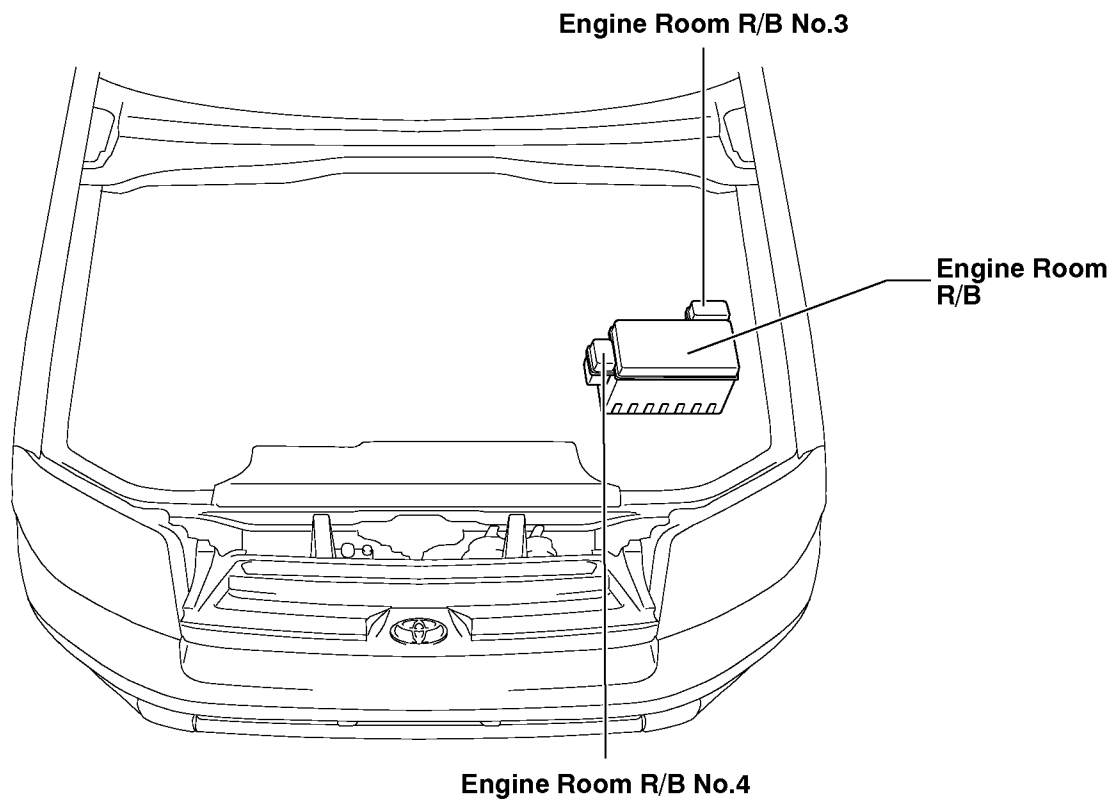

[Body]

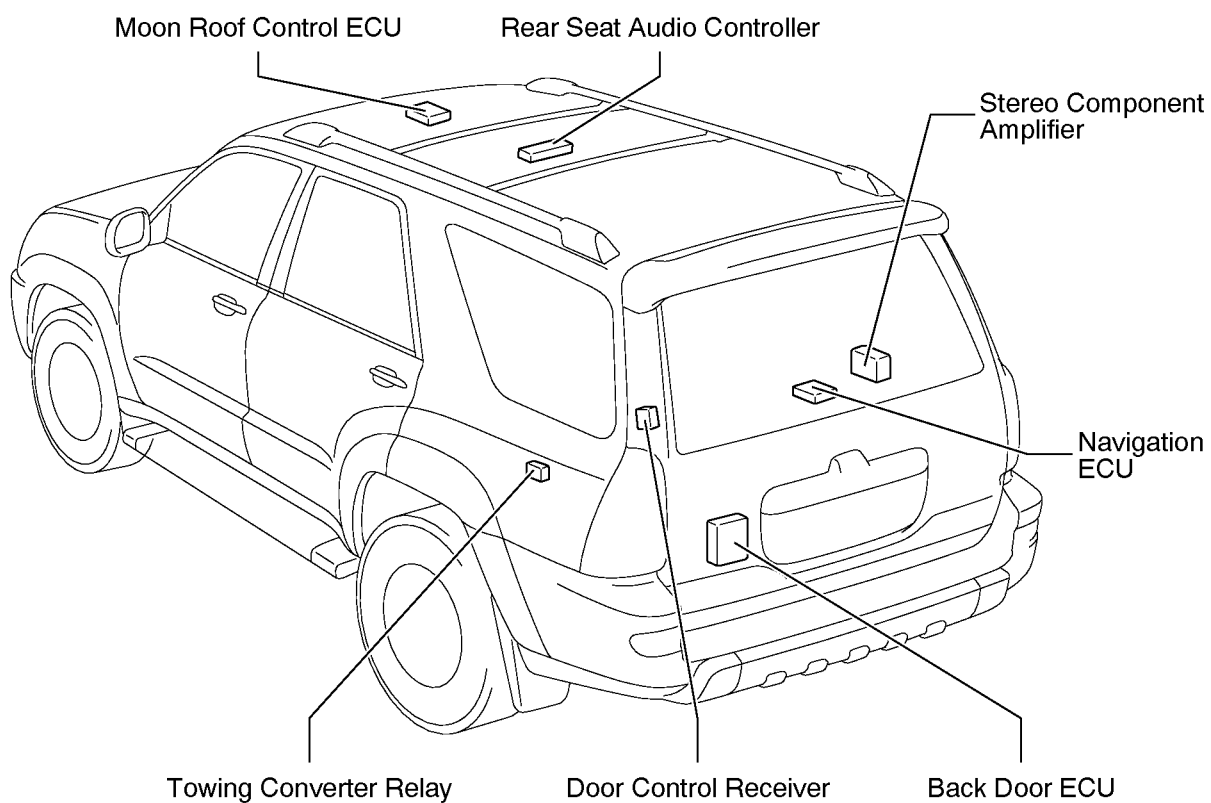

[Instrument Panel]

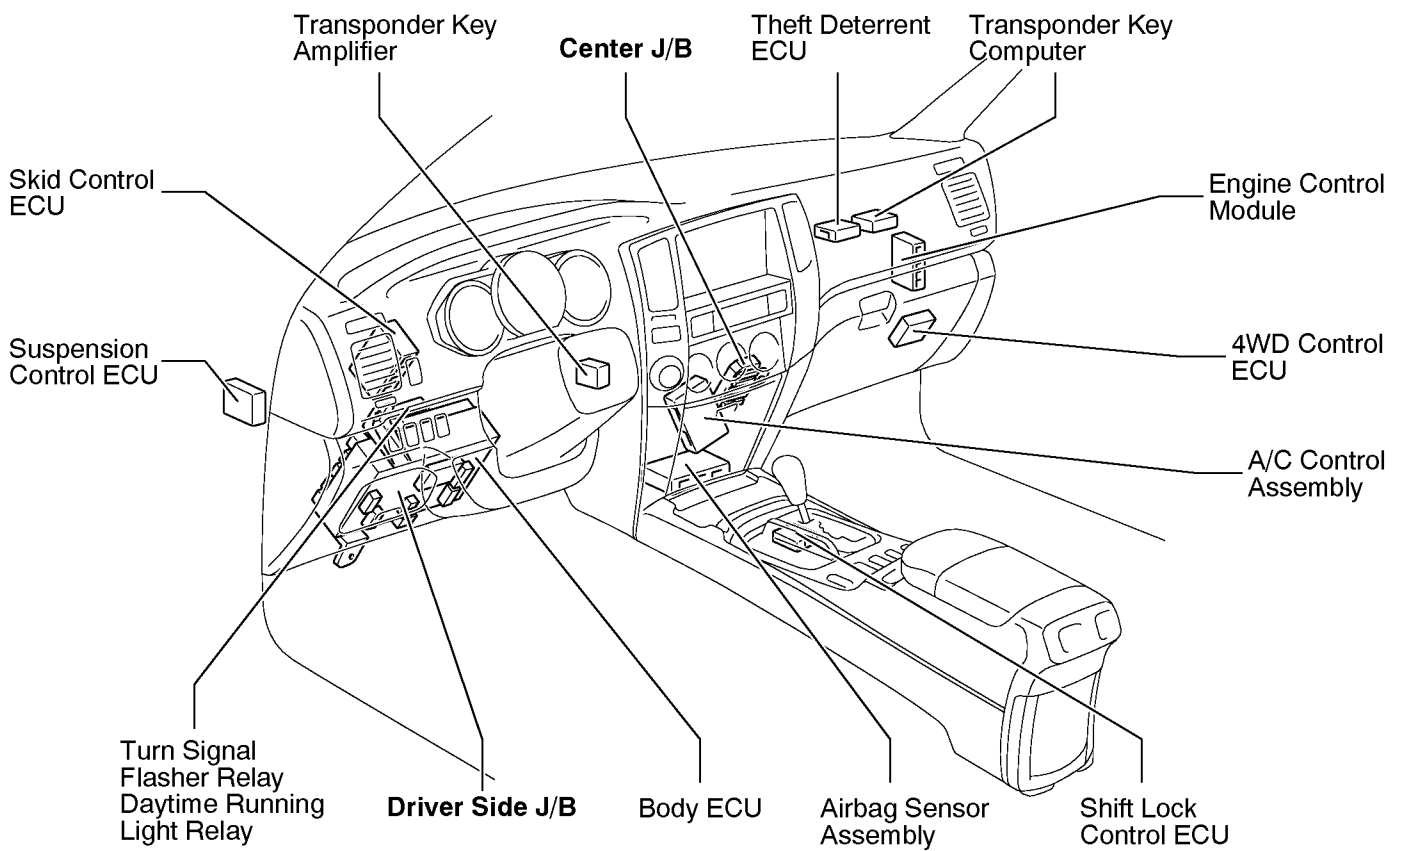


F RELAY LOCATIONS


② : Engine Room R/B

Engine Compartment Left (See Page 20)


- * 1:ACC CUT Relay
- * 2:FR FOG Relay
- * 3:STA Relay
- * 4:HEATER Relay
- * 5:MG CLT Relay
- * 6:ABS SOL Relay
- * 7:C/OPN Relay
- * 8:DOME Relay
- * 9:EFI Relay
- *10:A/F HEATER Relay
- *11:HEAD (LO LH)
- *12:HEAD (HI LH)
- *13:RADIO NO.1

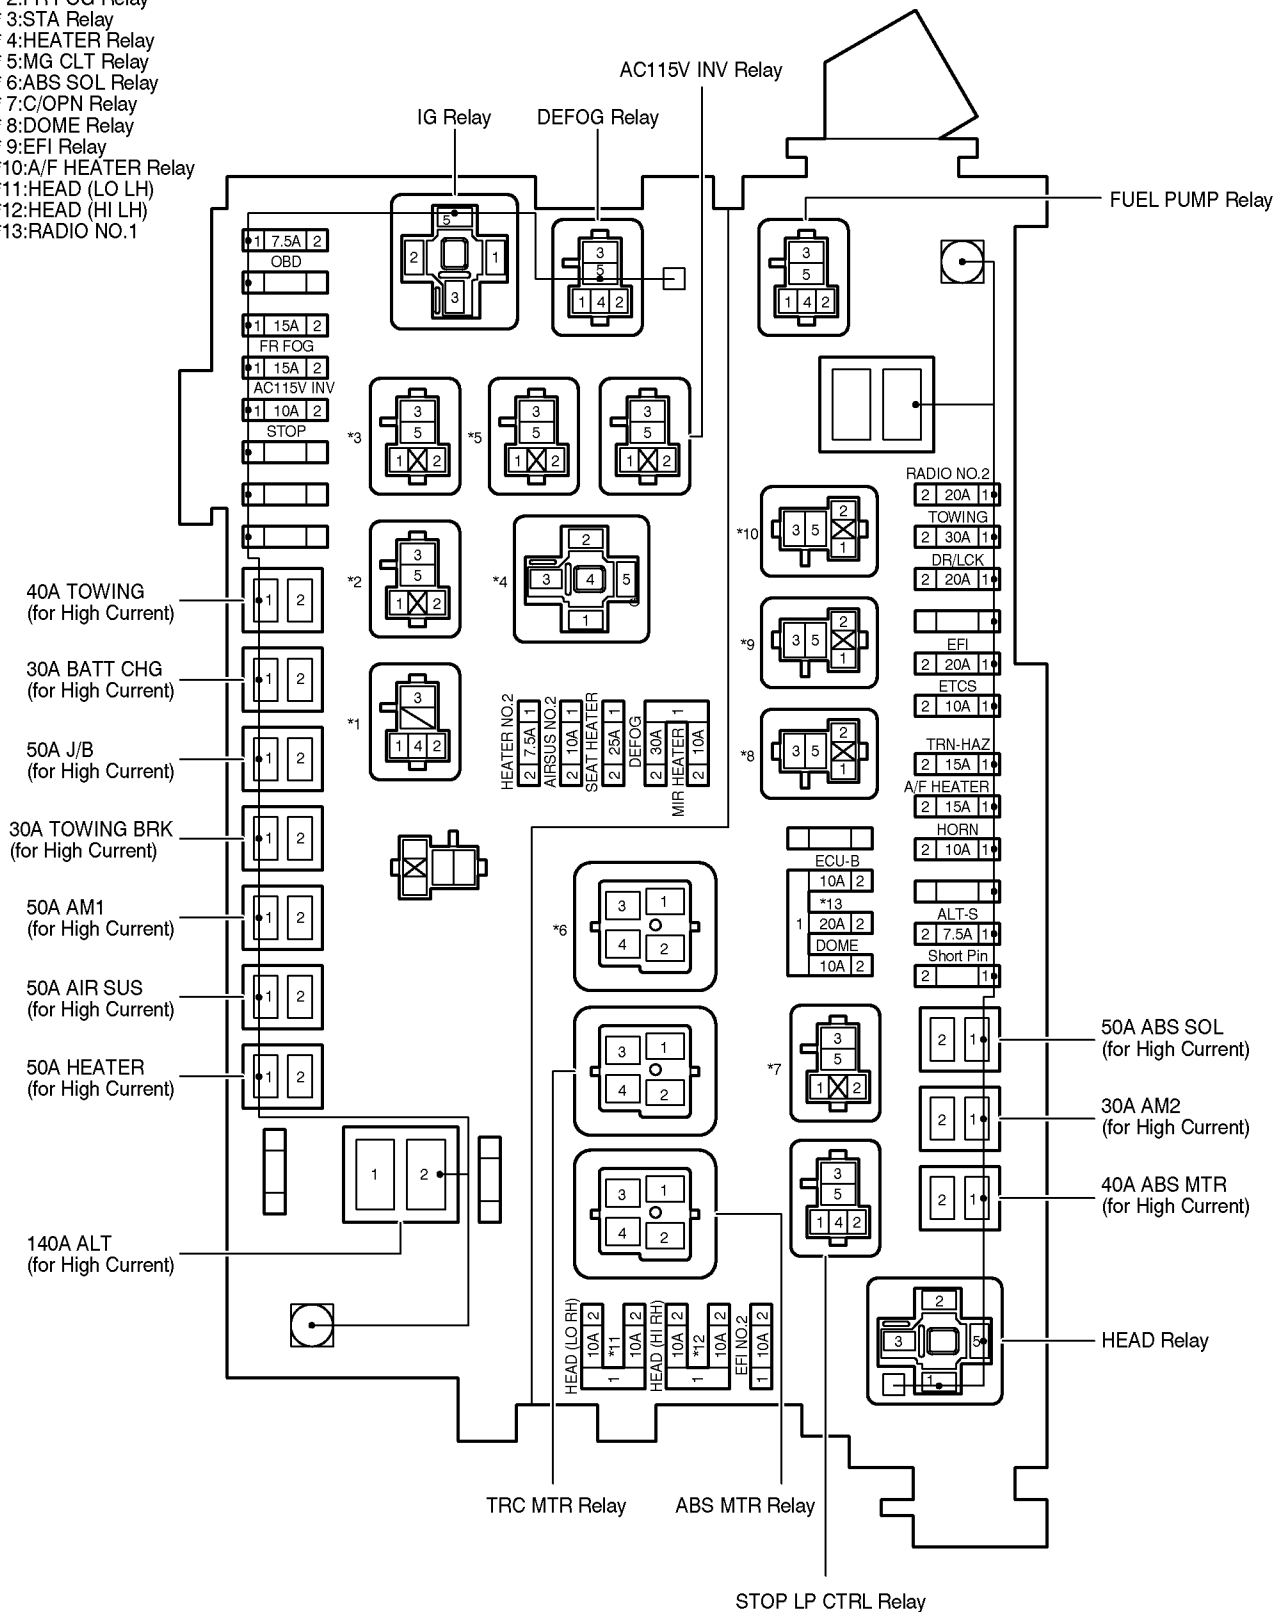

③ : Engine Room R/B No.3	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

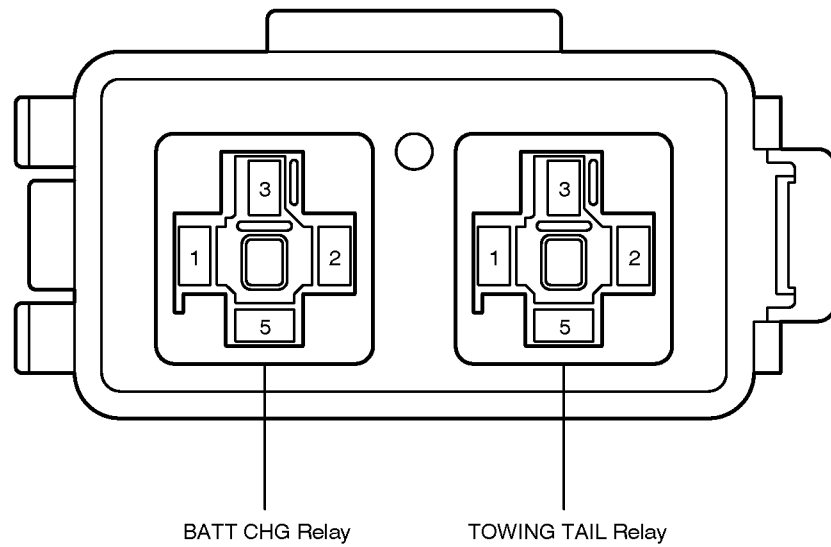


④ : Engine Room R/B No.4	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

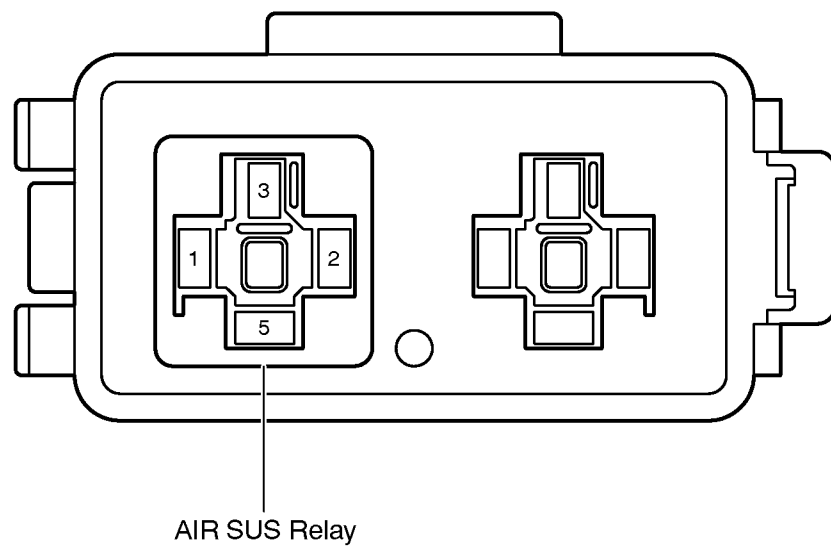


F RELAY LOCATIONS

 : Driver Side J/B


Lower Finish Panel (See Page 21)

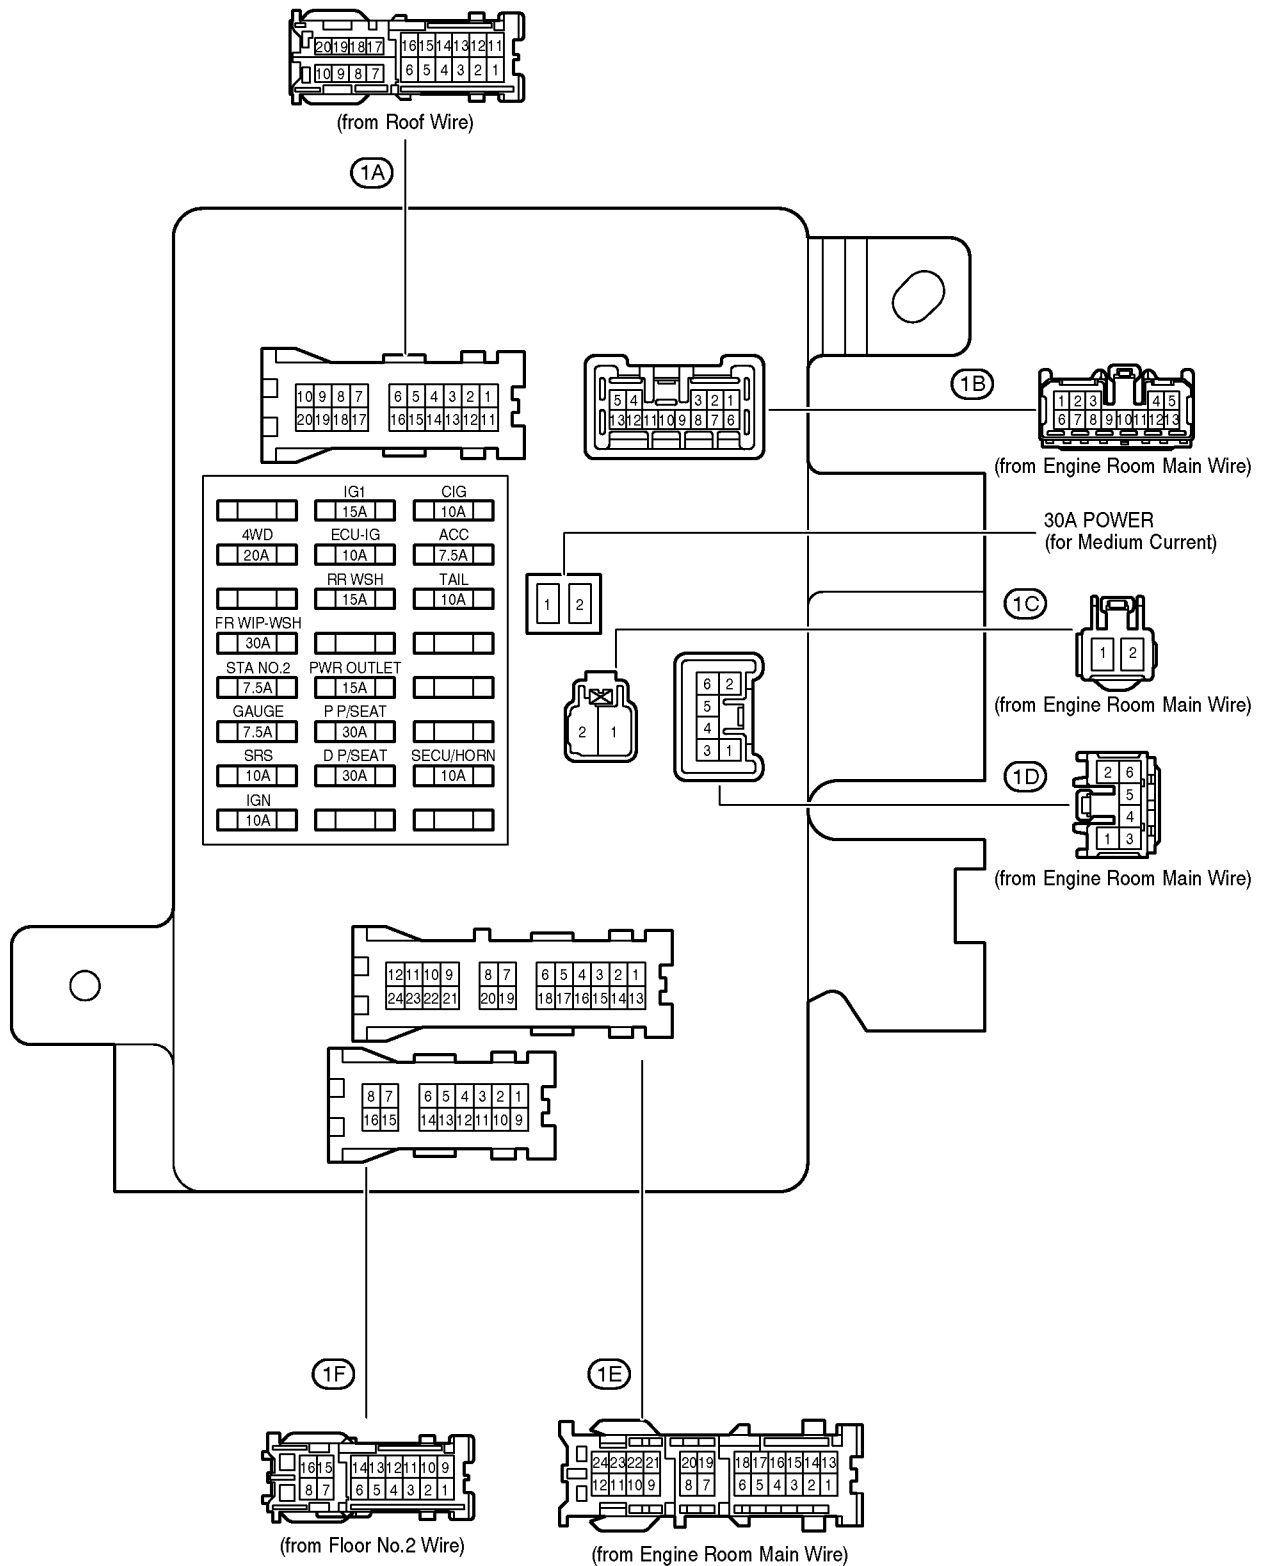

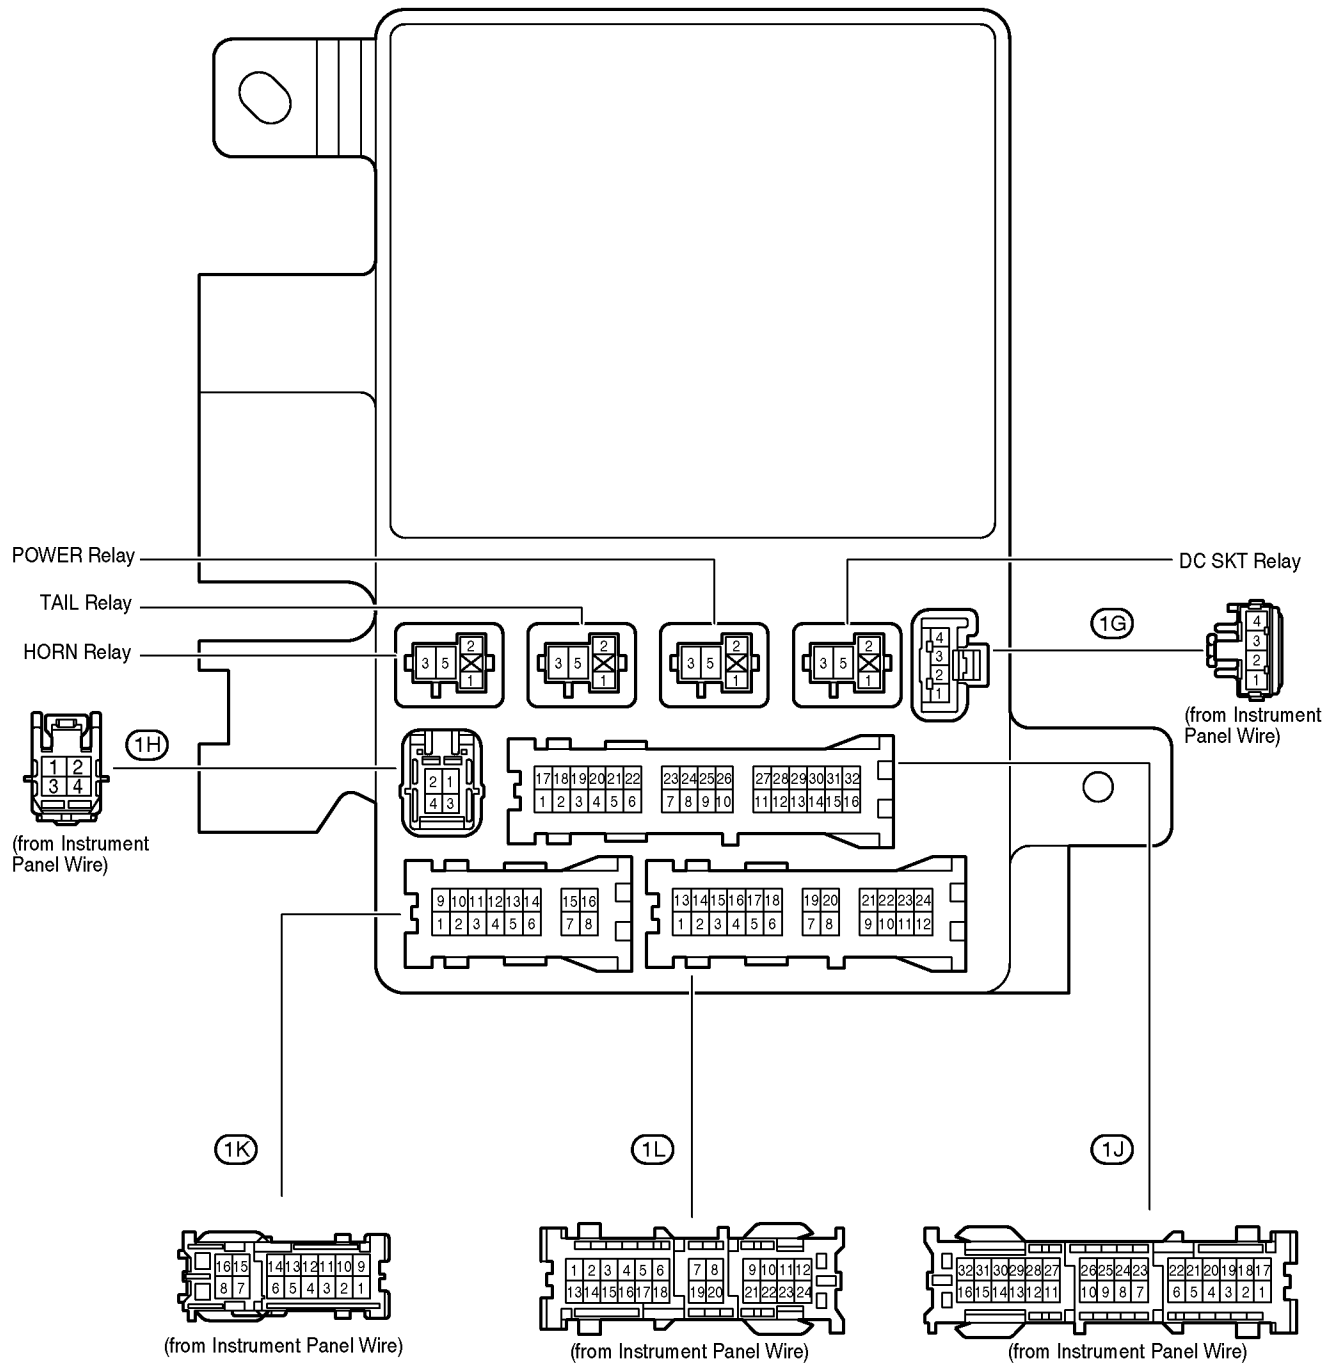


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

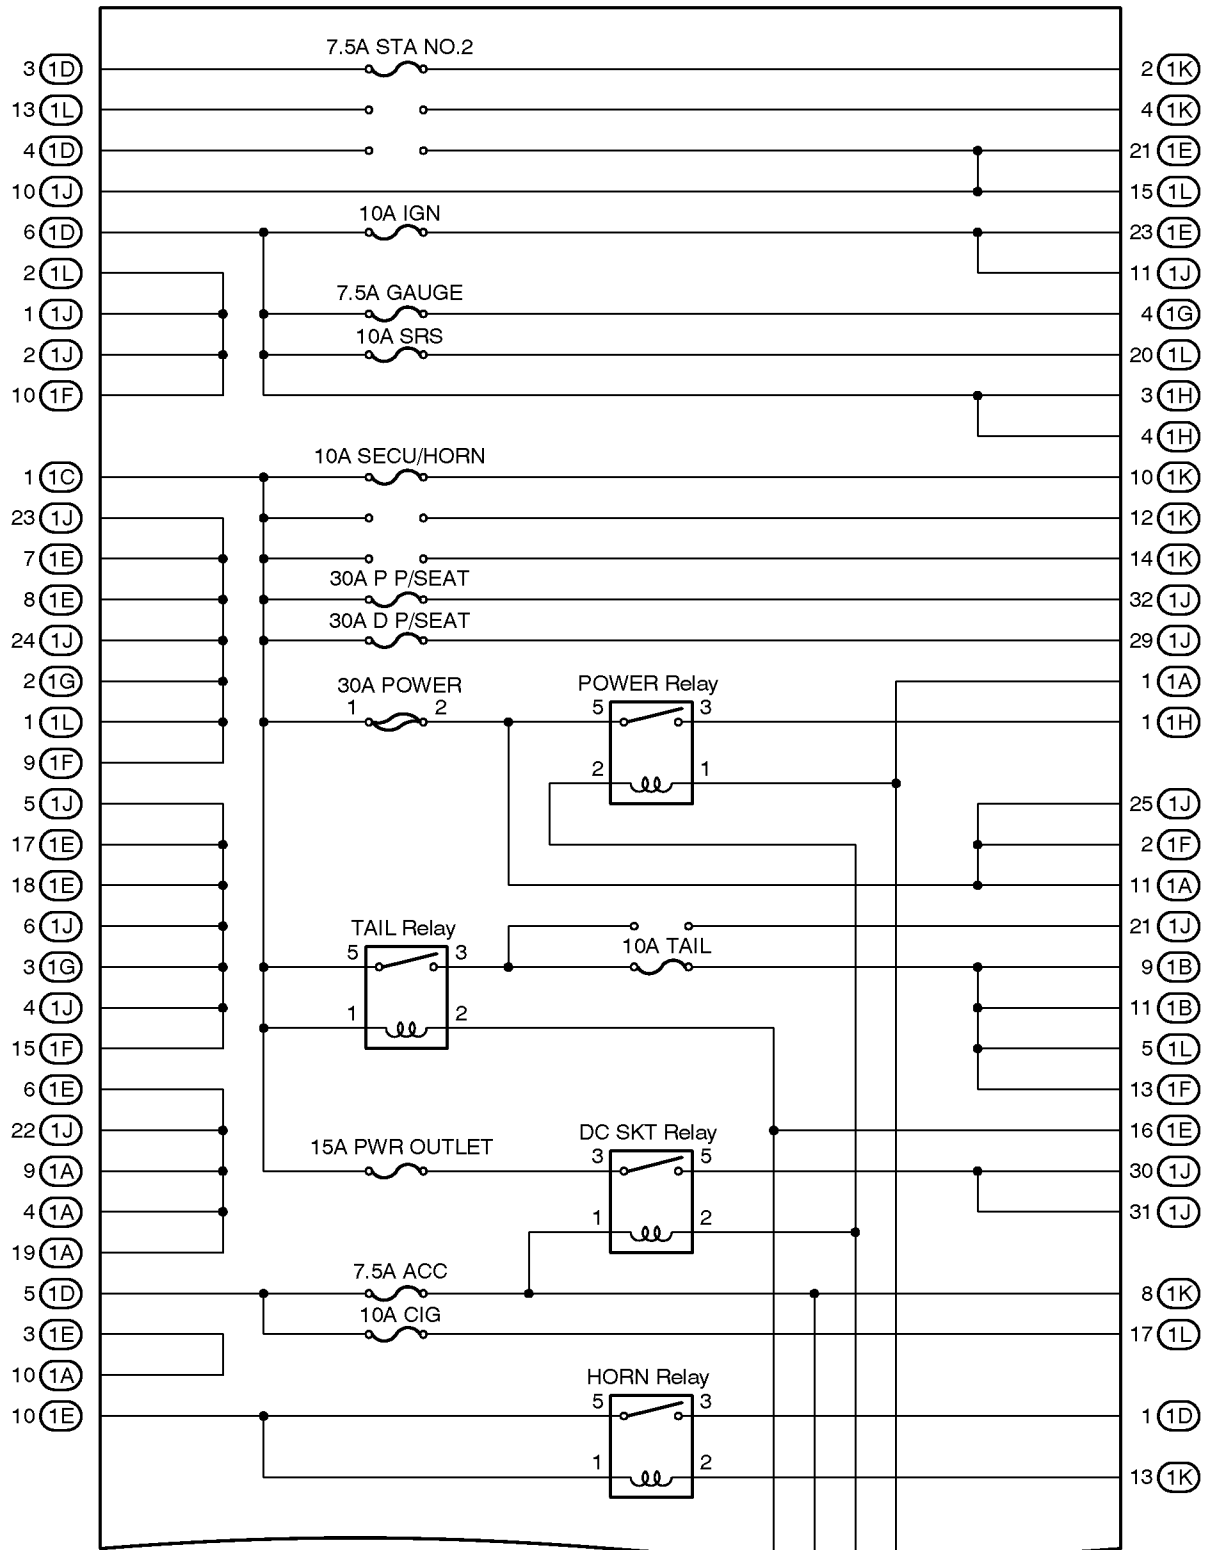


(Cont. Next Page)

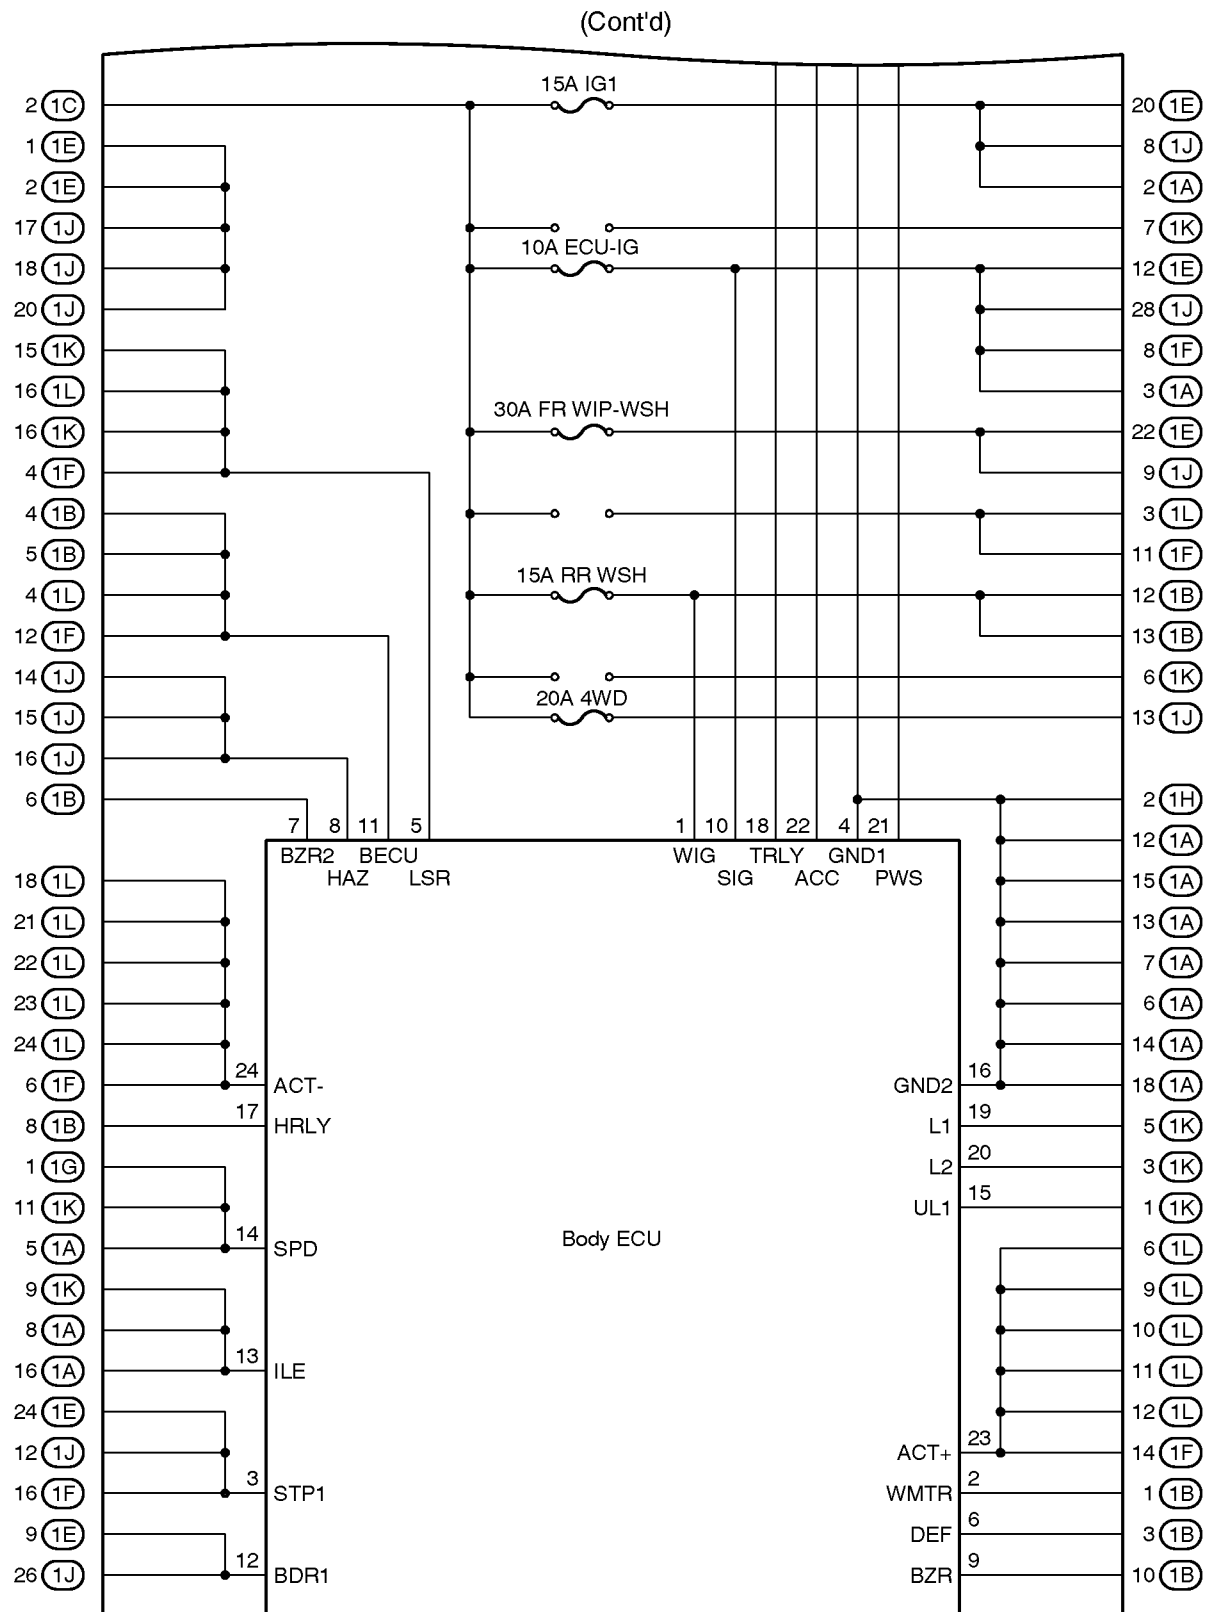

F RELAY LOCATIONS


○ : Center J/B

Instrument Panel Brace RH (See Page 21)

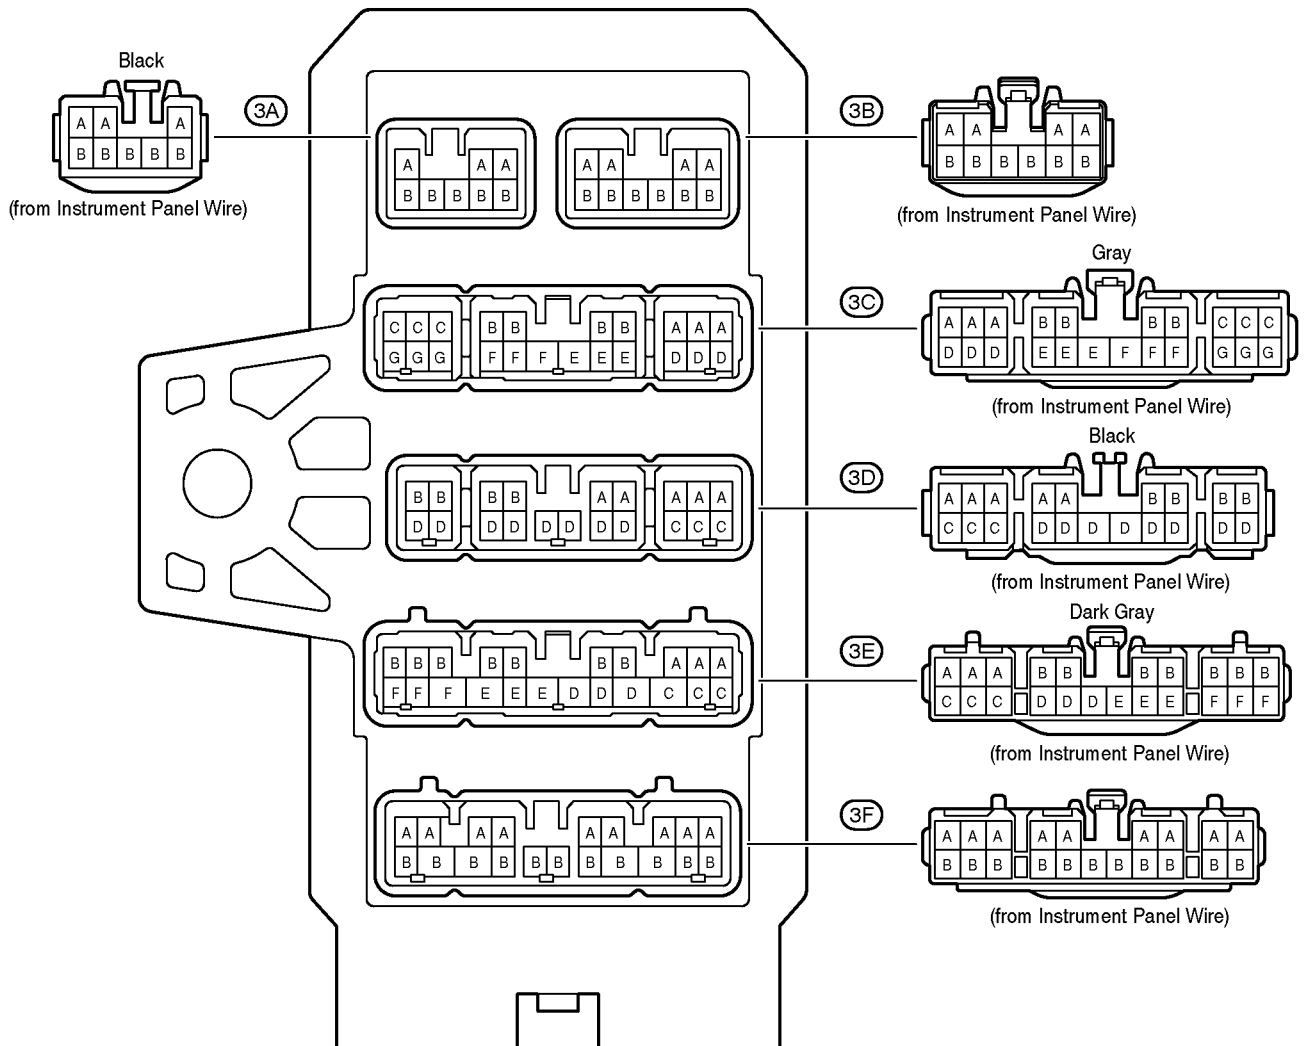

F RELAY LOCATIONS

[Center J/B Inner Circuit]

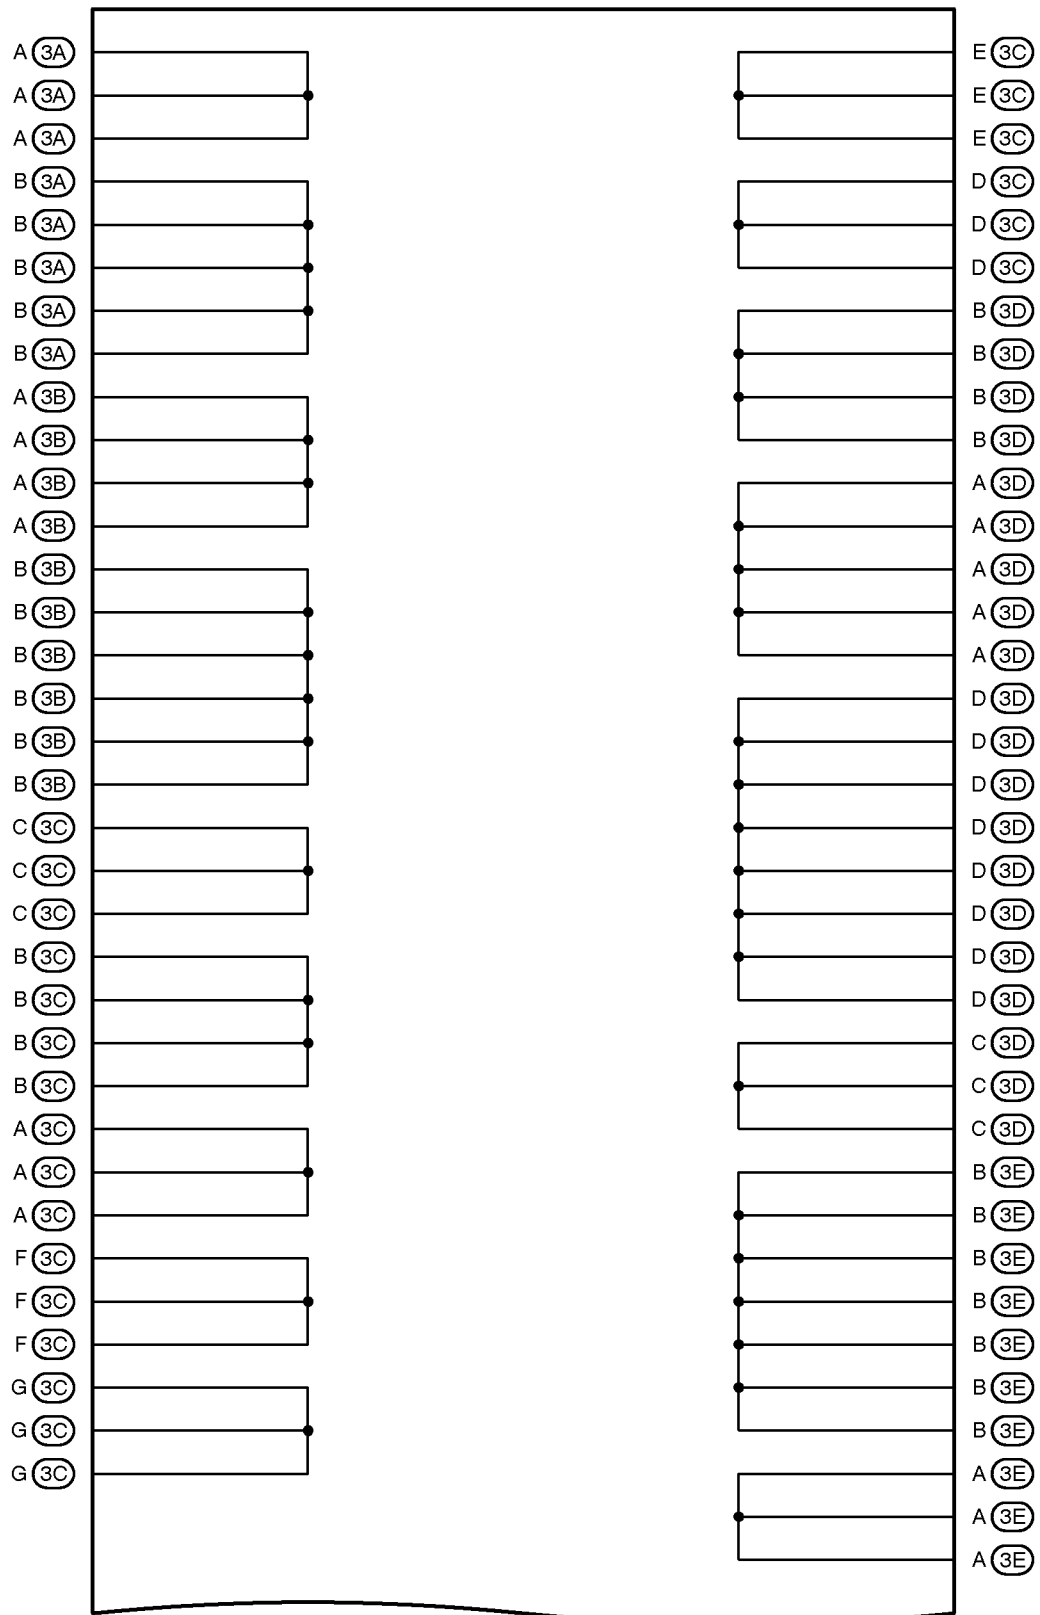

(Cont. Next Page)

(Cont'd)

F (3E)	
F (3E)	•
F (3E)	
E (3E)	
E (3E)	•
E (3E)	
D (3E)	
D (3E)	•
D (3E)	
C (3E)	
C (3E)	•
C (3E)	
A (3F)	
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	•
A (3F)	
B (3F)	
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	•
B (3F)	