

*The output on the PINK/WHITE wire is determined by the position of the jumper

Manual Transmission Wire Loop

FUNCTION	JUMPER POSITION
Start a signal output when remote start	JF1
Accessory output when remote start	JF2
Ignition signal output when remote start	JF3
Manual Transmission Wire Loop	Unset - Manual Transmission Set - Automatic Transmission

