



62

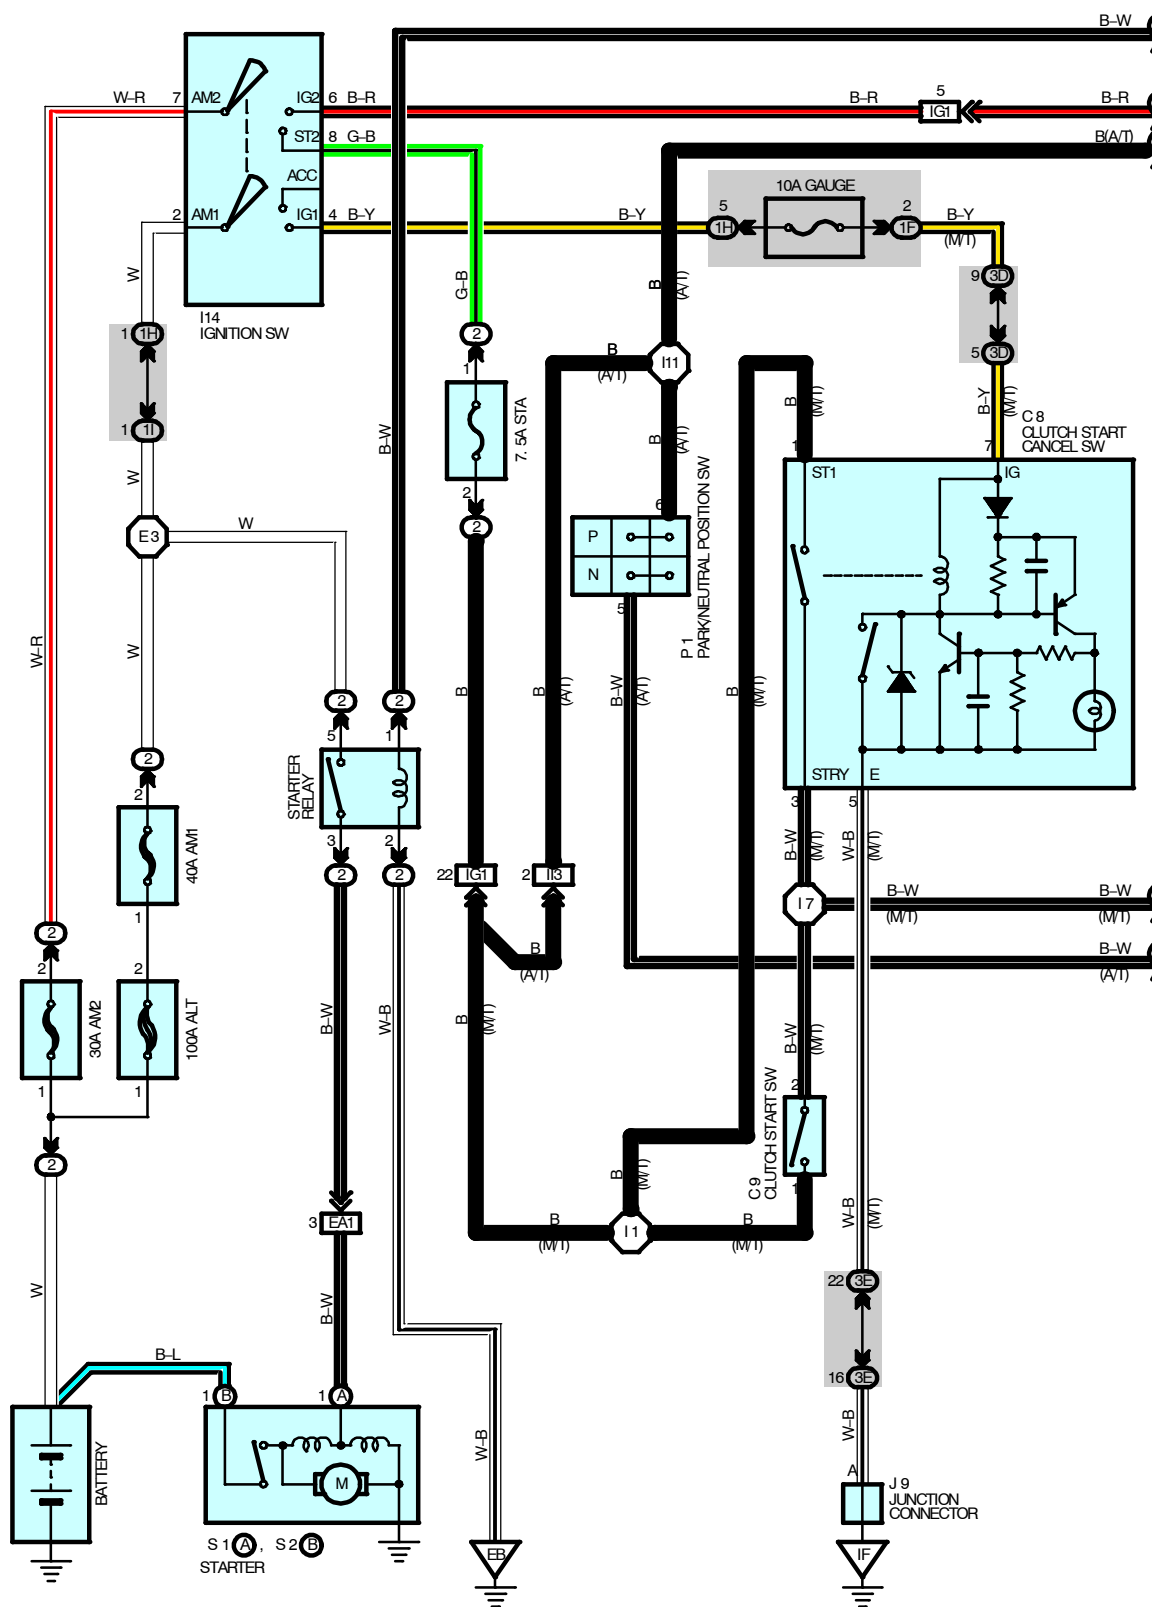

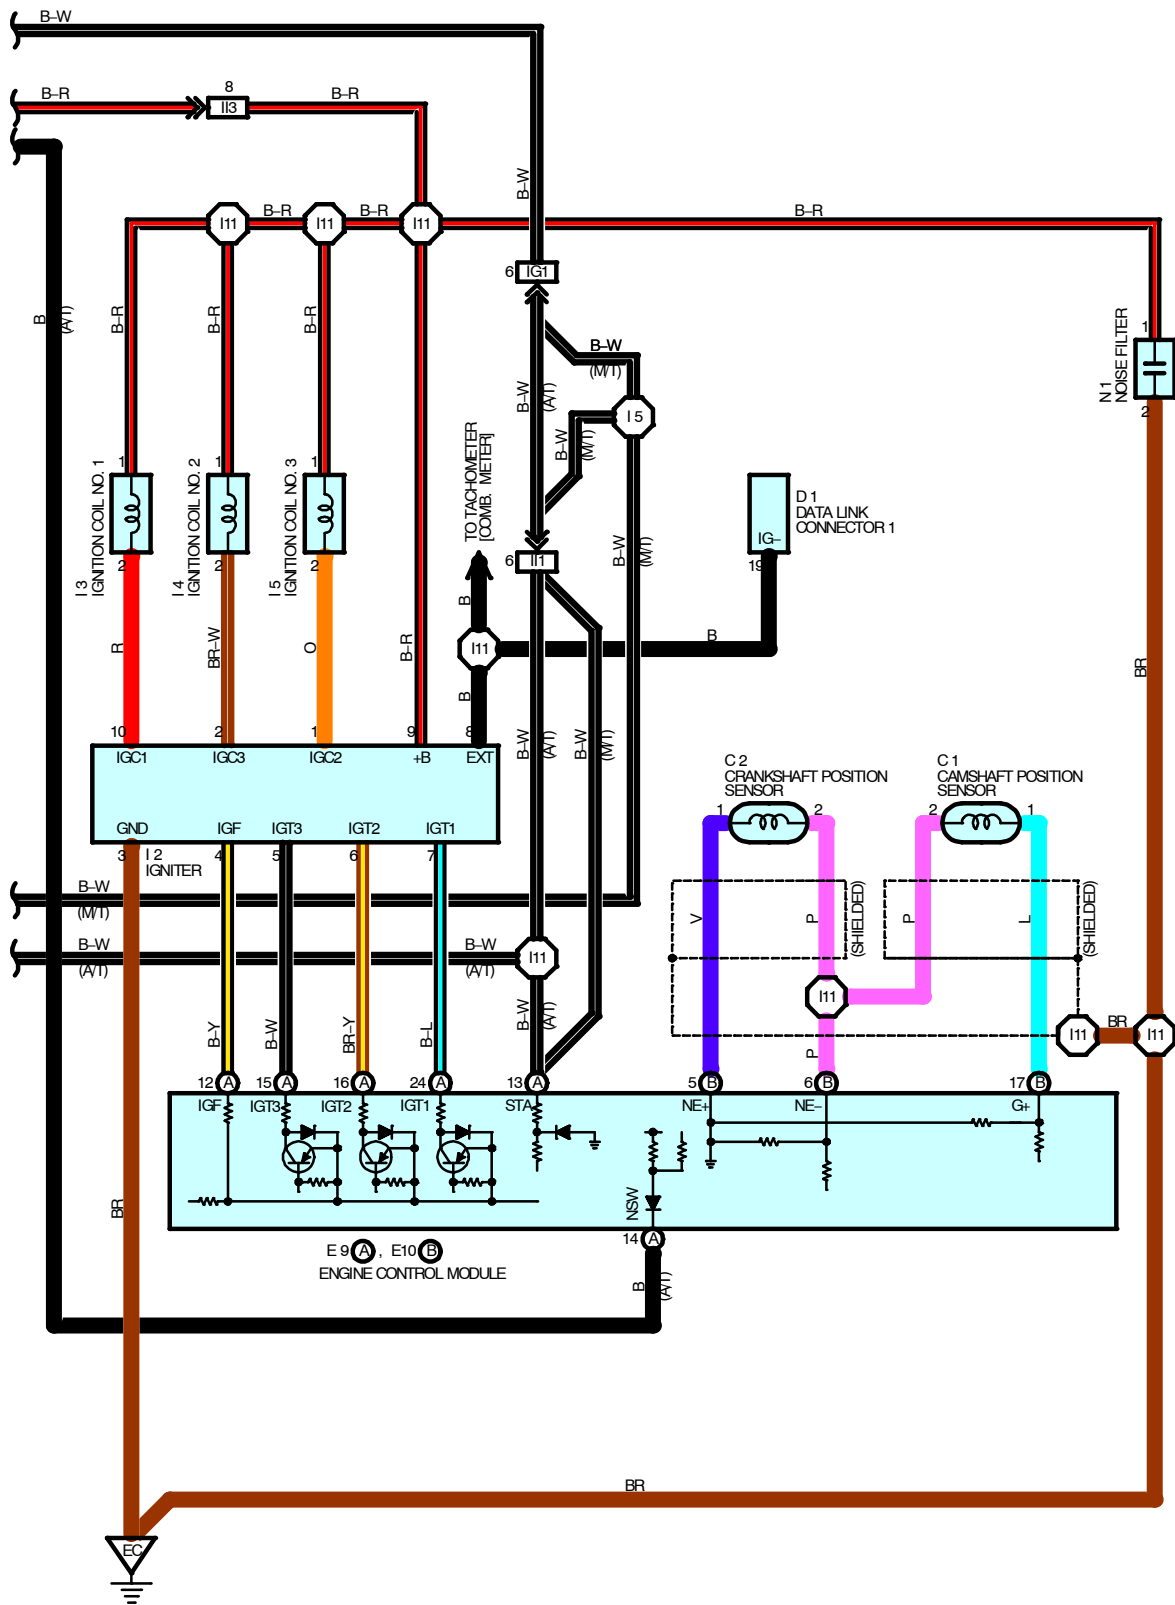

STARTING AND IGNITION (5VZ-FE)

SERVICE HINTS

S1 (A), S2 (B) STARTER

Points closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position (A/T)
Points closed with clutch start SW or clutch start cancel SW on and ignition SW at **ST** position (M/T)

I14 IGNITION SW

2-4, 7-6 : Closed with ignition SW at **ON** or **ST** position
7-8 : Closed with ignition SW at **ST** position

P1 PARK/NEUTRAL POSITION SW (A/T)

6-5 : Closed with A/T shift lever in **P** or **N** position

STARTER RELAY [ENGINE ROOM R/B]

3-5 : Closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position (A/T)
3-5 : Closed with clutch start SW or clutch start cancel SW on and ignition SW at **ST** position (M/T)

C8 CLUTCH START CANCEL SW (M/T)

7-5 : Closed with ignition SW and clutch start cancel SW on

C9 CLUTCH START SW (M/T)

1-2 : Closed with clutch pedal fully depressed

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C1	26 (5VZ-FE)	E10 B	31	J9	31
C2	26 (5VZ-FE)	I2	27 (5VZ-FE)	N1	27 (5VZ-FE)
C8	30	I3	27 (5VZ-FE)	P1	27 (5VZ-FE)
C9	30	I4	27 (5VZ-FE)	S1 A	27 (5VZ-FE)
D1	26 (5VZ-FE)	I5	27 (5VZ-FE)	S2 B	27 (5VZ-FE)
E9 A	31	I14	31		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20 (USA) 21 (Canada)	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1H	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1I		
3D	24	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	36 (5VZ-FE)	Engine No.2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
IG1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
II1	40	Engine Wire and Cowl Wire (On the Glove Box)
II3		

: GROUND POINTS

Code	See Page	Ground Points Location
EB	36 (5VZ-FE)	Front Left Fender
EC	36 (5VZ-FE)	Intake Manifold Left
IF	40	Cowl Side Panel RH




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	36 (5VZ-FE)	Engine Room Main Wire	I7	40	Cowl Wire
I1	40	Cowl Wire	I11	40	Engine Wire
I5					


C1, C2 BLACK



 
C8 GRAY




C9

 


D1 BLACK

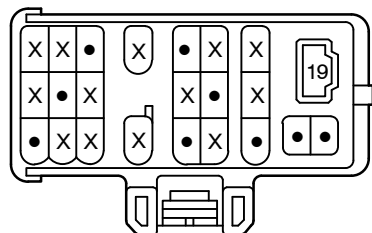


E9 (A)

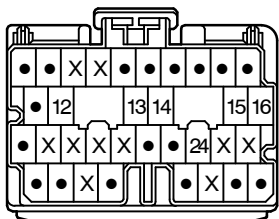


E10 (B)

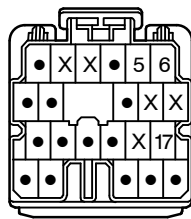


I2 BLACK

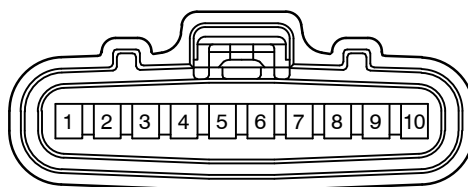


I3, I4, I5 BLACK

 

I14

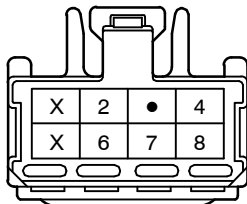

J9

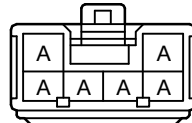


(Hint : See Page 7)

N1 GRAY



P1 GRAY

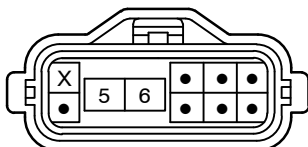

S1 (A) BLACK



S2 (B)

