




8. REMOVE STEERING KNUCKLE LH OIL SEAL

- (a) Using a screwdriver and a hammer, remove the oil seal.

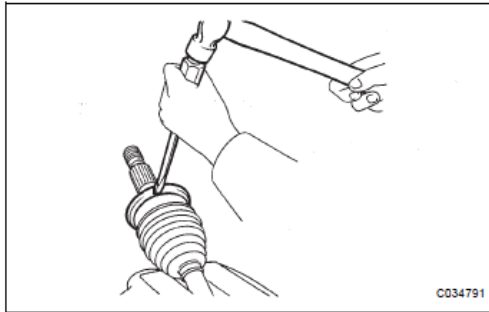

This one right here




REASSEMBLY

1. INSTALL STEERING KNUCKLE OIL SEAL

- (a) Using a screwdriver and a hammer, install a new oil seal.

NOTICE:


Do not damage the oil seal.

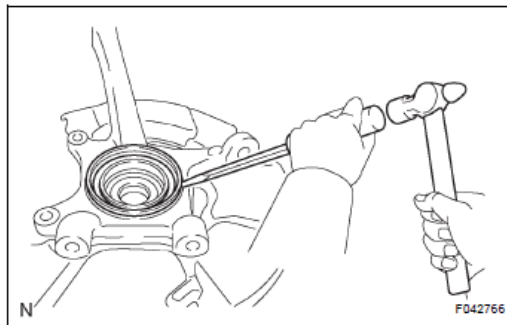

DISASSEMBLY

1. REMOVE STEERING KNUCKLE OIL SEAL

- (a) Using a screwdriver and hammer, remove the steering knuckle LH oil seal.

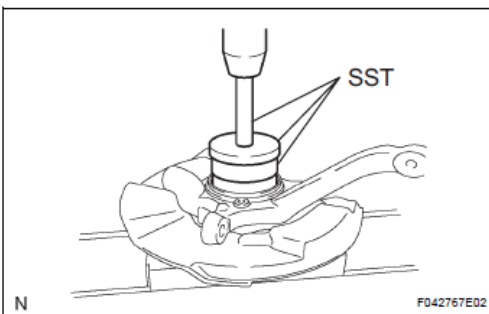

4. INSTALL STEERING KNUCKLE OIL SEAL

- (a) Using SST and a press, install a new steering knuckle oil seal.

SST 09527-17011, 09950-70010 (09951-07100), 09951-01000