


STOP LIGHT

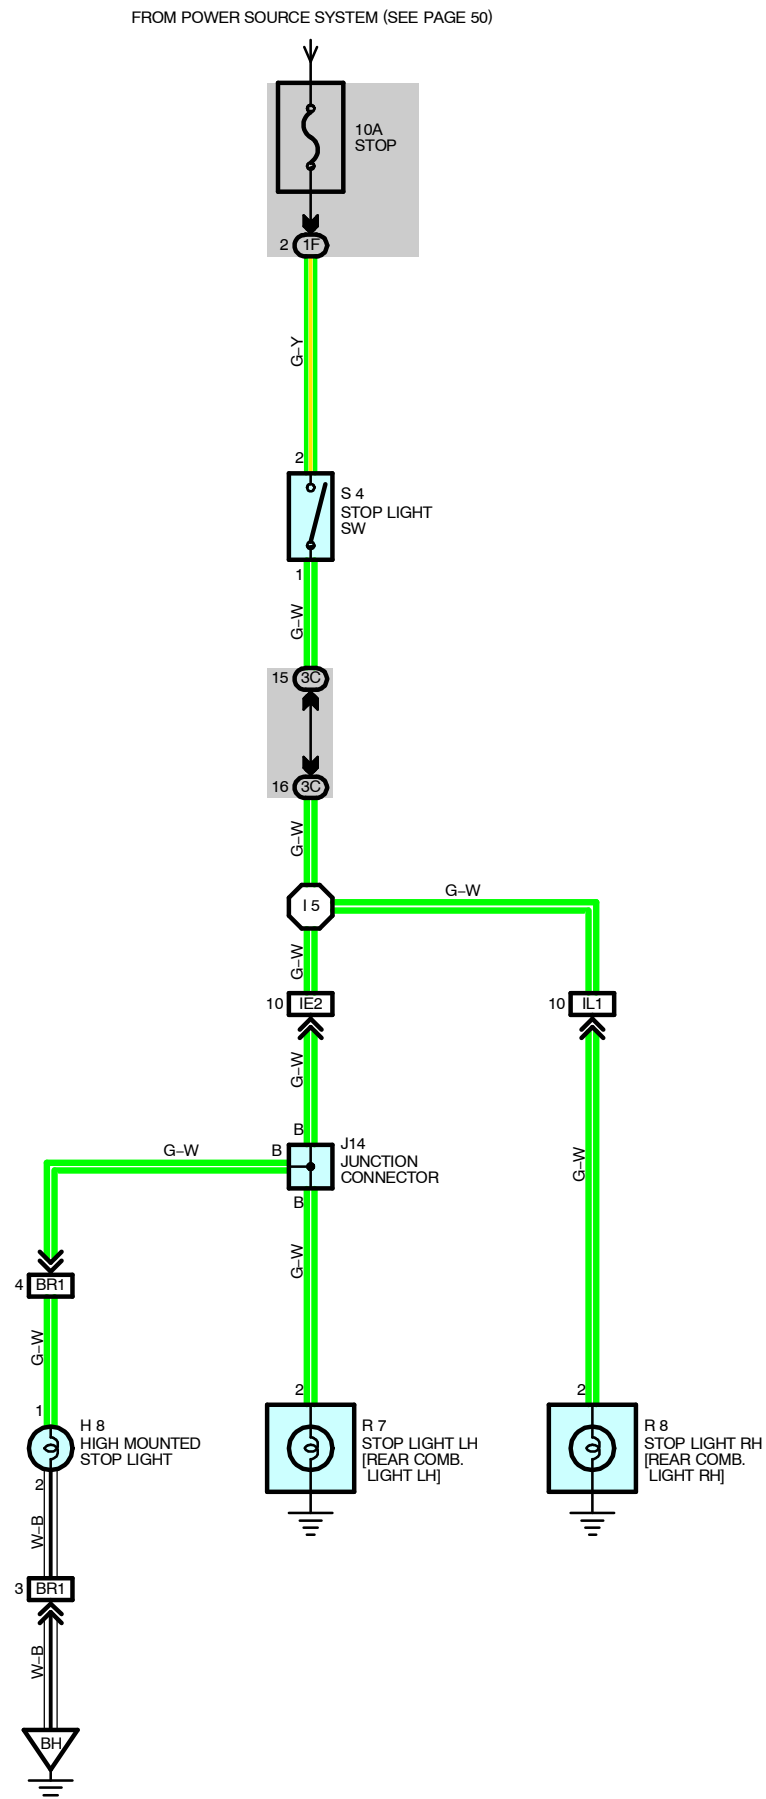

SERVICE HINTS**S4 STOP LIGHT SW**

2-1 : Closed with brake pedal depressed

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
H8	34	R7	35	S4	33
J14	34	R8	35		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IL1	42	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	44	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
BH	44	Left Quarter Panel Inner

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	42	Cowl Wire			