

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	3. Starter 4. Starter relay	ST-15 ST-17
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-311 DI-314 IN-27
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-314
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-308 DI-314 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-308 DI-314
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-308 DI-314
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	AC-91 DI-311
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	AC-91 DI-314
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-314
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-311 DI-314
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-314 DI-339
Surging (Poor driveability)	1. Fuel pump control circuit	DI-314
Soon after starting (Engine stall)	1. Fuel pump control circuit	DI-314
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	AC-91 IN-27