


Last Modified: 4-26-2007		1.6 G
Service Category: Engine/Hybrid System	Section: Starting	
Model Year: 2007	Model: 4Runner	Doc ID: RM000002DYQ003X
Title: 1GR-FE STARTING: IGNITION SWITCH: INSPECTION (2007 4Runner)		

INSPECTION

1. INSPECT IGNITION OR STARTER SWITCH ASSEMBLY

(a) Inspect the switch continuity.

Standard:

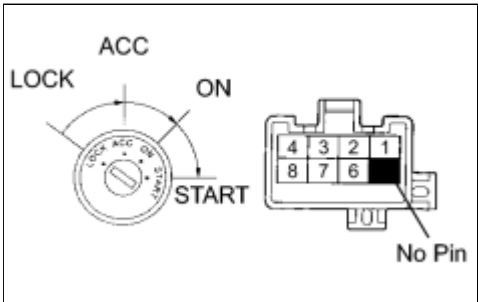

TERMINAL NO.	SWITCH POSITION	SPECIFIED CONDITION
Between all terminals	LOCK	No continuity
2 - 3	ACC	Continuity
2 - 3 - 4 6 - 7	ON	Continuity
1 - 2 - 4 6 - 7 - 8	START	Continuity

If the result is not as specified, replace the switch assembly.

