


VEHICLE LIFT AND SUPPORT LOCATIONS

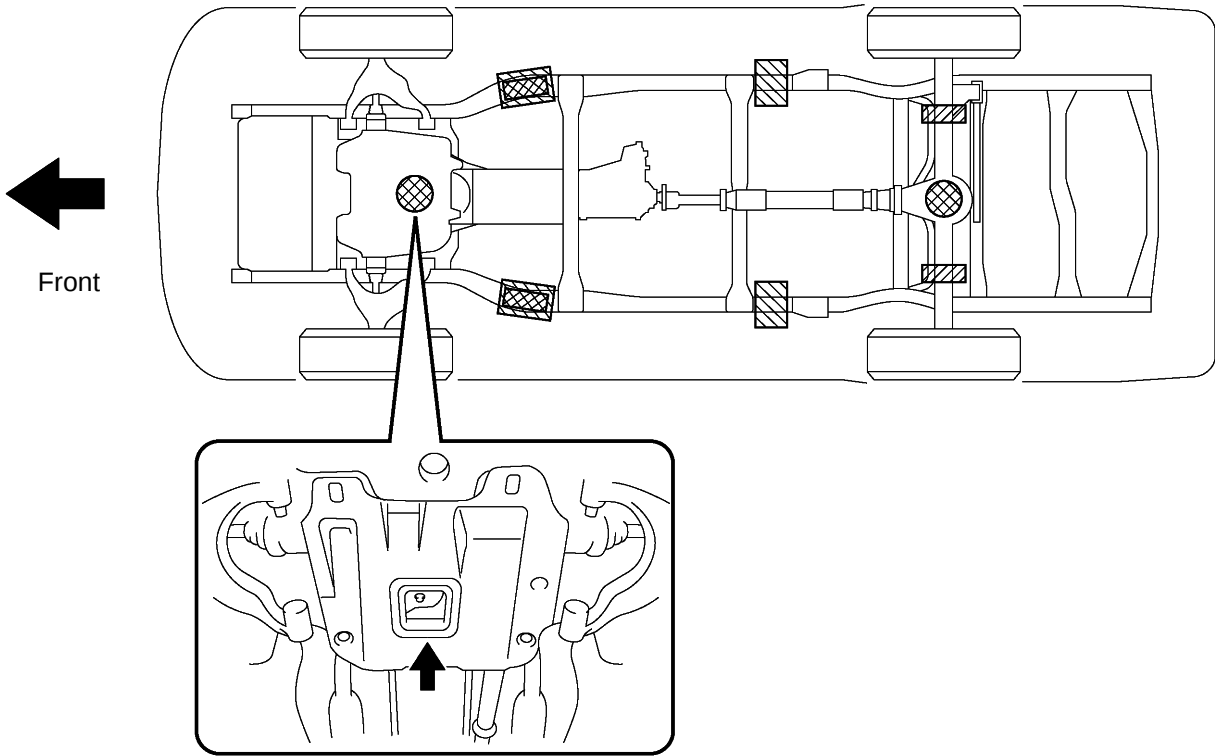

JACK POSITION 

Front Center of crossmember

Rear Center of rear axle housing

CAUTION: When jacking up the front and rear, make sure the vehicle is not carrying any extra weight.

SUPPORT POSITION

Safety stand 

Swing arm type lift 

Y

D29295