


Position of Parts in Engine Compartment

[1GR-FE]

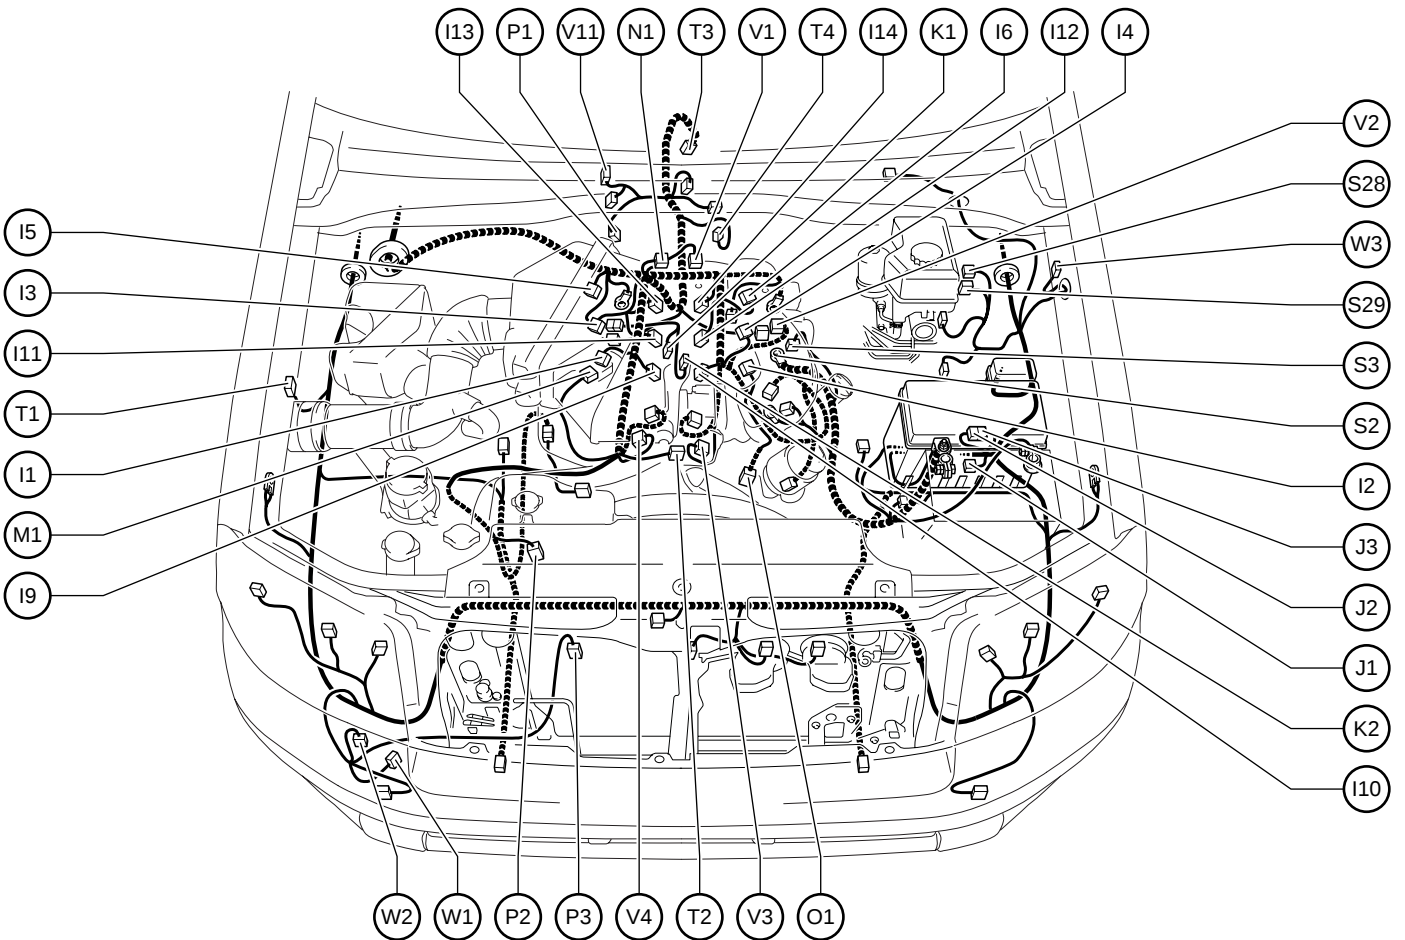

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Ignition Coil and Igniter No.5
- I 6 Ignition Coil and Igniter No.6
- I 9 Injector No.1
- I 10 Injector No.2
- I 11 Injector No.3
- I 12 Injector No.4
- I 13 Injector No.5
- I 14 Injector No.6

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector

- K 1 Knock Sensor (Bank 1)
- K 2 Knock Sensor (Bank 2)

- M 1 Mass Air Flow Meter

- N 1 Noise Filter (Ignition No.1)

- O 1 Oil Pressure SW

- P 1 Park/Neutral Position SW
- P 2 Power Steering Oil Pressure SW
- P 3 Pressure SW

- S 2 Starter
- S 3 Starter
- S28 Skid Control ECU with Actuator
- S29 Skid Control ECU with Actuator


- T 1 Theft Deterrent Horn
- T 2 Throttle Control Motor
Throttle Position Sensor
- T 3 Transfer Shift Actuator
- T 4 Turbine Speed Sensor

- V 1 VSV (ACIS)
- V 2 VSV (Purge)
- V 3 VVT Sensor (Bank 2)
- V 4 VVT Sensor (Bank 1)
- V11 Vehicle Speed Sensor
(Electronically Controlled Transmission)

- W 1 Washer Level Sensor
- W 2 Washer Motor
- W 3 Wireless Door Lock Buzzer

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

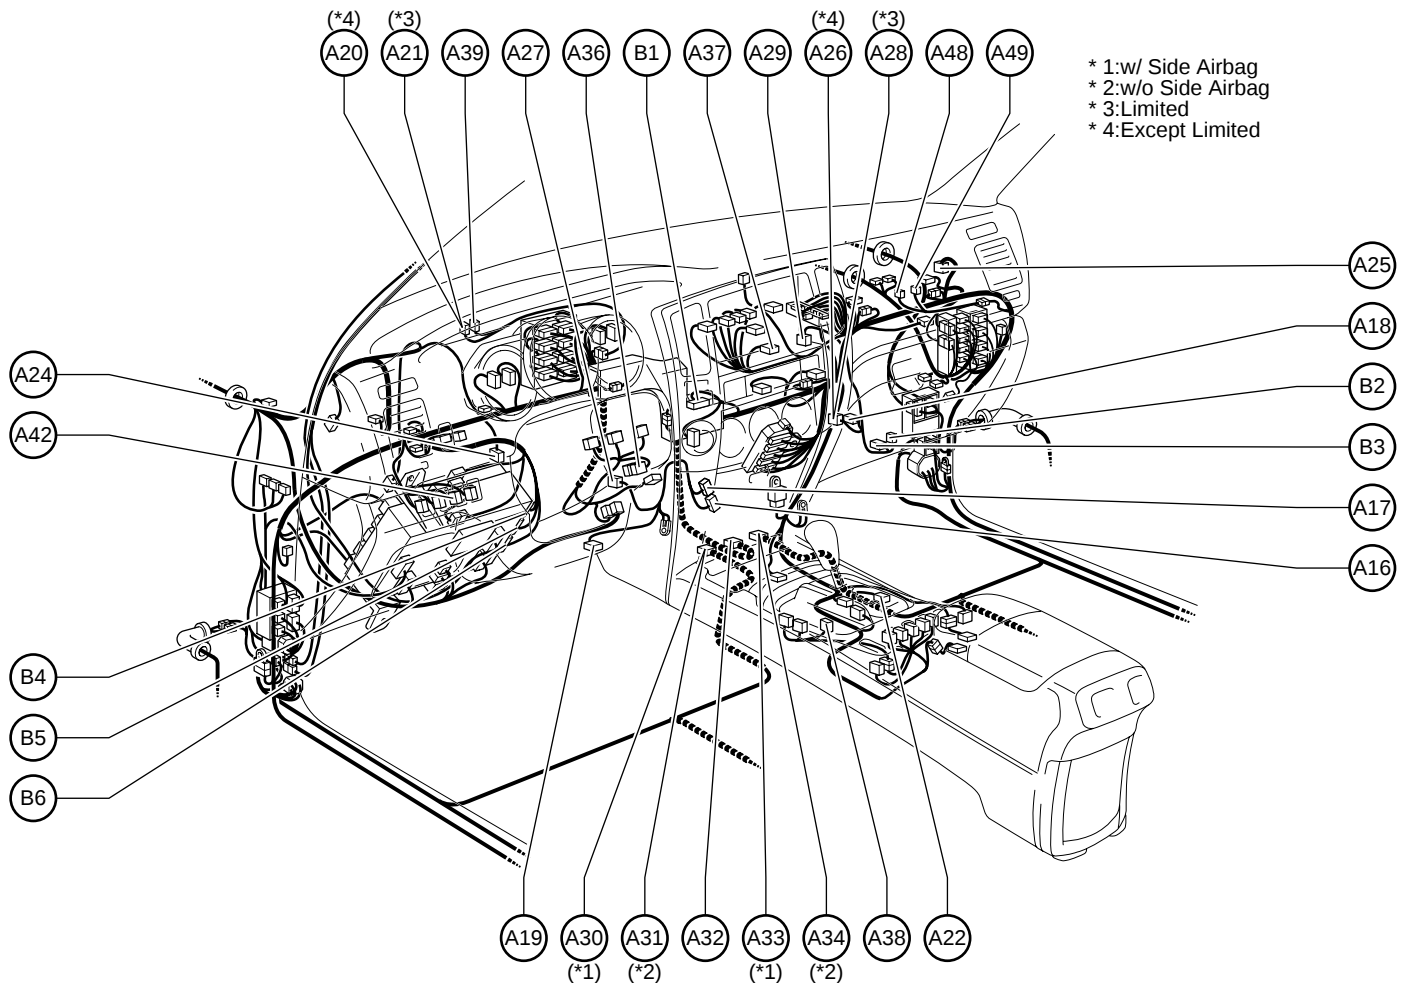


- * 1:w/ Side Airbag
- * 2:w/o Side Airbag
- * 3:Limited
- * 4:Except Limited

A16 A/C Control Assembly
 A17 A/C Control Assembly
 A18 A/C Evaporator Temp. Sensor
 A19 A/C Room Temp. Sensor
 A20 A/C Solar Sensor
 A21 A/C Solar Sensor
 A22 A/T Shift Lever Illumination
 A24 Accel Position Sensor
 A25 Air Inlet Control Servo Motor
 A26 Air Mix Control Servo Motor
 A27 Air Mix Control Servo Motor LH
 A28 Air Mix Control Servo Motor RH
 A29 Air Vent Mode Control Servo Motor
 A30 Airbag Sensor Assembly
 A31 Airbag Sensor Assembly
 A32 Airbag Sensor Assembly
 A33 Airbag Sensor Assembly
 A34 Airbag Sensor Assembly
 A36 Airbag Squib (Steering Wheel Pad)
 A37 Antenna Amplifier
 A38 Ashtray Illumination
 A39 Automatic Light Control Sensor
 A42 Auto LSD SW
 A48 Airbag Squib (Front Passenger Airbag Assembly)
 A49 Airbag Squib (Front Passenger Airbag Assembly)

B 1 Back Door Power Window Control SW
 B 2 Blower Motor
 B 3 Blower Motor Controller
 B 4 Body ECU
 B 5 Body ECU
 B 6 Body ECU

Position of Parts in Instrument Panel

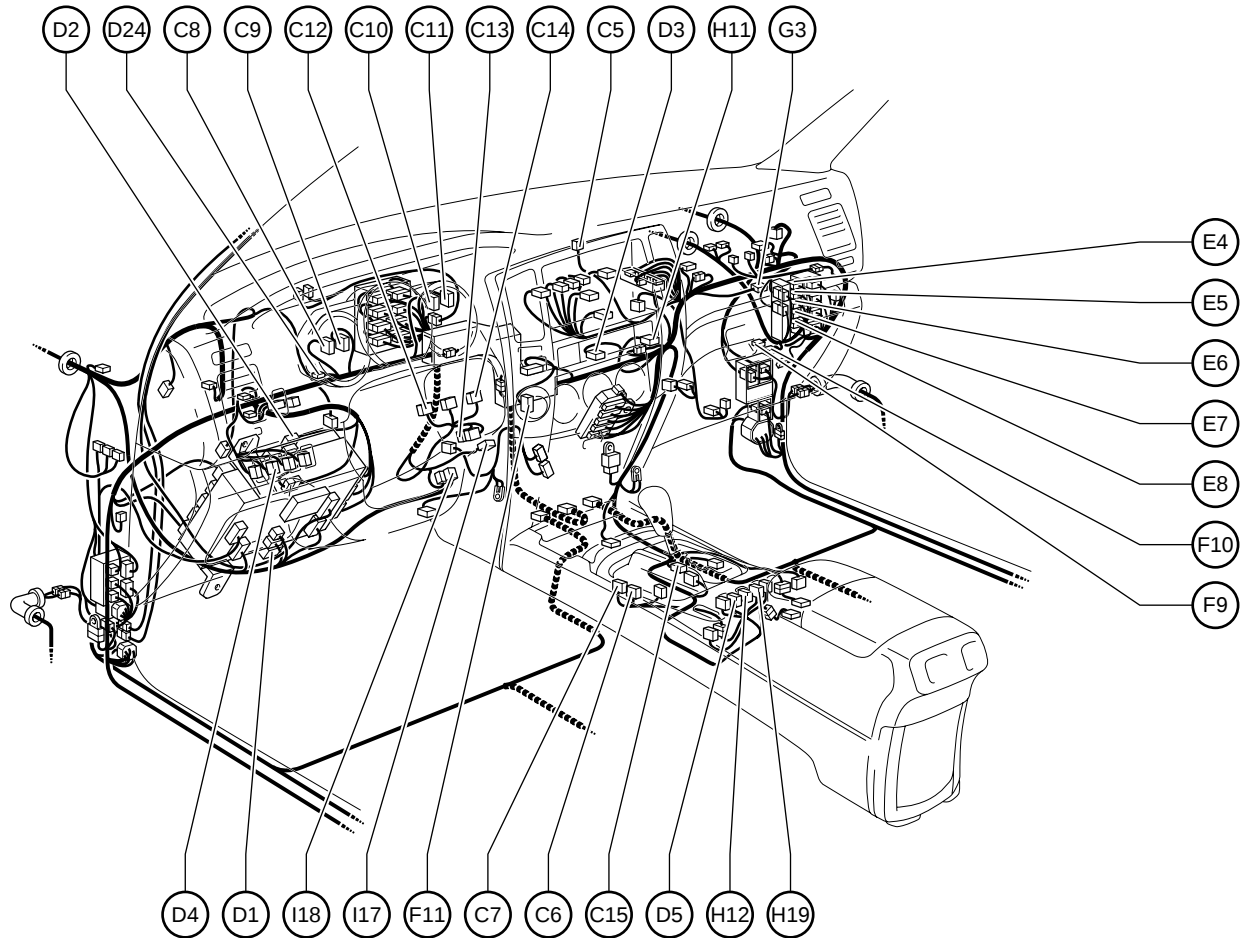

C 5 Center Speaker
 C 6 Cigarette Lighter
 C 7 Cigarette Lighter Illumination
 C 8 Combination Meter
 C 9 Combination Meter
 C10 Combination Meter
 C11 Combination Meter
 C12 Combination SW
 C13 Combination SW
 C14 Combination SW
 C15 Cup Holder Illumination

D 1 Data Link Connector 3
 D 2 Daytime Running Light Relay
 Turn Signal Flasher Relay
 D 3 Defogger SW
 Heater Control Panel
 Passenger Seat Belt Warning Light
 Security Indicator Light
 D 4 Diff. Lock SW
 D 5 Downhill Assist Control SW
 D24 Diode (Rear Wiper)

E 4 Engine Control Module
 E 5 Engine Control Module
 E 6 Engine Control Module
 E 7 Engine Control Module
 E 8 Engine Control Module

F 9 4WD Control ECU
 F10 4WD Control ECU
 F11 4WD Control SW


G 3 Glove Box Light

H11 Hazard SW
 H12 Height Control SW
 H19 Height Control Mode Select SW

I 17 Ignition Key Cylinder Light
 Transponder Key Amplifier
 I 18 Ignition SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

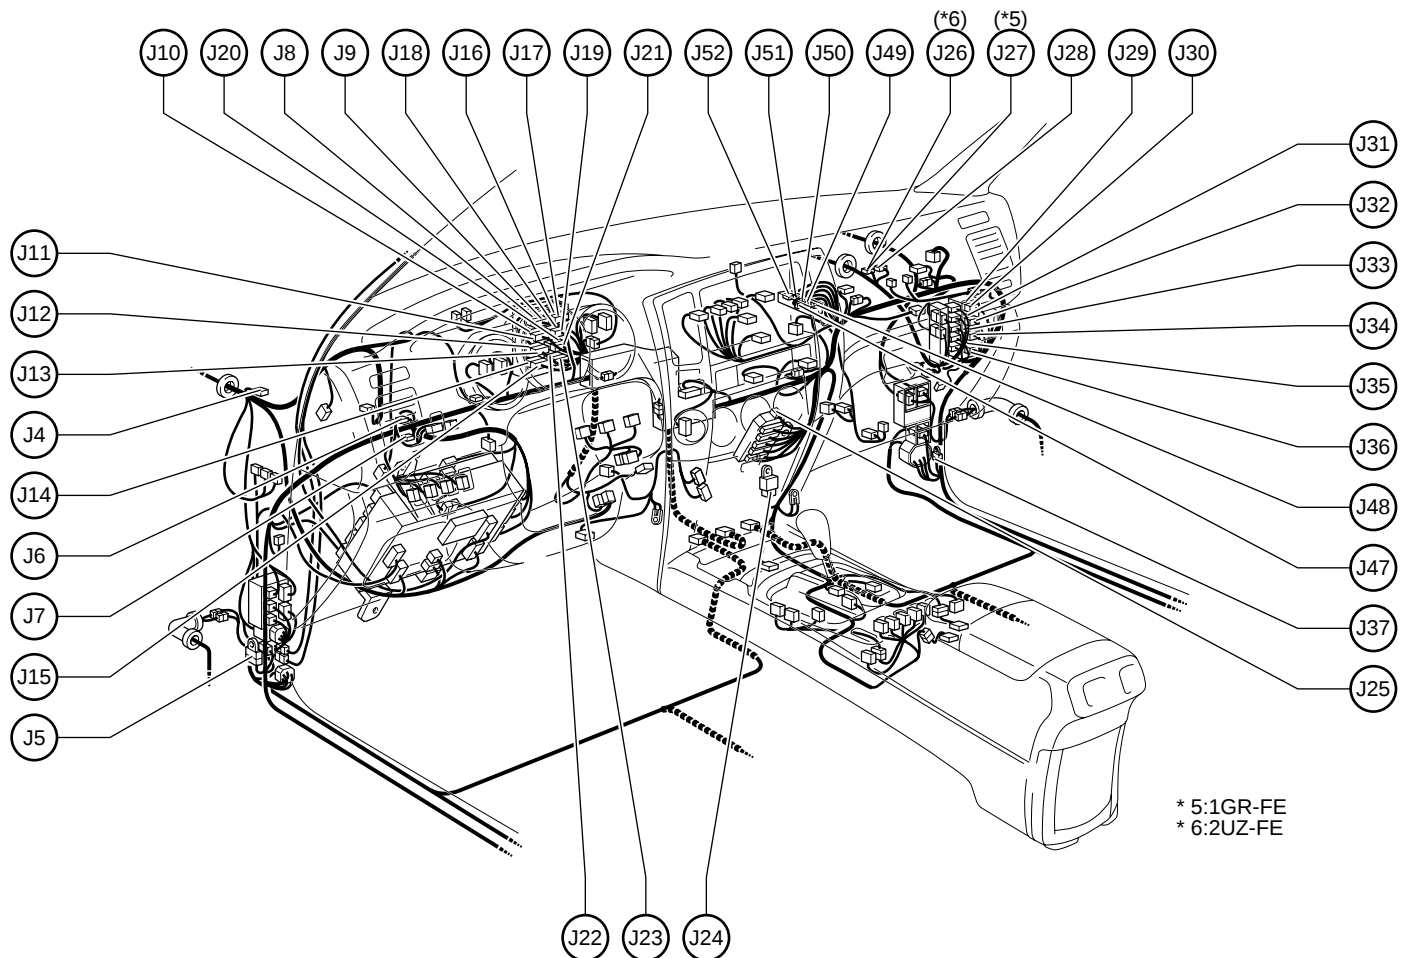

J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector

J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 47 Junction Connector
J 48 Junction Connector
J 49 Junction Connector
J 50 Junction Connector
J 51 Junction Connector
J 52 Junction Connector