


FRONT FOG LIGHT (USA)

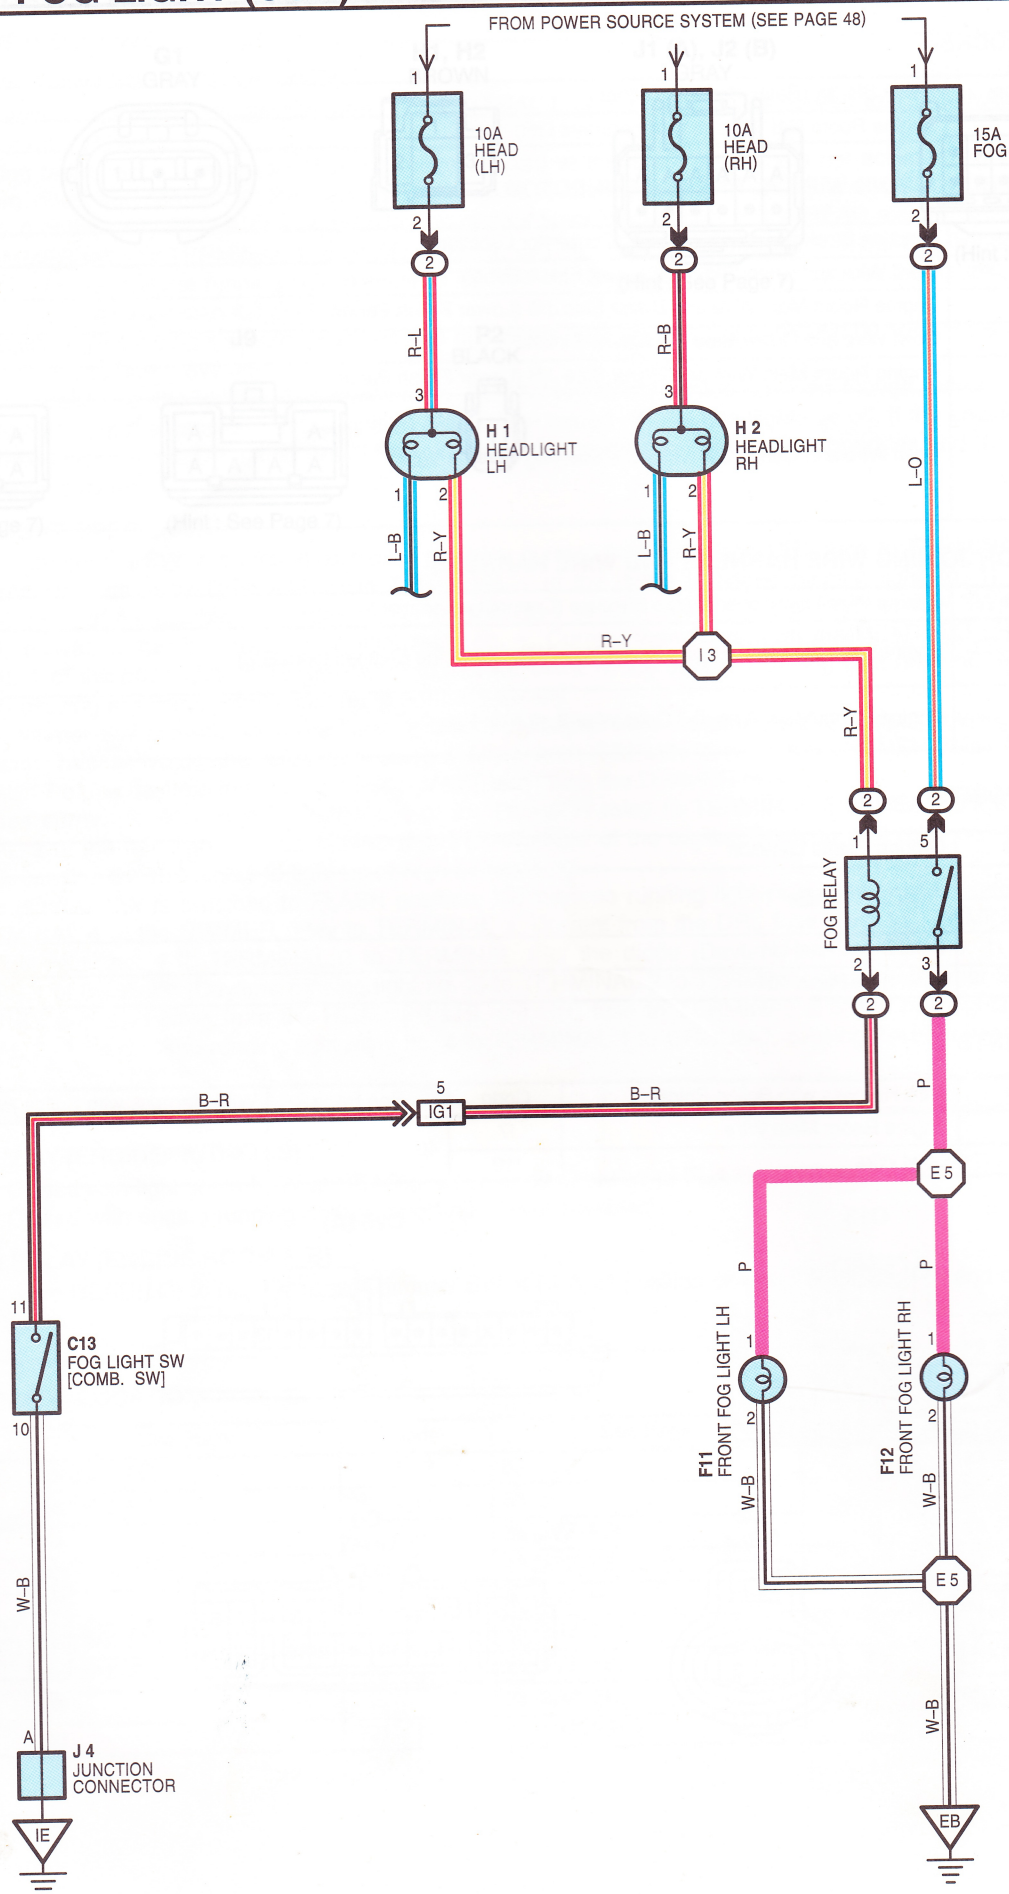

SERVICE HINTS

FOG RELAY [ENGINE ROOM R/B]

5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog light SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	30	F12	26 (5VZ-FE)	H2	26 (5VZ-FE)
F11	26 (5VZ-FE)	H1	26 (5VZ-FE)	J4	31

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20	Engine Room R/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	36 (5VZ-FE)	Front Left Fender
IE	40	Cowl Side Panel LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	36 (5VZ-FE)	Engine Room Main Wire	I3	40	Engine Room Main Wire

C13

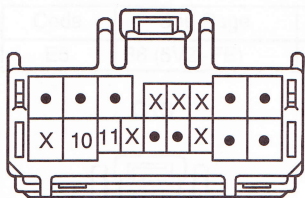


F11




F12



 
**H1
BROWN**



**H2
BROWN**

 

J4

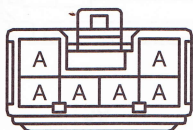

(Hint : See Page 7)