

POWER WINDOW

SERVICE HINTS

B16 (A) BODY ECU

- 3-GROUND : Always approx. 12 volts
- 10-GROUND : Approx. 12 volts with ignition SW at **ON** position
- (A) 19-GROUND : Continuity with front LH door opened

PWR RELAY [DRIVER SIDE J/B]

- 5-3 : Closed with ignition SW on and stays at 12 volts for 43 seconds after the ignition SW is turned off, but if a door is opened in this 43 seconds period, voltage will drop to 0 volts

D16 DOOR COURTESY SW FRONT LH

- 1-GROUND : Continuity with door opened

P4 POWER WINDOW CONTROL SW FRONT RH

- 7-GROUND : Always approx. 12 volts
- 12-GROUND : Always continuity

P5, P6 POWER WINDOW CONTROL SW REAR LH, RH

- 4-GROUND : Approx. 12 volts with ignition SW on and stays at 12 volts for 43 seconds after the ignition SW is turned off, but if a door is opened in this 43 seconds period, voltage will drop to 0 volts

P7 (A) POWER WINDOW MASTER SW

- (A) 4-GROUND : Always continuity
- (A) 10-GROUND : Approx. 12 volts with ignition SW on and stays at 12 volts for 43 seconds after the ignition SW is turned off, but if a door is opened in this 43 seconds period, voltage will drop to 0 volts
- (A) 3-GROUND : Always approx. 12 volts

WINDOW LOCK SW

Open with window lock SW at **LOCK** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B16	A 30	J11	B 31	P8	33
D16	32	P4	33	P9	33
J4	31	P5	33	P10	33
J9	31	P6	33	P11	33
J10	A 31	P7	A 33	P26	B 33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3E	24	Cowl Wire and Center J/B (Near the Steering Column Tube)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	40	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF2		
IK1	40	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BW1	42	Rear Door LH Wire and Cowl Wire (Left Center Pillar)
BX1	42	Rear Door RH Wire and Cowl Wire (Right Center Pillar)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	40	Cowl Side Panel LH
IF	40	Cowl Side Panel RH