


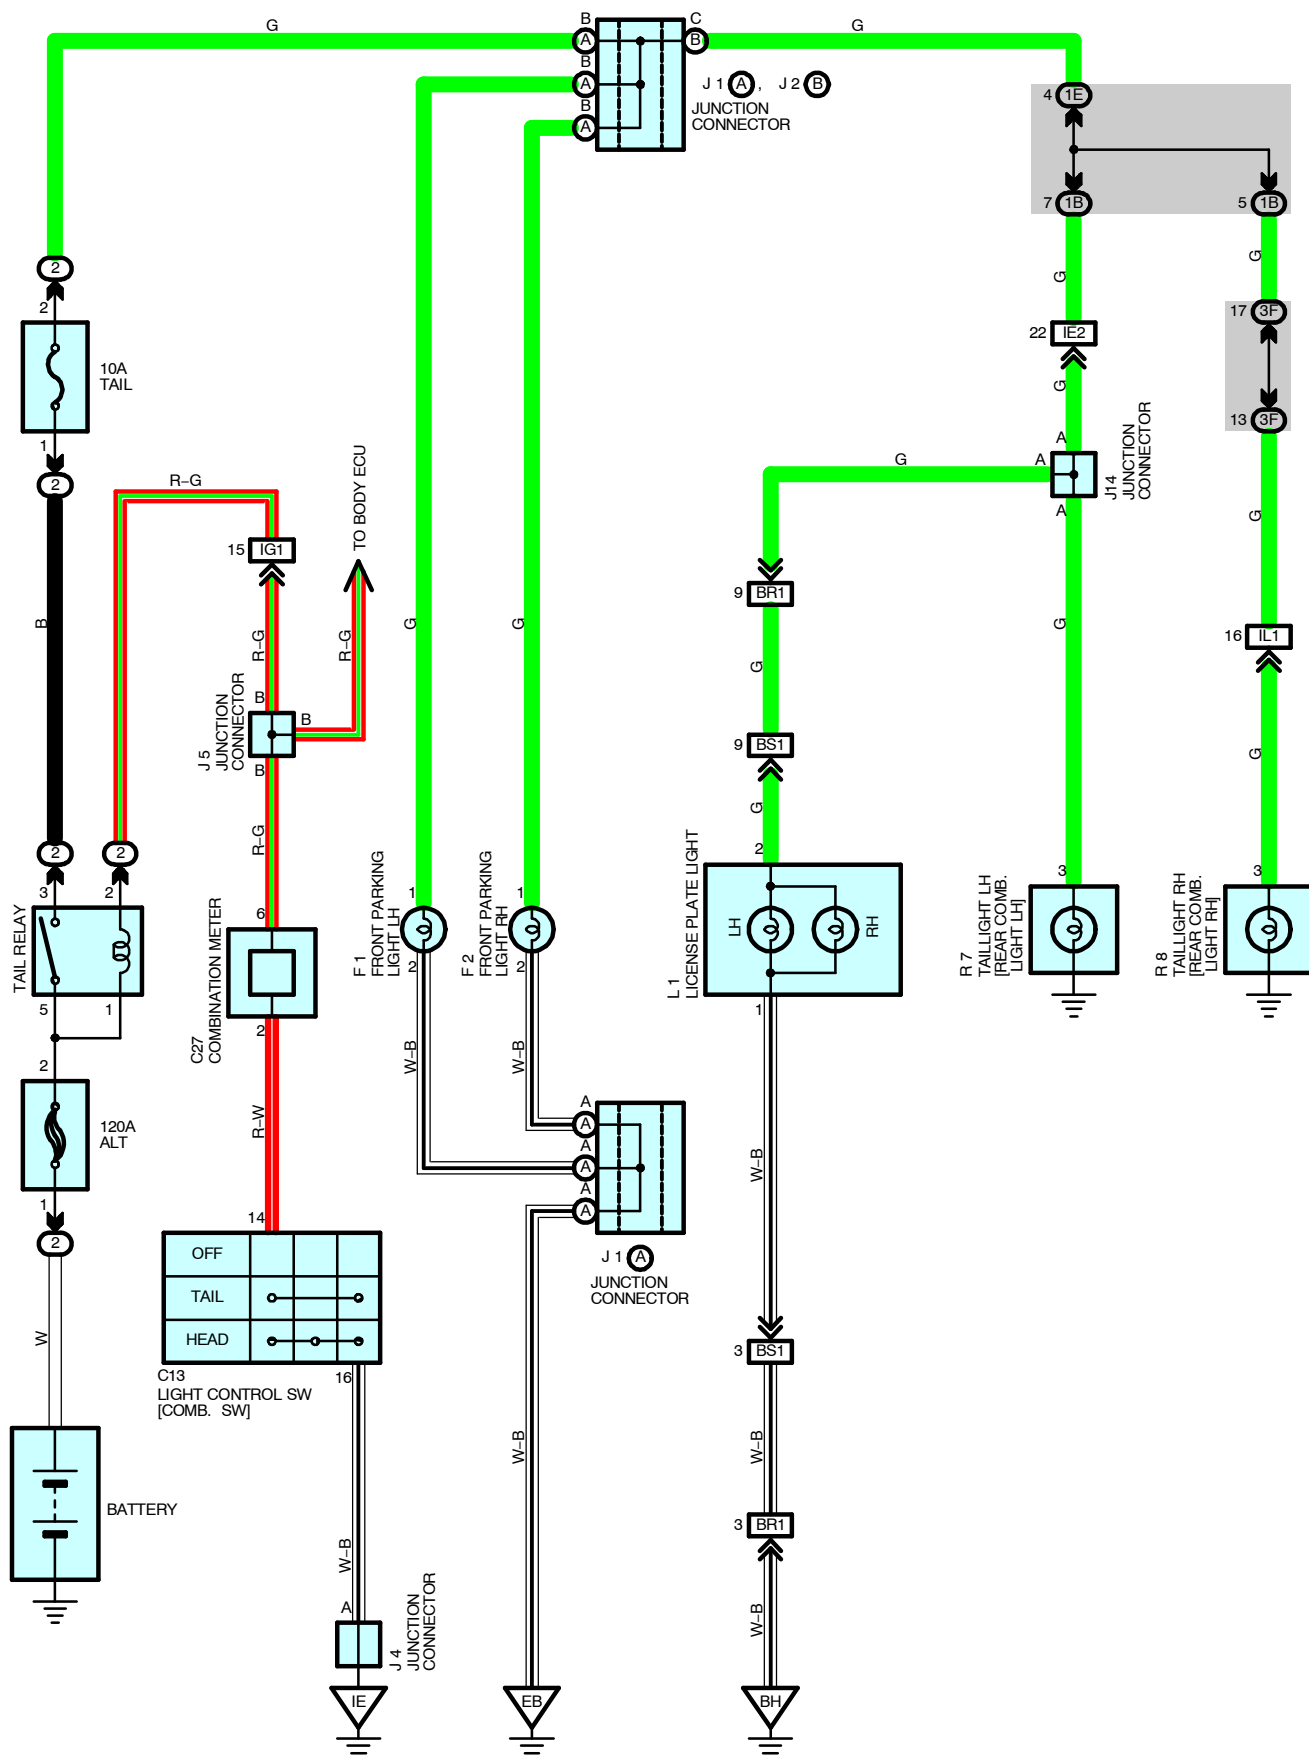

SERVICE HINTS

C13 LIGHT CONTROL SW [COMB. SW]

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

TAIL RELAY [ENGINE ROOM R/B]

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	32	J1	A	29 (5VZ-FE)	J14
C27	32			31 (3RZ-FE)	L1
F1	28 (5VZ-FE)	J2	B	29 (5VZ-FE)	R7
	30 (3RZ-FE)			31 (3RZ-FE)	R8
F2	28 (5VZ-FE)	J4		33	
	30 (3RZ-FE)	J5		33	

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
3F	26	Cowl Wire and Center J/B (Near the Steering Column Tube)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IL1	42	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	44	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BS1	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	38 (5VZ-FE)	Front Left Fender
	40 (3RZ-FE)	
IE	42	Cowl Side Panel LH
BH	44	Left Quarter Panel Inner