




Front No.2 Speaker Assy

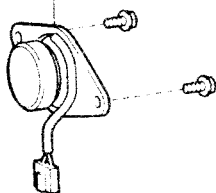


Navigation Antenna Assy

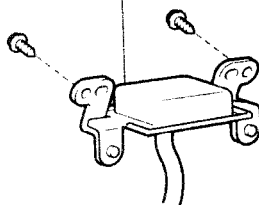


Stereo Component
Speaker Assy Front

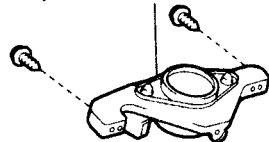

Front No.1 Speaker Assy

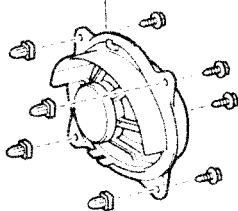

Rear Speaker Assy

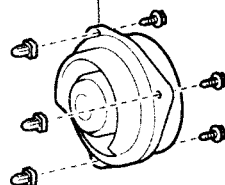

NAVIGATION ANTENNA ASSY REPLACEMENT


HINT:

COMPONENTS: See page 67-2

1. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY(See page 71-14)**

HINT:

Refer to the instructions for removal of the instrument panel safety pad sub-assy.

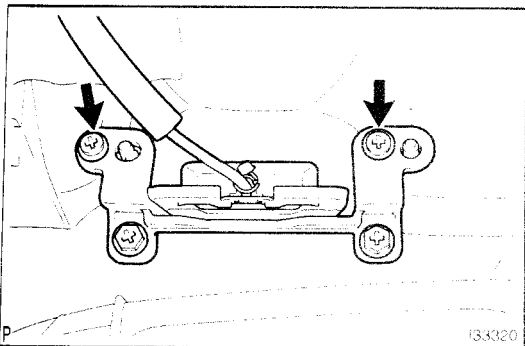

2. **REMOVE NAVIGATION ANTENNA ASSY**

- (a) Remove the 3 clamps.
- (b) Remove the 2 screws and navigation antenna assy.