


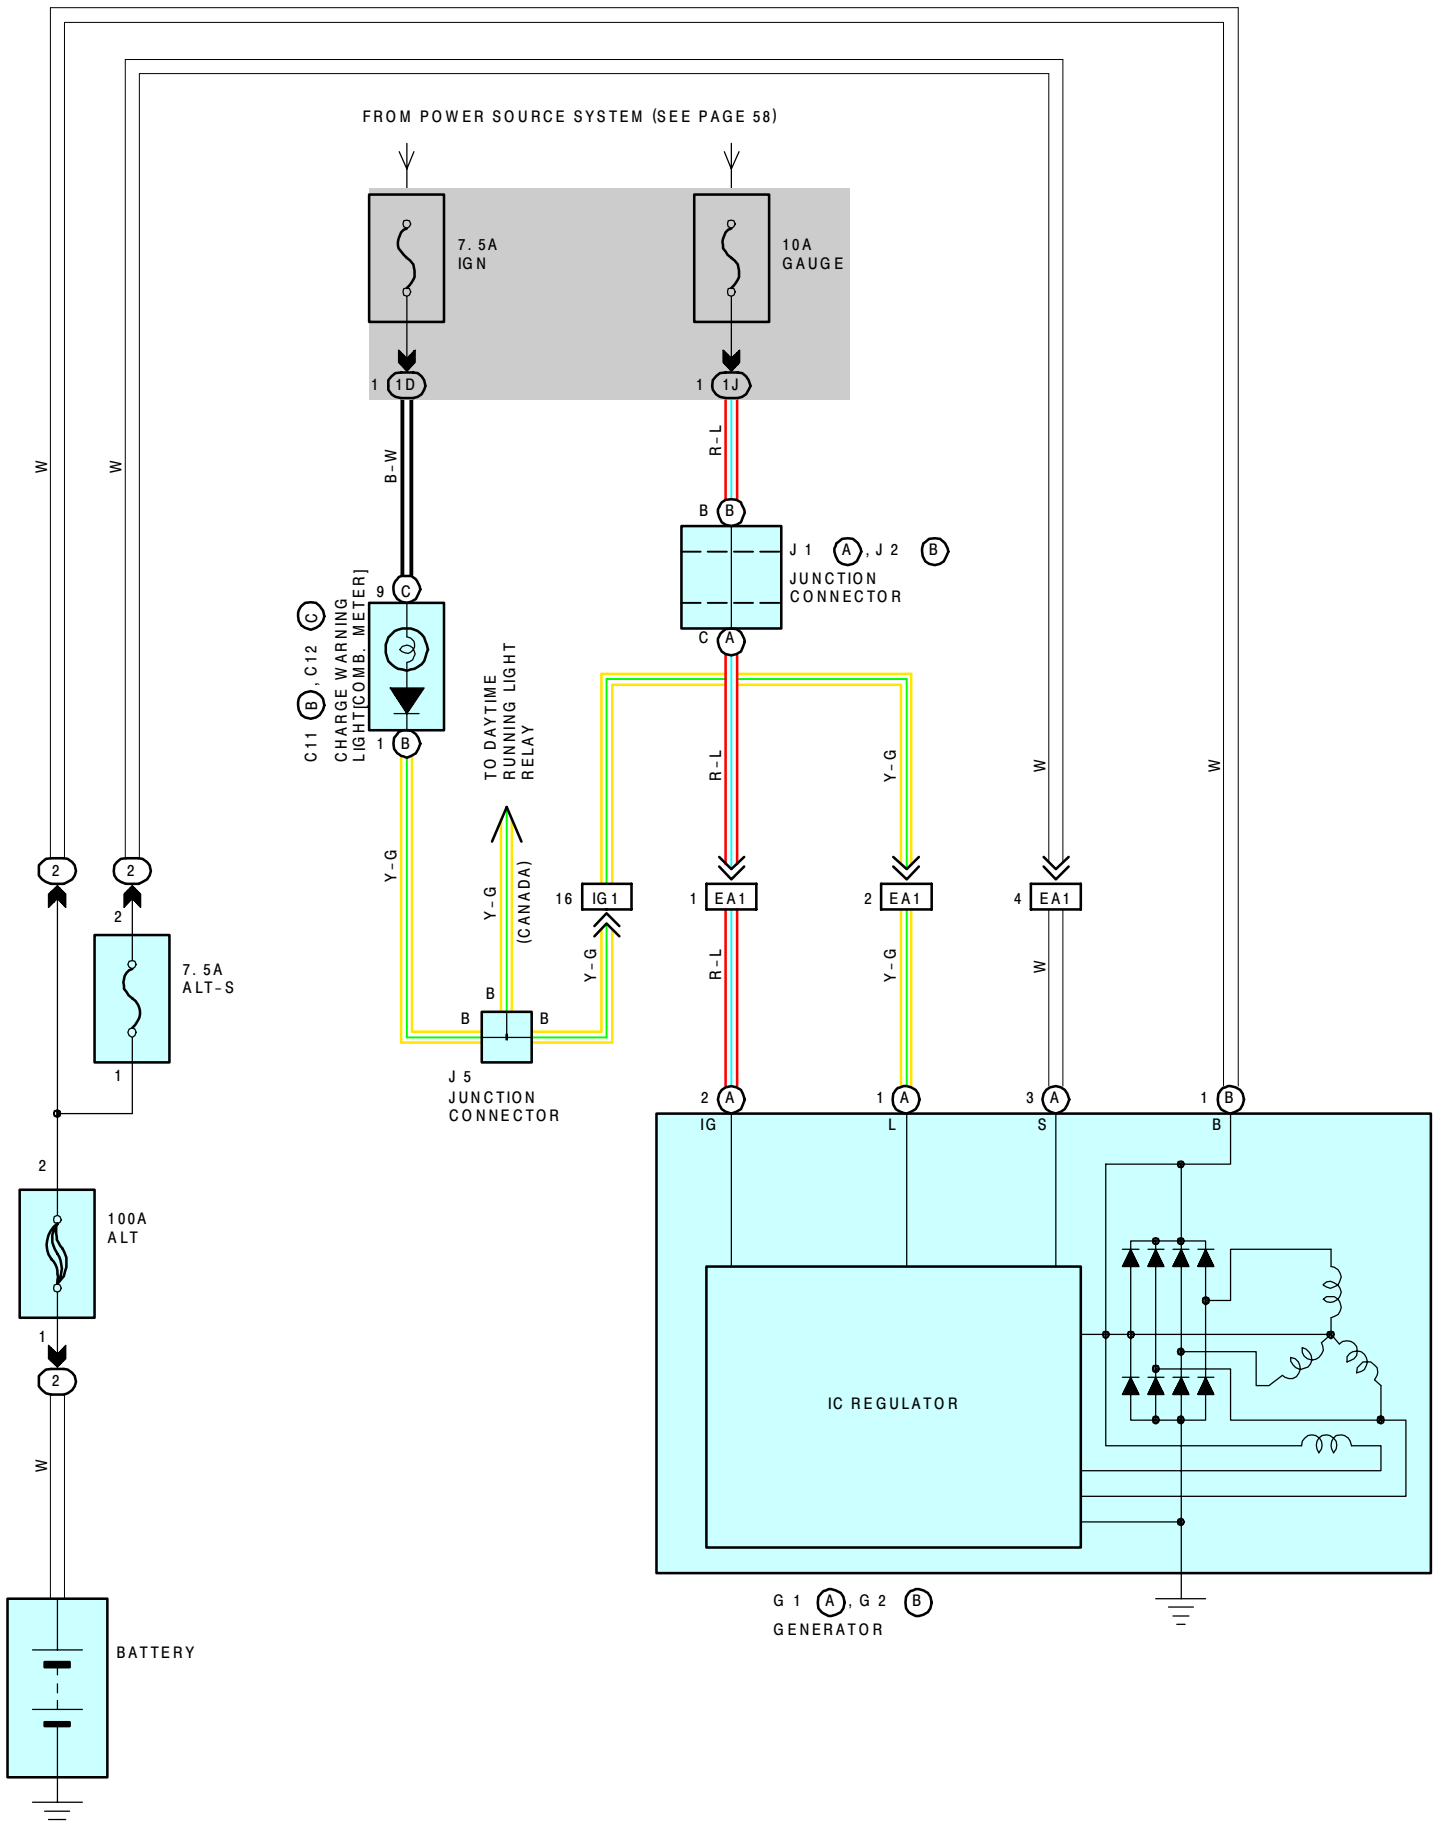

SERVICE HINTS

G 1 (A), G 2 (B) GENERATOR

- (B) 1-GROUND : 13.9-15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5-14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)
 (A) 1-GROUND : 0-4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
C11	B	30	G 2	B	26 (5VZ-FE), 28 (3RZ-FE)	J 5	31
C12	C	30	J 1	A	27 (5VZ-FE), 29 (3RZ-FE)		
G 1	A	26 (5VZ-FE), 28 (3RZ-FE)	J 2	B	27 (5VZ-FE), 29 (3RZ-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)


○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	36 (5VZ-FE) 38 (3RZ-FE)	ENGINE NO.2 WIRE AND ENGINE ROOM WIRE (NEAR THE ENGINE ROOM R/B)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)


C11 (B) BLUE

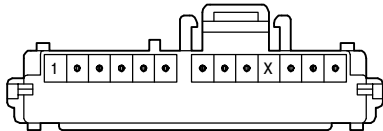


C12 (C)

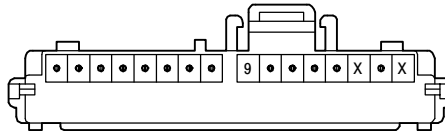


G 1 (A) GRAY

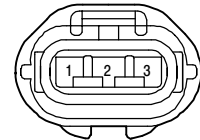

G 2 (B)

 


J 1 (A), J 2 (B) GRAY

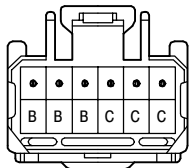

(HINT : SEE PAGE 7)

 J 5 BLACK



(HINT : SEE PAGE 7)