


Front Seat Back Recline Inoperative


Repair Procedure (Continued)

8. Using a molding remover, detach the 3 claws and remove the front seat inner cushion shield for the LH seat.

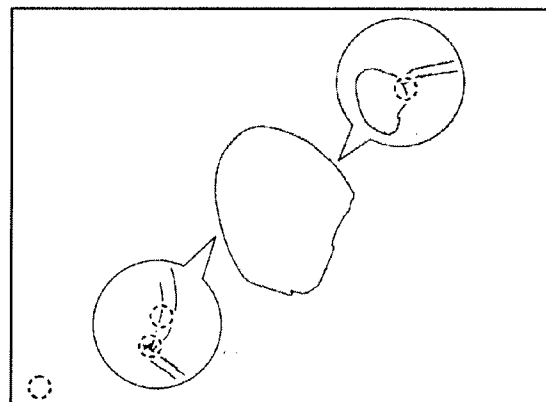

Claw

9. Using a molding remover, detach the 4 claws and remove the front seat inner cushion shield (for the passenger seat assembly).

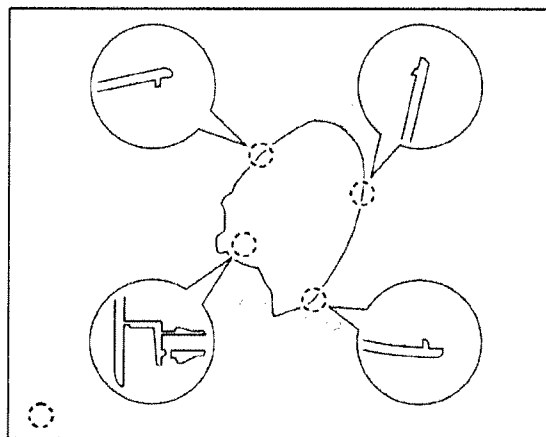

Claw


10. Remove the nut and front seat inner belt assembly.
 - A. for Driver Side:
 - Disconnect the connector and detach the 4 clamps.
 - B. for Passenger Side:
 - Disconnect the connector and detach the clamp.

Front Seat Back Recline Inoperative

Repair Procedure (Continued)


- C. Remove the attaching nut(s) and the inner front seat belt assemblies.

Figure 8-11.

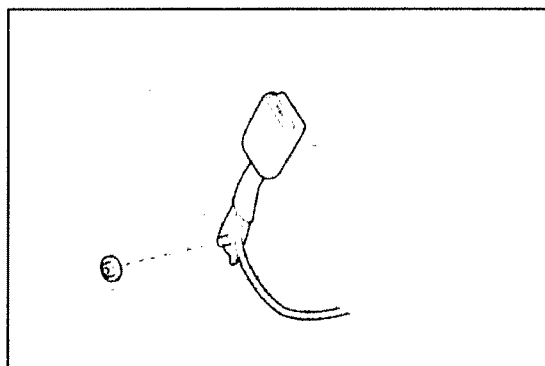

11. Remove front seatback assembly.


- A. Remove the rubber band from the seat cushion spring.

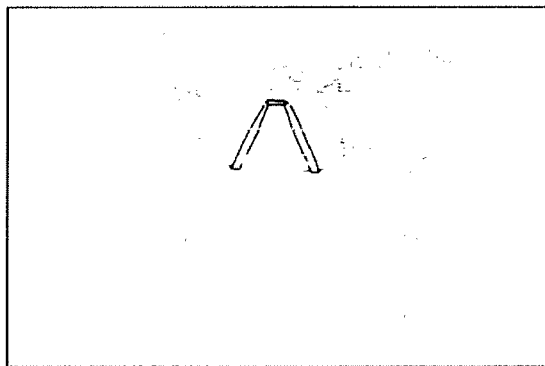

Front Seat Back Recline Inoperative

Repair Procedure (Continued)


- B. Detach the clamp and disconnect the No. 2 seat wire.

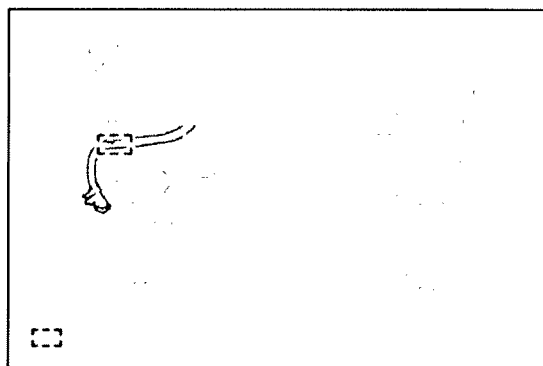

Clamp

- C. w/ Seat Heater System:

Disconnect the seat heater connector and detach the seat heater wire harness clamp.

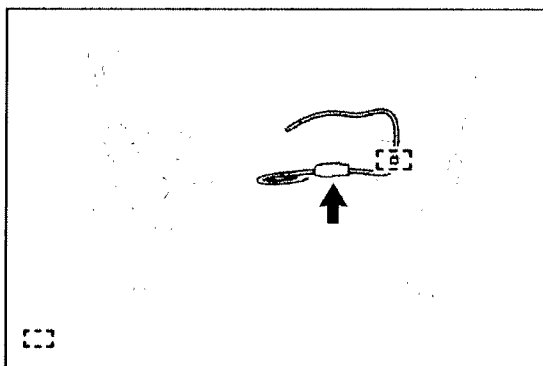


Clamp

Front Seat Back Recline Inoperative

Repair Procedure (Continued)

D. Detach the 2 hooks.


Fig. 14

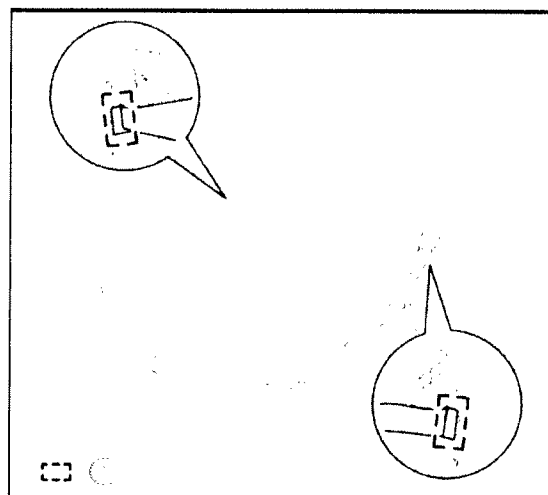

	Hook
--	------

E. Detach the claw and disconnect the airbag connector.

Fig. 15

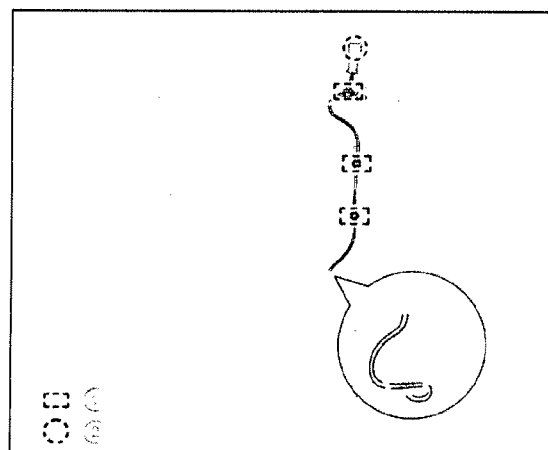

	Clamp
	Claw
	Fastening Tape


F. Detach the 3 airbag wire harness clamps.

G. Detach the fastening tape and open the cover.

Front Seat Back Recline Inoperative

Repair Procedure (Continued)

- H. Disconnect the airbag wire harness.
- I. Remove the 4 bolts and seatback assembly.

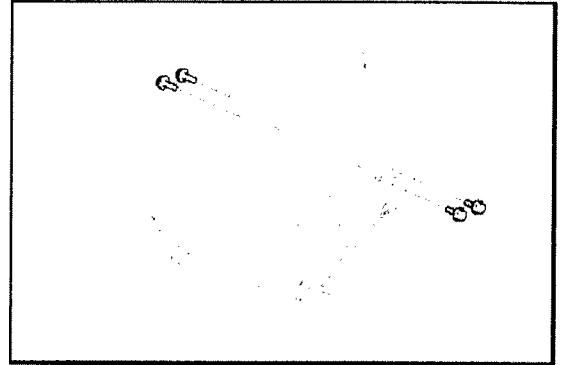

- 12. Install a new seat back sub-assembly in the reverse order from the disassembly procedure.
Torque: 42 N*m (428 kgf*cm, 31 ft*lbf)

- 13. Install front seat.

Refer to the TIS, applicable model and model year Repair Manual:

- 2010 4Runner:
Vehicle Interior – Seat – “Front Seat Assembly (for Power Seat): ”