


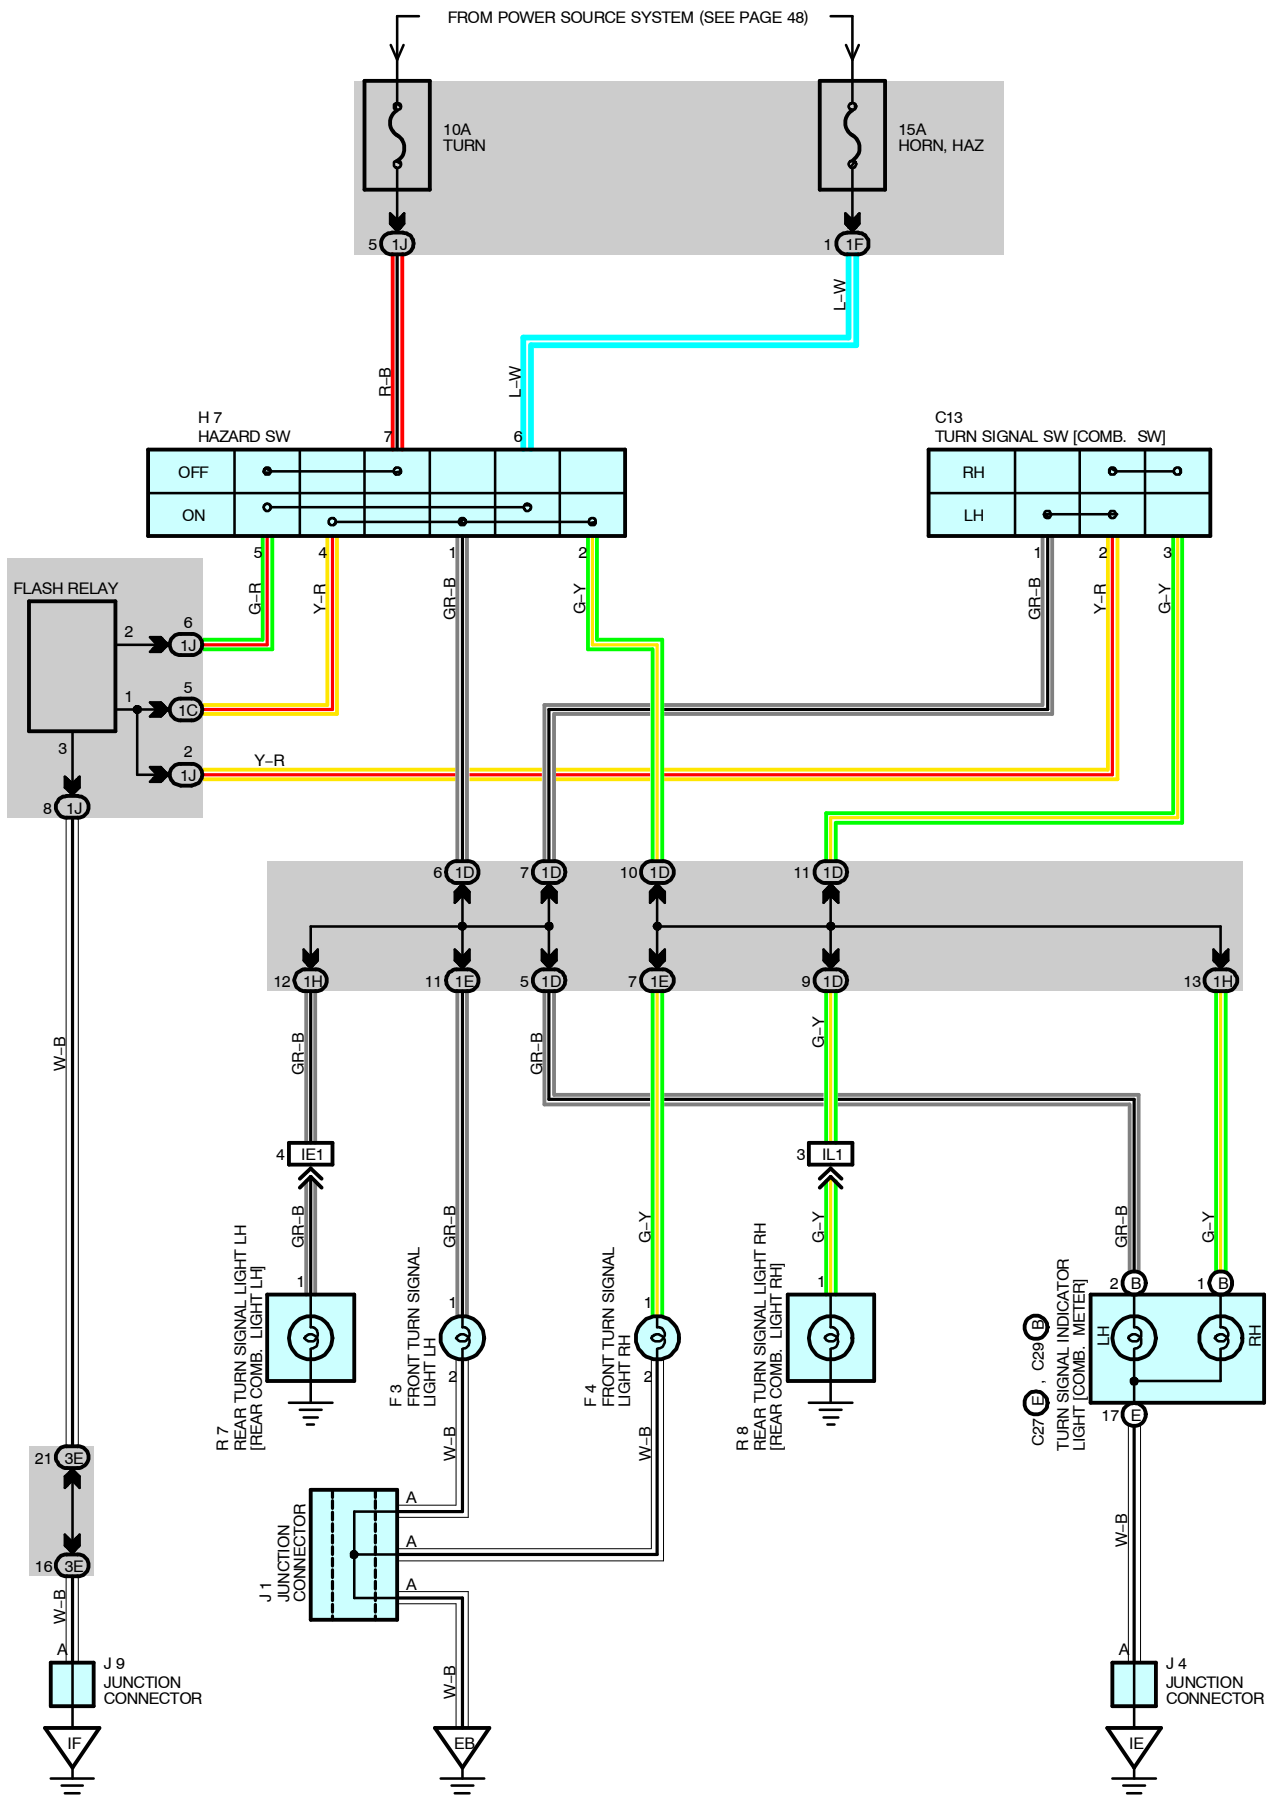

SERVICE HINTS

FLASH RELAY [DRIVER SIDE J/B]

2-GROUND : Approx. **12** volts with ignition SW on or hazard SW on

1-GROUND : Changes from **12** to **0** volts with ignition SW on and turn signal SW at **LH** or **RH** position,
or with hazard SW on

3-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	30	F4	26 (5VZ-FE)	J4	31
C27 E	30		28 (3RZ-FE)	J9	31
C29 B	30	H7	31	R7	33
F3	26 (5VZ-FE)	J1	27 (5VZ-FE)	R8	33
	28 (3RZ-FE)		29 (3RZ-FE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1D		
1E	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1H		
1J		
3E	24	Cowl Wire and Center J/B (Near the Steering Column Tube)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	40	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	36 (5VZ-FE)	Front Left Fender
	38 (3RZ-FE)	
IE	40	Cowl Side Panel LH
IF	40	Cowl Side Panel RH


C13

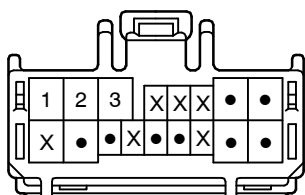


C27 (E)

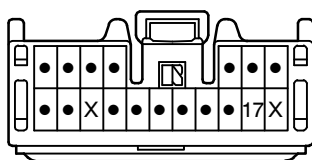


C29 (B)
BROWN

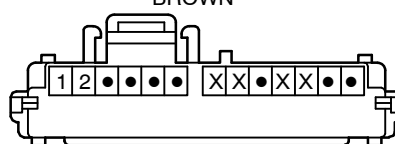


F3, F4
GRAY

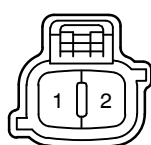

H7
BLACK

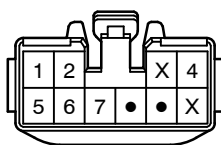


J1
GRAY

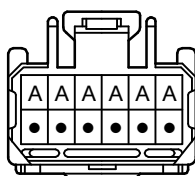

(Hint : See Page 7)

J4, J9

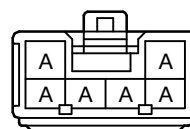

(Hint : See Page 7)

R7, R8

