


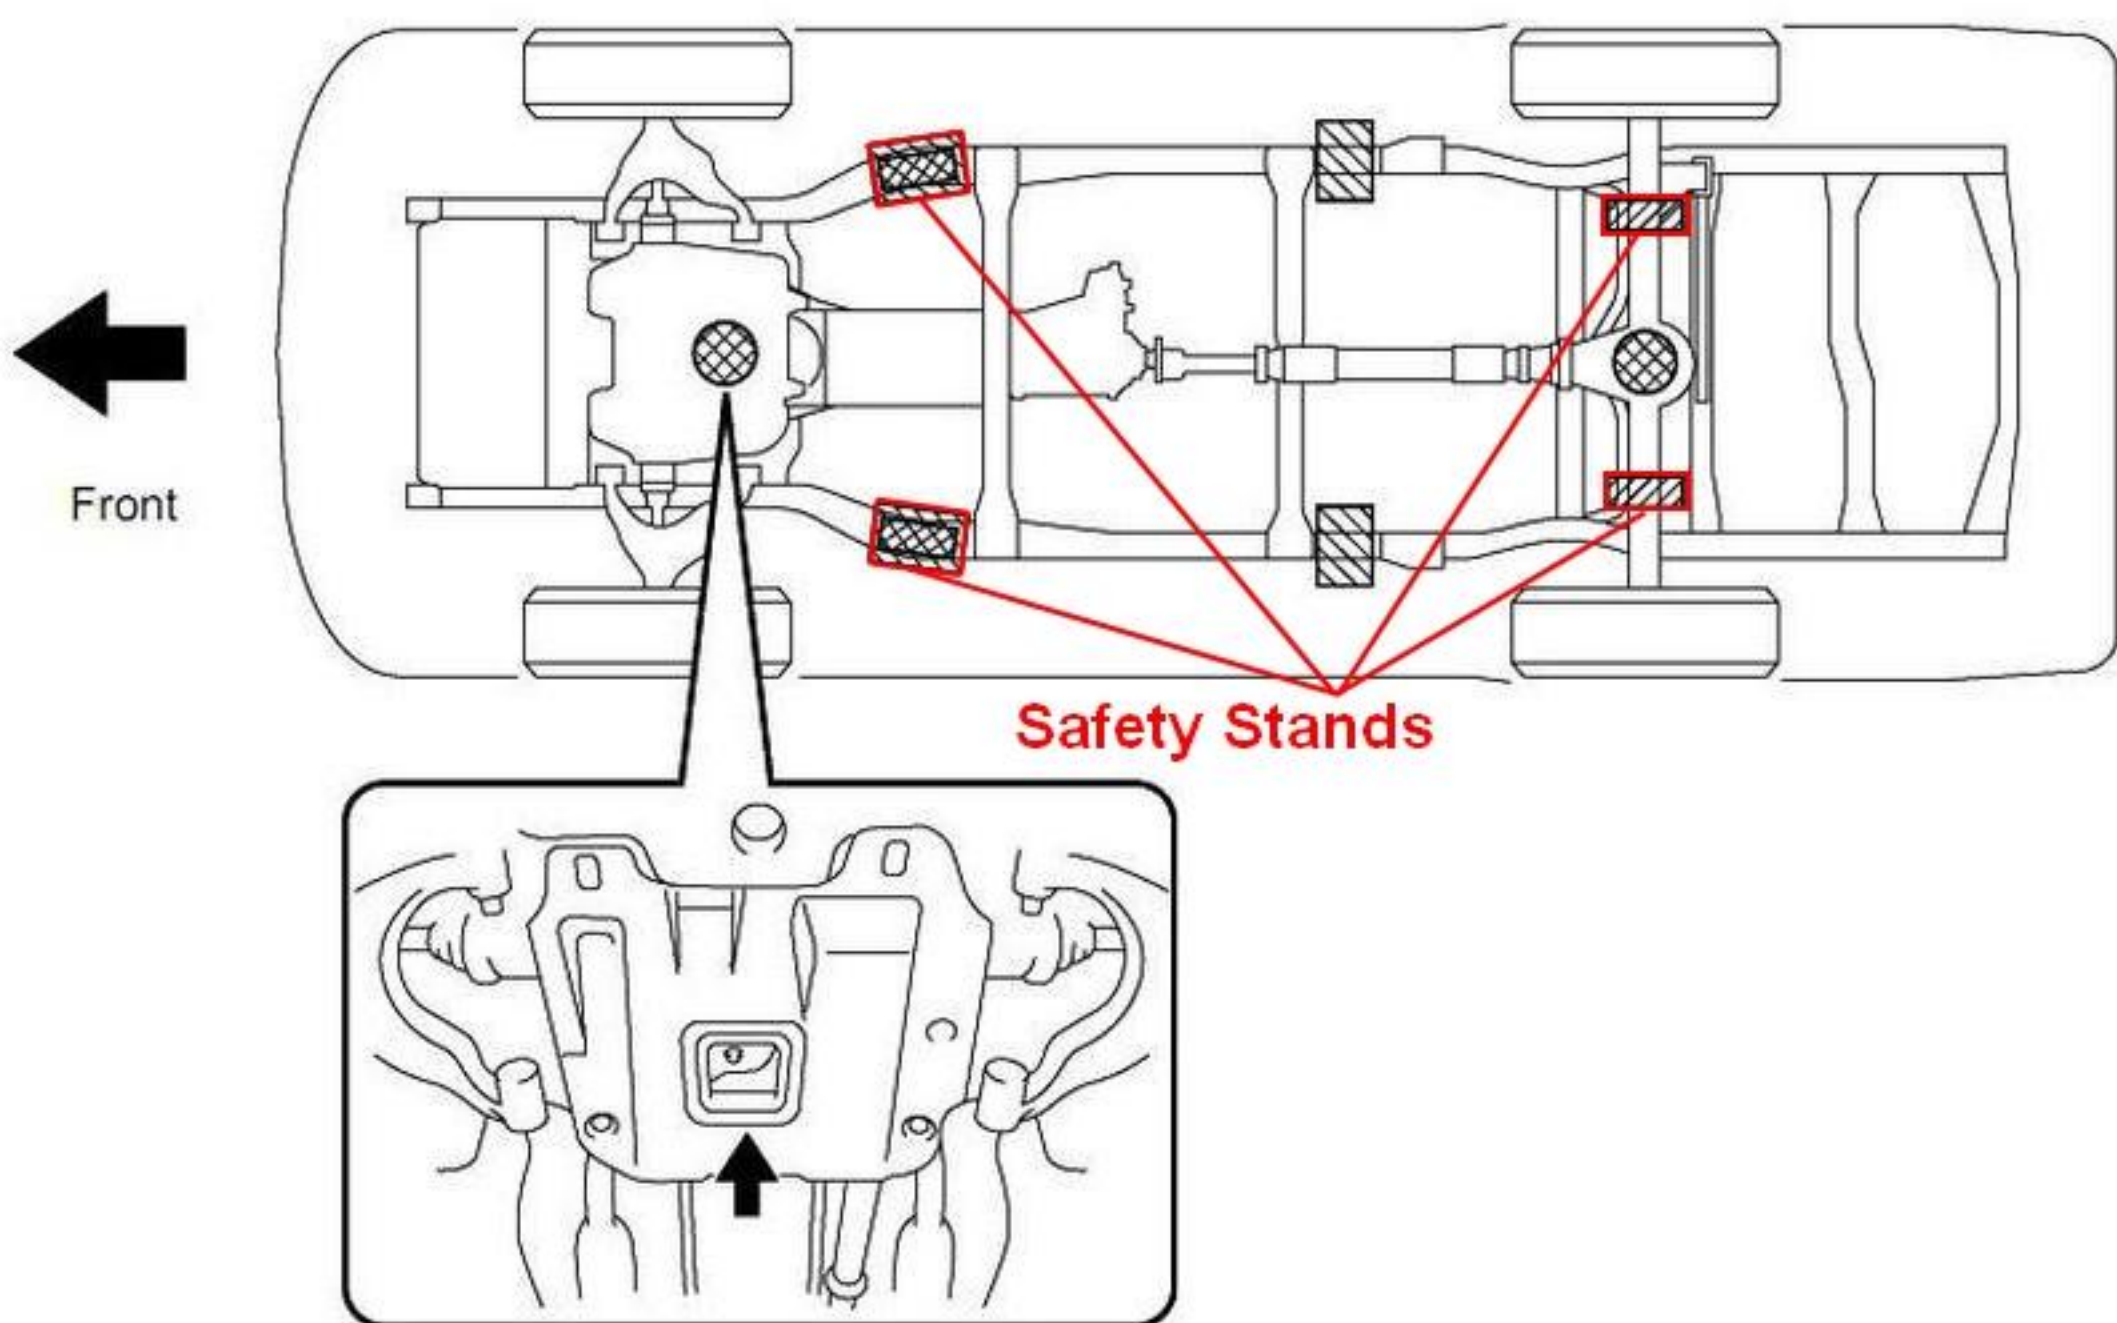

JACK POSITION

Front Center of crossmember

Rear Center of rear axle housing

CAUTION: When jacking up the front and rear, make sure the vehicle is not carrying any extra weight.

SUPPORT POSITION

Safety stand

Swing arm type lift

VEHICLE LIFT AND SUPPORT LOCATIONS

