

WIPER RUBBER LH

REPLACEMENT

1. REMOVE FR WIPER BLADE LH


- (a) Remove the front wiper blade LH from the front wiper arm LH.

NOTICE:

Do not fold down the front wiper arm with the front wiper blade being removed from it.

2. REMOVE WIPER RUBBER LH

- (a) Remove the front wiper rubber LH from the front wiper blade.
(b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

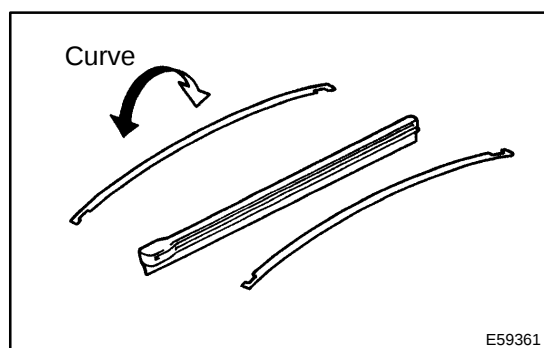


3. INSTALL WIPER RUBBER LH

- (a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

NOTICE:

Be careful to observe and keep direction of curvature for correct replacement.

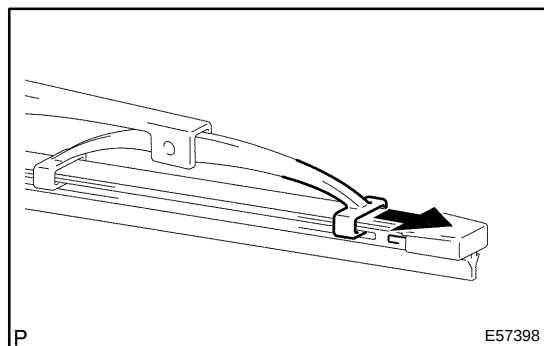

- (b) Install the wiper rubber LH so that the head part (Larger side) of the wiper rubber faces the arm axis side.

NOTICE:

Push the front wiper blade into the grooves of the wiper rubber to engage them completely.