



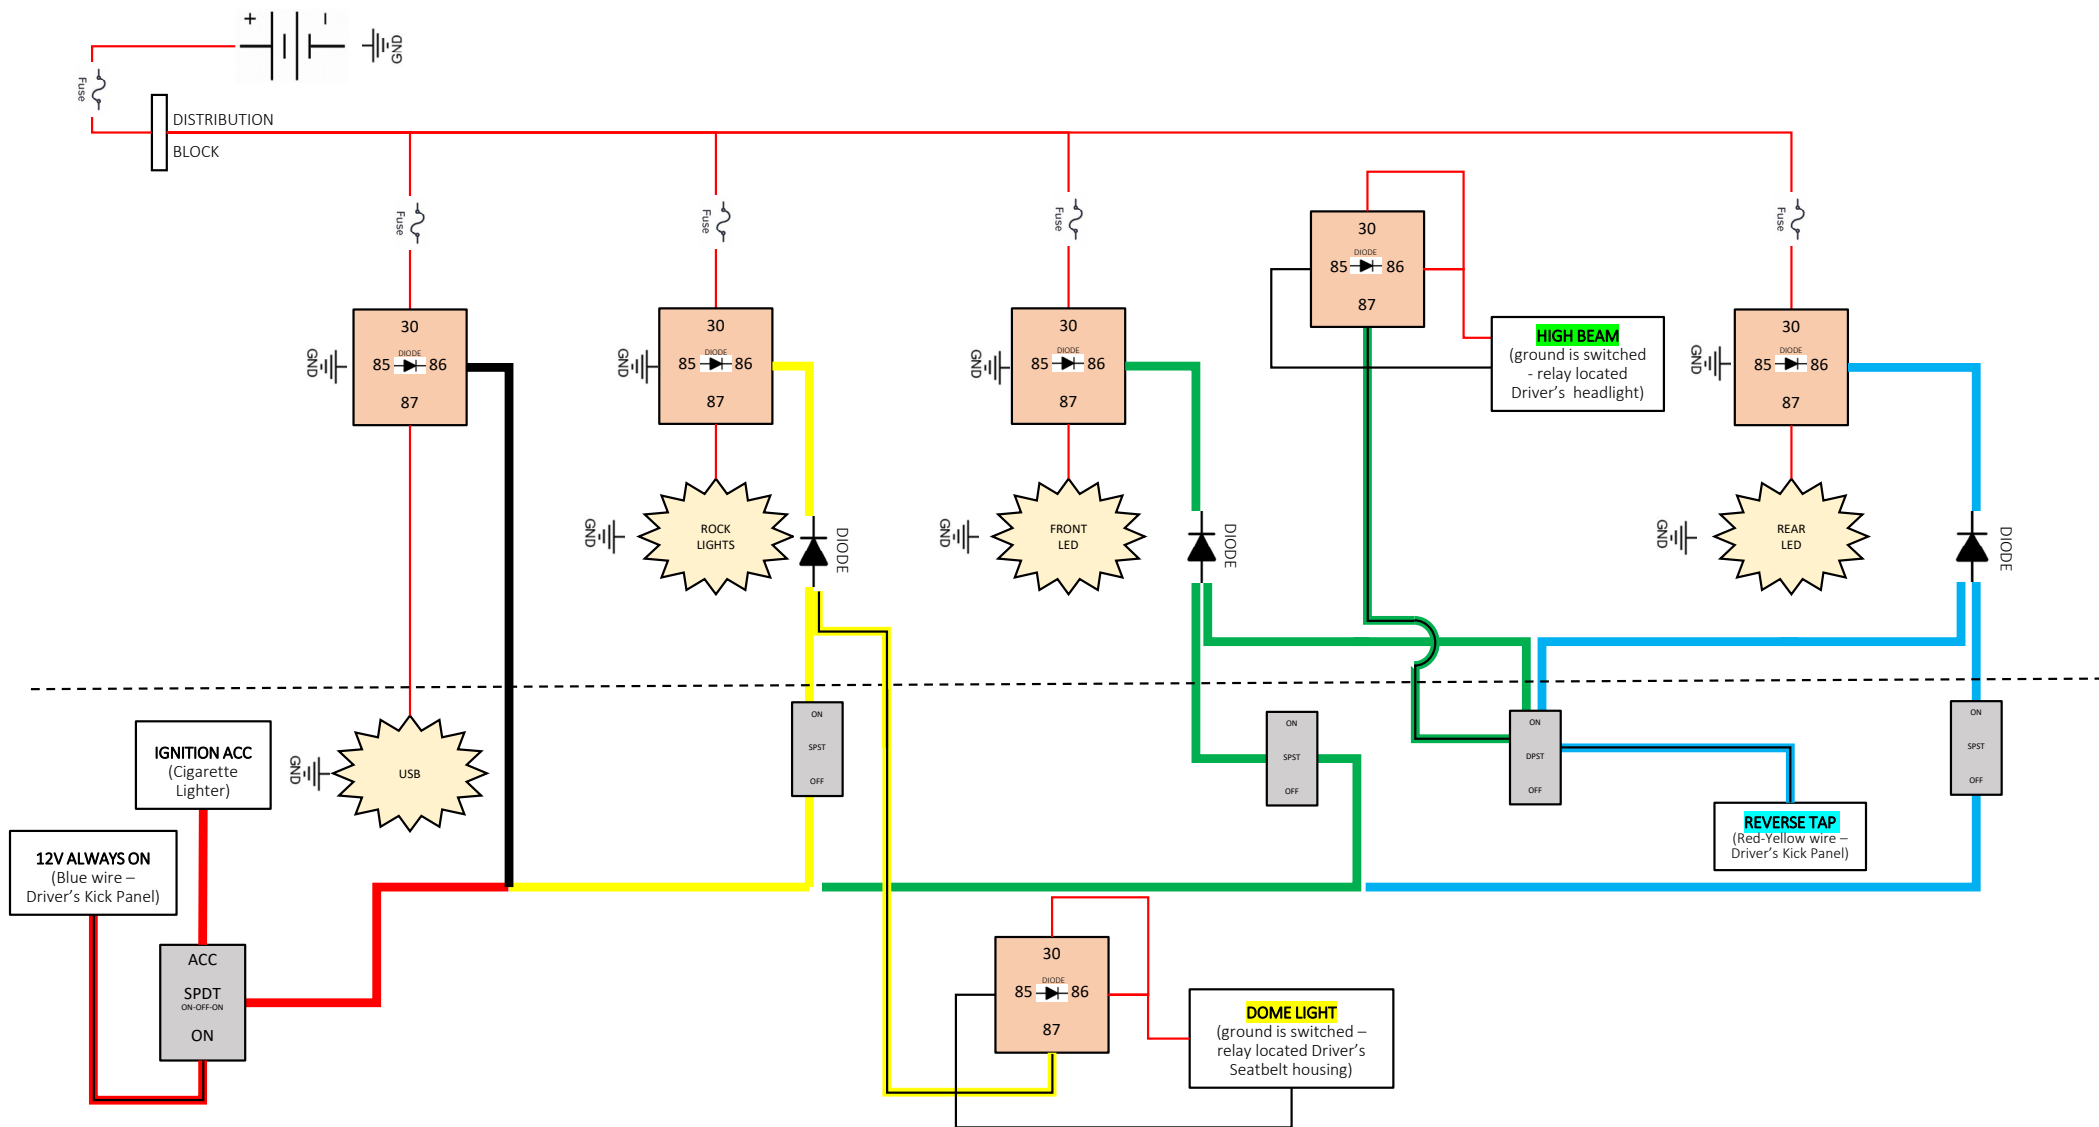

Toyota 4Runner (1996 – 1997) – fuse box diagram


Year of production: 1996, 1997

Engine compartment (U.S.A.)

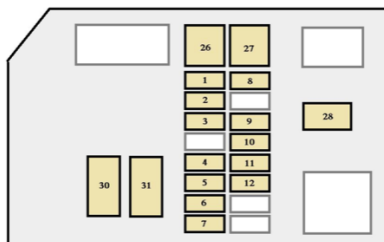

Toyota 4Runner – fuse box – engine compartment (USA)


Instrument panel

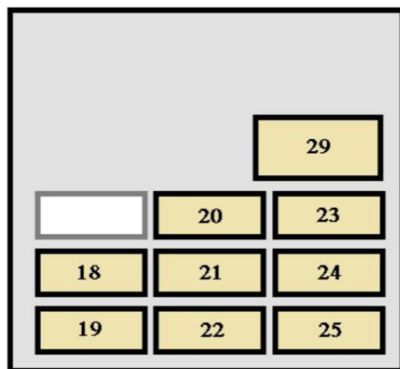

Toyota 4Runner – fuse box – instrument panel

1995, 1996, 1997 4Runner Assignment of the fuses in the instrument panels			
Nº	Name	Amp Rating	Description
1	DEFOG	15A	Back window defogger
2	STOP	10A	Stop lights, highmounted stoplight
3	ALT-S	7.5A	Charging system
4	OBD	7.5A	On-board diagnosis system
5	EFI	15A	Multiport fuel injection system/sequential multiport fuel injection system
6	HORN	15A	Horns
7	DOVE	15A	Interior lights, personal lights, luggage compartment light
8	TAIL	10A	Tail lights, parking lights, license plate lights
9	A.C.	10A	Air conditioning control system
10	RR HTR	10A	Rear air conditioning control system
11	HEAD (RH)	10A	US: Right-hand headlight.
12	HEAD (LH)	10A	US: Left-hand headlight.
18	ACC	15A	Car audio system, power antenna, clock, power rear view mirror control
19	ECU-B	7.5A	SRS airbag warning light
20	4WD	20A	A.D.D. control system, four-wheel drive control system, rear differential lock system
21	TURN	10A	Turn signals lights, emergency flashers
22	GAUGE	10A	Gauges and meters, back window defogger, daytime running light system, air conditioning system, electric moon roof
23	ECU-IG	10A	Cruise control system, anti-lock brake system, electronically controlled automatic transmission system, power antenna
24	WIPER	20A	Windshield wipers and washer, back window wiper
25	IGN	7.5A	SRS airbag system, multiport fuel injection system / sequential multiport fuel injection system, discharge warning light
26	HEATER	50A	Air conditioning system, "A.C." fuse
27	AM1	40A	Starting system
28	AM2	30A	Starting system, "IGN" fuse
29	POWER	30A	Power window, power back window, electric moon roof
30	ABS	60A	Anti-lock brake system
31	ALT	100A	Charging system

Engine compartment (After-Market)

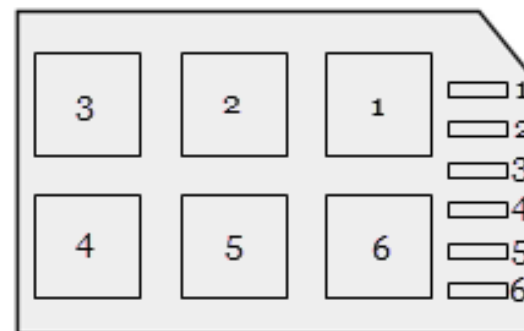

Nº	Amp Rating	Description
1	--	SPARE
2	10A	ROCK LIGHTS
3	15A	REAR LIGHT BAR
4	15A	FRONT LIGHT BAR
5	10A	USB POWER
6	--	SPARE