




Rear Window Defogger and Mirror Heater

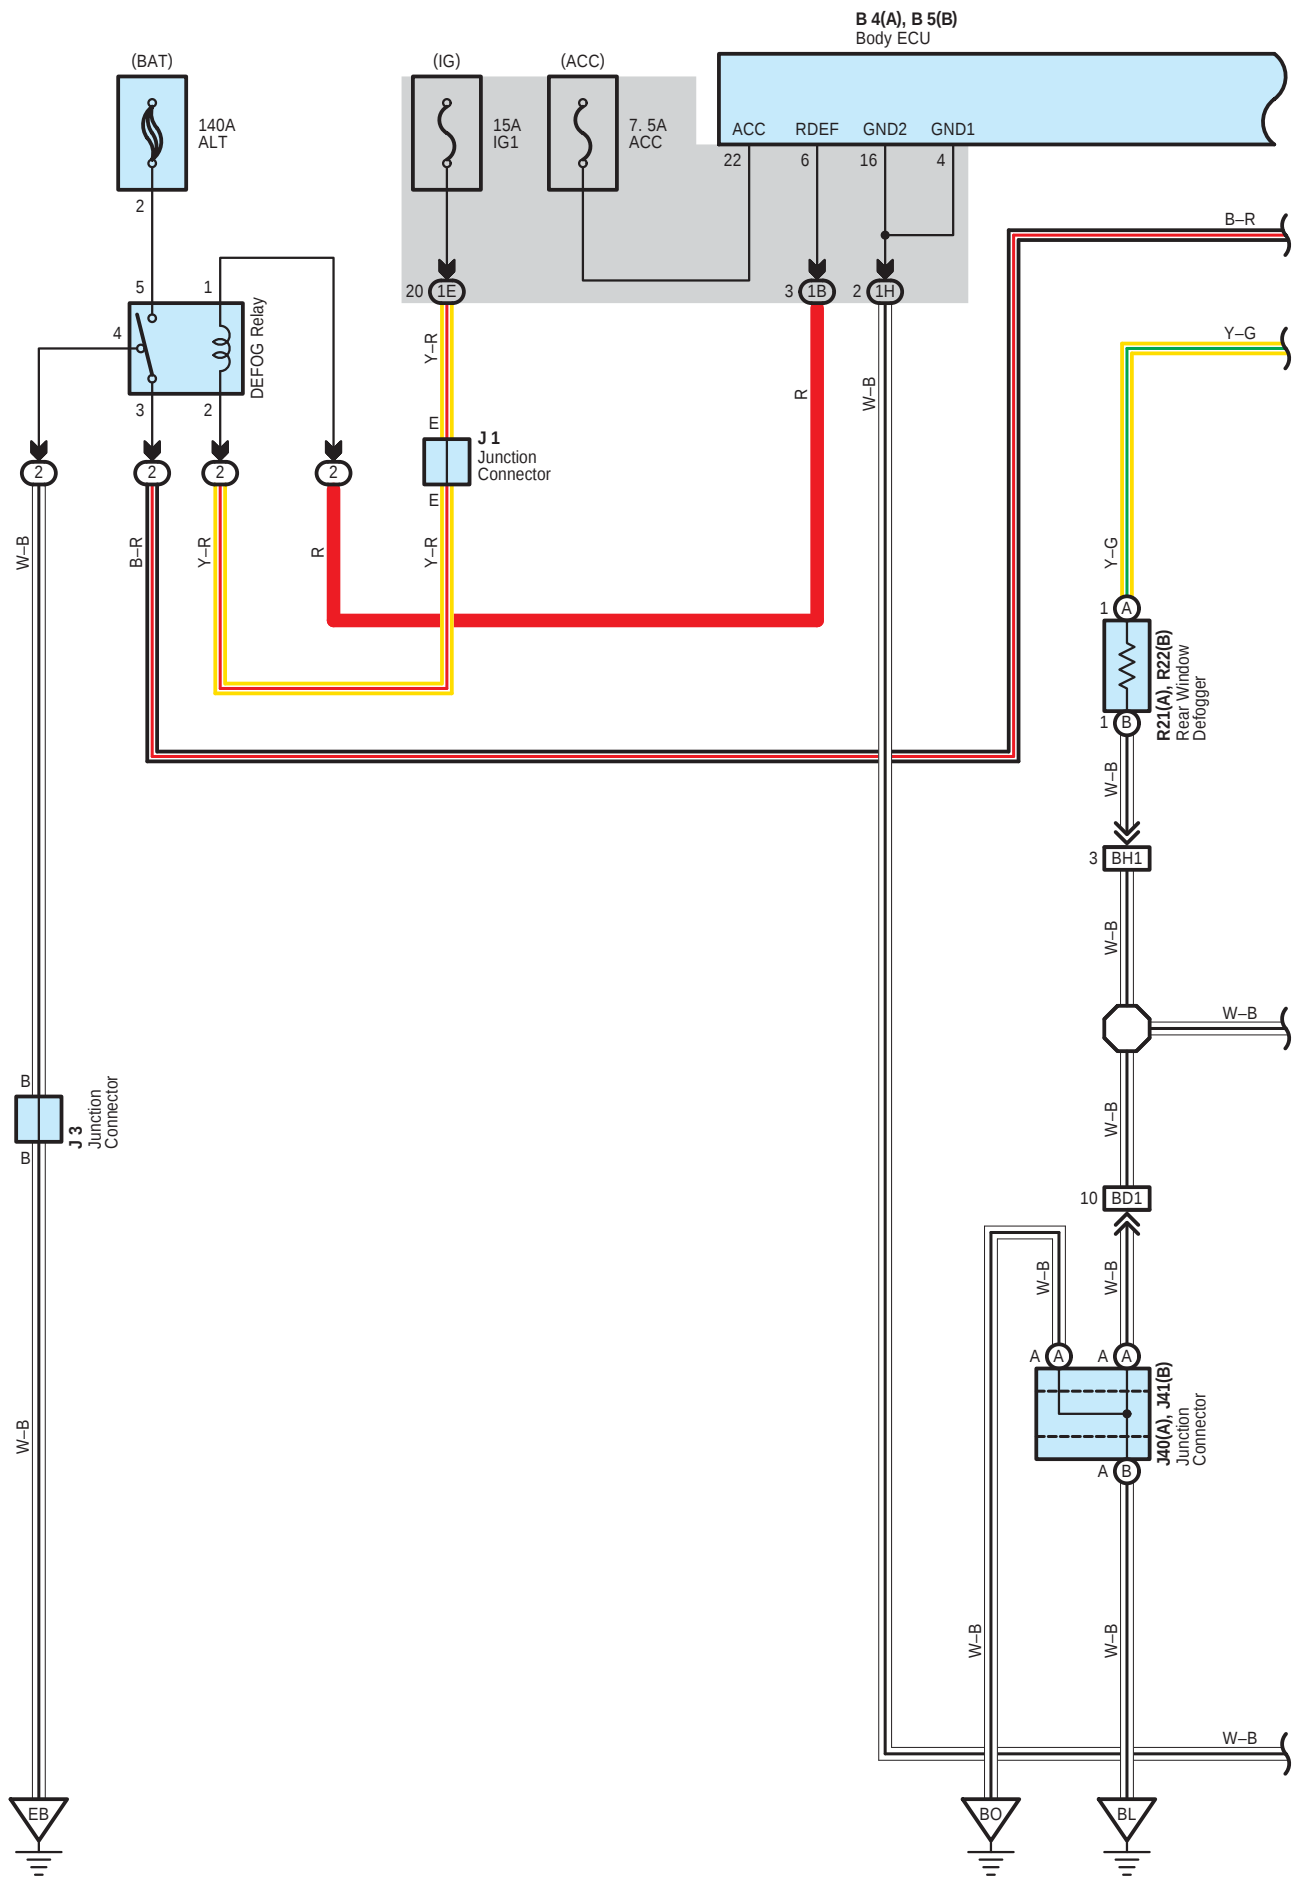

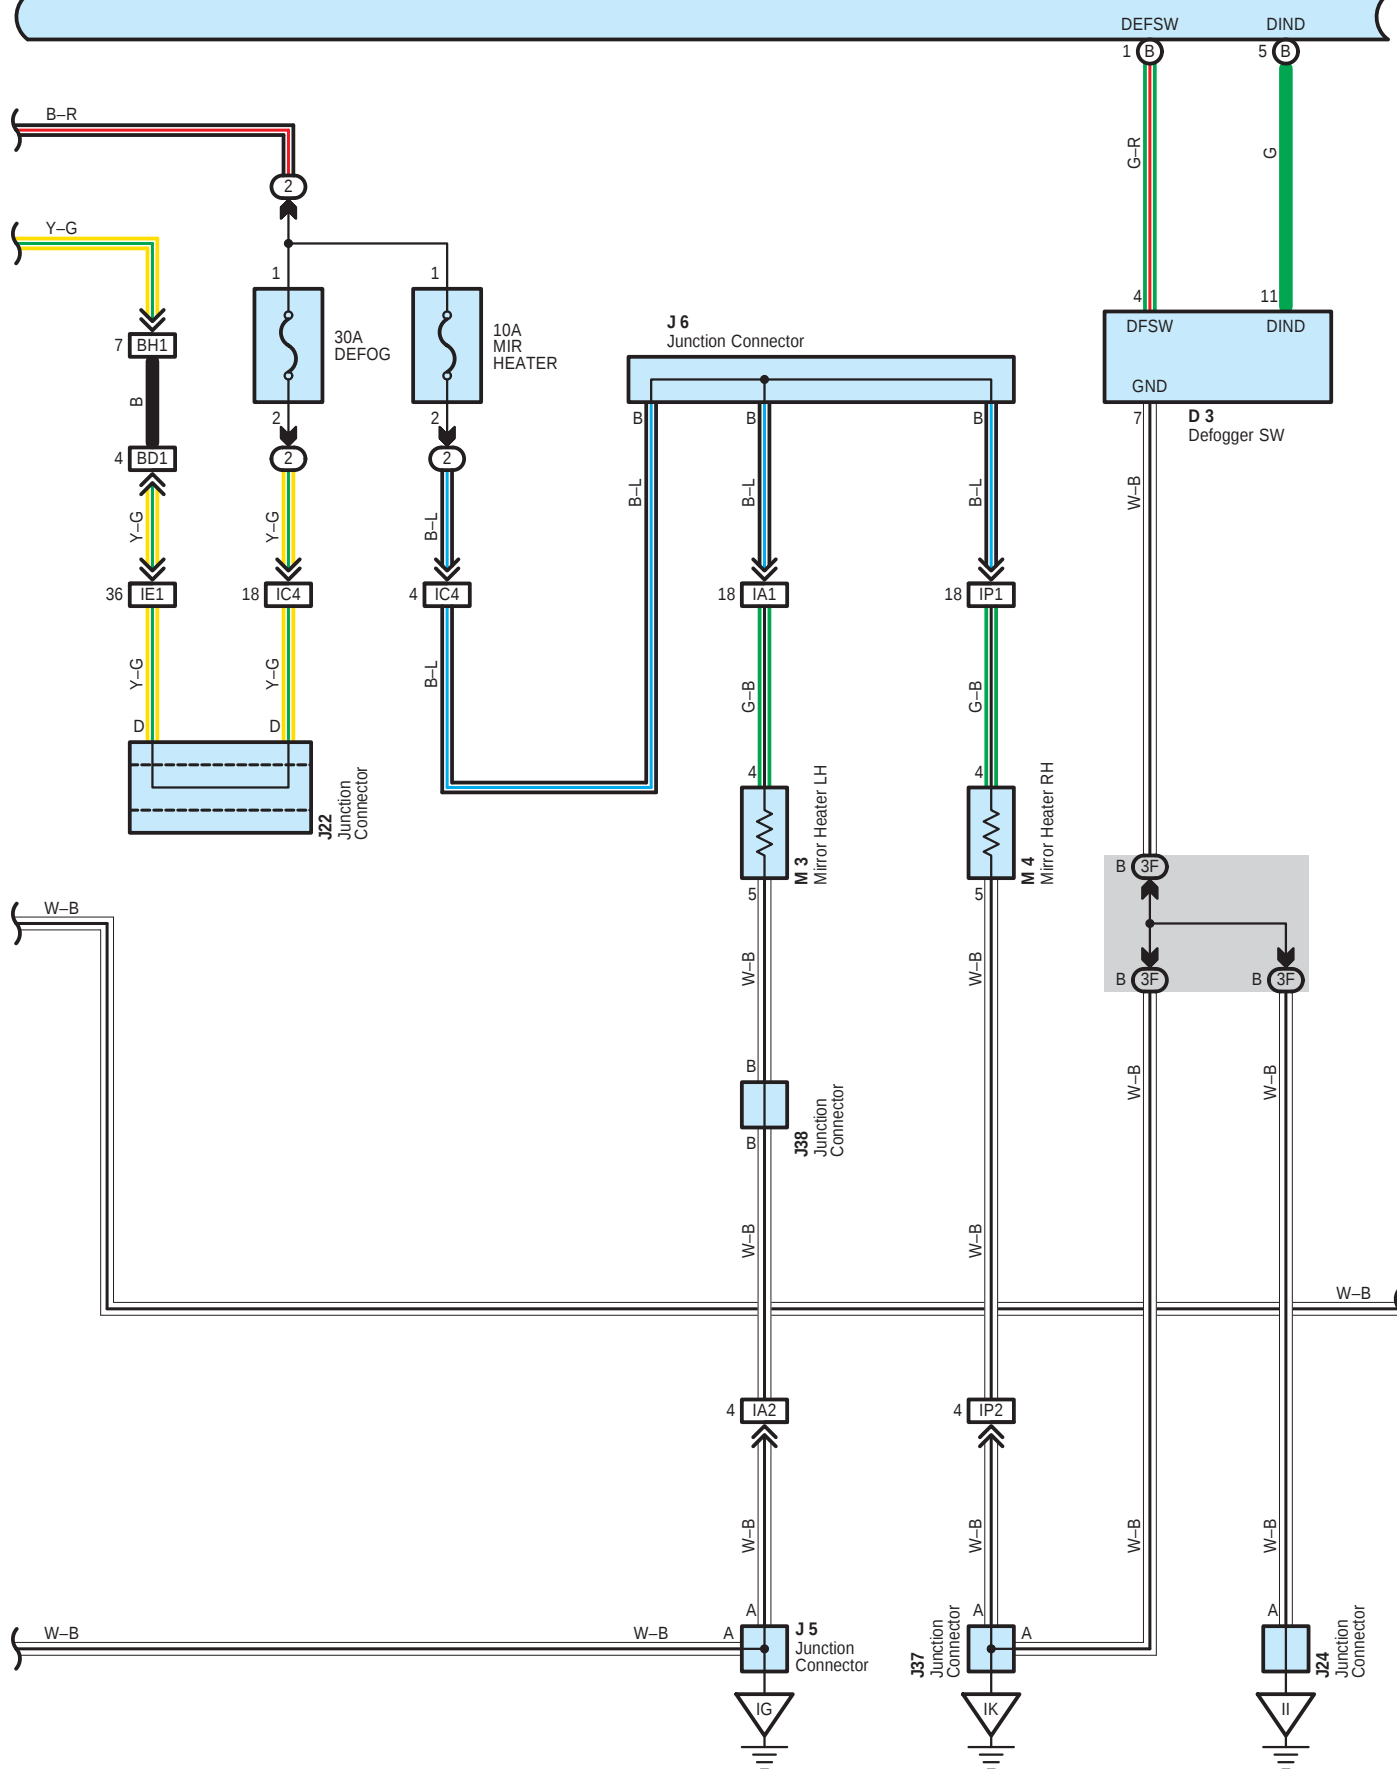

Rear Window Defogger and Mirror Heater

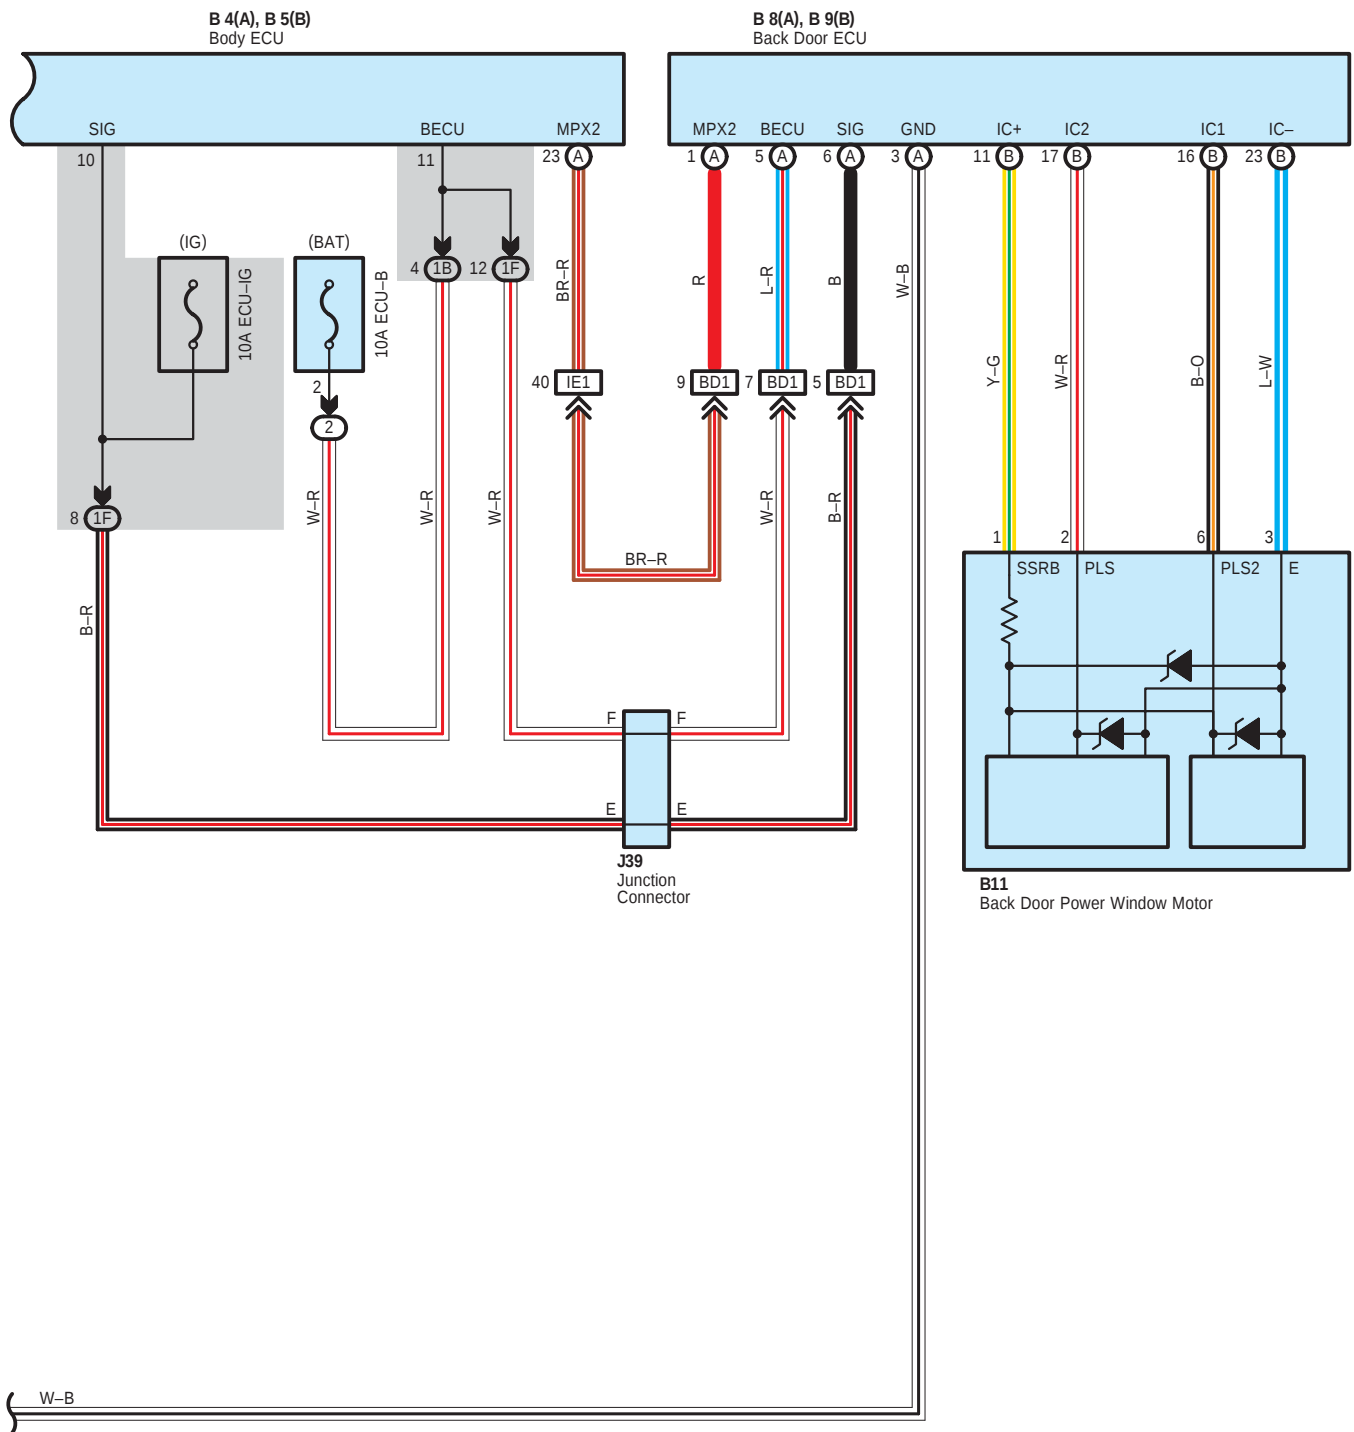

System Outline

- * Start control
Turning the rear window defogger SW ON, with the ignition SW ON and the back door window fully closed, initiates operation of the rear window defogger and illuminates the indicator lamp for 15 minutes.
- * Stop control
When any one of the following conditions exists, rear window defogger operation comes to a stop and the indicator lamp goes out.
 - * The ignition SW is turned from the ON position to either the ACC or OFF position.
 - * The rear window defogger SW is pressed ON again when rear window defogger operation is already under way.
 - * The back door window is open.

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B4	A	36	J3	33 (2UZ–FE)	J39		40
B5	B	36		35 (1GR–FE)	J40	A	40
B8	A	40	J5	38	J41	B	40
B9	B	40	J6	38	M3		41
B11		40	J22	38	M4		41
D3		37	J24	38	R21	A	41
J1		33 (2UZ–FE)	J37	38	R22	B	41
		35 (1GR–FE)	J38	40			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F	24	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3F	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IP1	47	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IP2		
BD1	48	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BH1	48	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of Back Door)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	44 (2UZ-FE)	Front Left Fender
	45 (1GR-FE)	
IG	46	Left Kick Panel
II	46	Instrument Panel Brace RH
IK	46	Right Kick Panel
BL	48	Floor Seat Crossmember LH
BO	48	Rear Pillar LH