
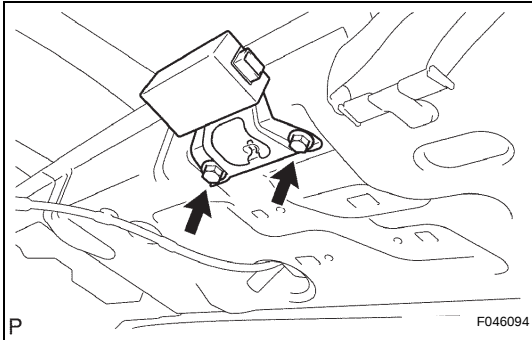


REMOVAL

1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
(a) Disconnect the negative terminal.
2. **REMOVE REAR NO. 2 SEAT (for 50/50 Split Seat Type)** (See page [SE-36](#))
3. **REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for 60/40 Split Seat Type LH Side)** (See page [SE-41](#))
4. **REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)** (See page [SE-49](#))
5. **REMOVE ROOF HEADLINING ASSEMBLY**
HINT:
Refer to the instructions for removal of the roof headlining assembly (See page [IR-7](#)).
6. **REMOVE TIRE PRESSURE WARNING ANTENNA AND RECEIVER**
(a) Disconnect the connector.
(b) Remove the 2 bolts and receiver assembly.

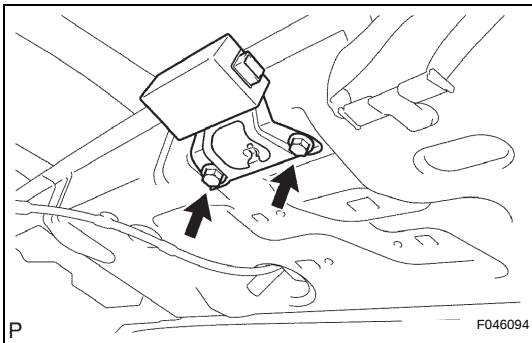

INSTALLATION

1. **INSTALL TIRE PRESSURE WARNING ANTENNA AND RECEIVER**
(a) Install the receiver assembly with the 2 bolts.
Torque: 6.8 N*m (69 kgf*cm, 60 in.*lbf)
(b) Connect the connector.
2. **INSTALL ROOF HEADLINING ASSEMBLY**
3. **INSTALL REAR NO. 2 SEAT (for 50/50 Split Seat Type)** (See page [SE-38](#))
4. **INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for 60/40 Split Seat Type LH Side)** (See page [SE-46](#))
5. **INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)** (See page [SE-53](#))
6. **CONNECT BATTERY NEGATIVE TERMINAL**
7. **REGISTRATION OF TRANSMITTER ID**
HINT:
(See page [TW-13](#))
8. **PERFORM INITIALIZATION**