


SLIDING ROOF SYSTEM

PARTS LOCATION

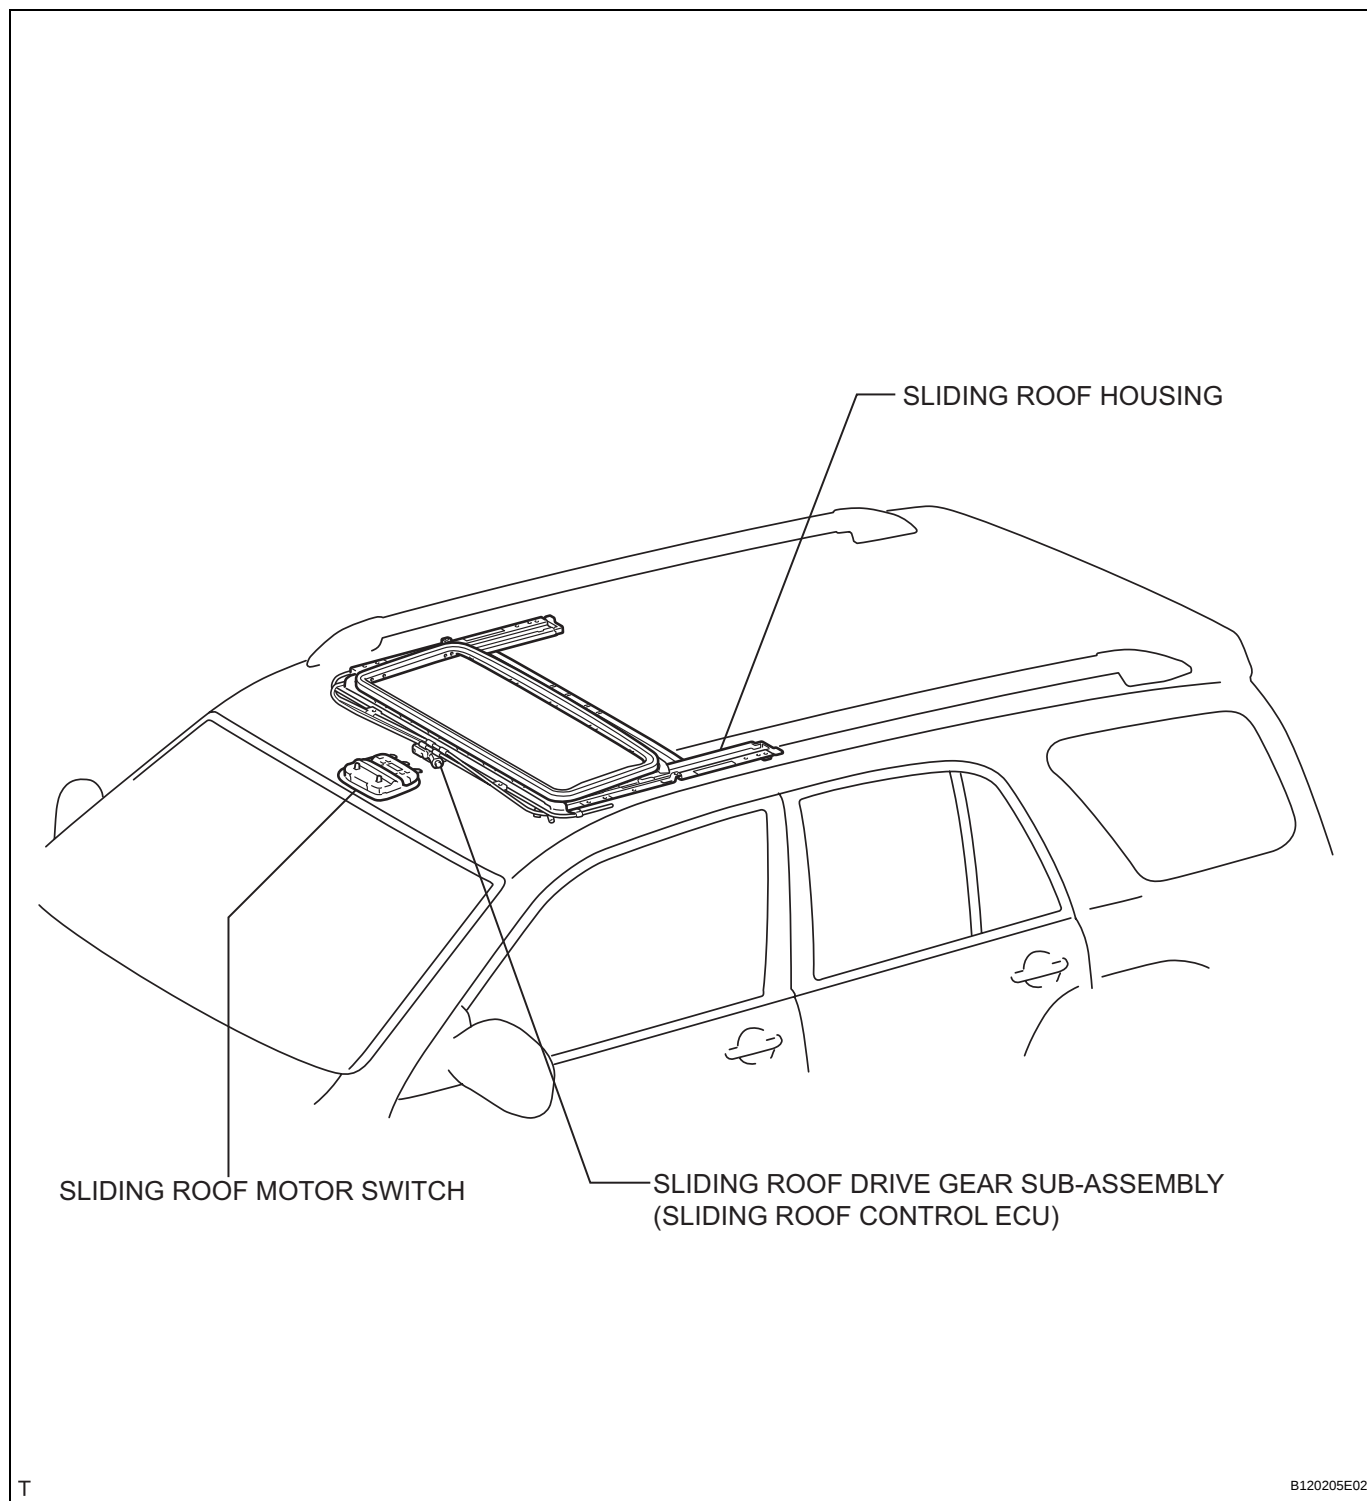

RF

INITIALIZATION

1. RESET SLIDING ROOF MOTOR

- (a) If the AUTO operation function does not operate, reset the sliding roof motor using either of the following ways.
 - (1) Press the sliding roof switch on TILT UP side and hold it. When the roof glass stops at the fully tilted-up position, the reset of the motor is completed.
 - (2) Fully open the roof glass, press the sliding roof switch on SLIDE OPEN side and hold it for 10 seconds. 10 seconds later, the reset of the motor is completed.

HINT:

If the battery terminal is disconnected or after the jam protection function has operated, the ECU of the sliding roof motor may not detect the position of the roof glass. If the AUTO operation function is still disabled even if the sliding roof motor is reset, the hall IC (built in the sliding roof motor assembly) for detecting the roof glass position may malfunction.