

VEHICLE STABILITY CONTROL SYSTEM

PRECAUTION

- When there is a malfunction in the contact point of the terminals or installation problems with parts, removal and installation of the suspected problem parts may return the system to the normal condition either completely or temporarily.
- In order to determine the malfunctioning area, be sure to check the conditions at the time the malfunction occurred, such as by DTC output and freeze frame data output, and record it before disconnecting each connector or removing and installing parts.
- Since the Vehicle Stability Control system may be influenced by a malfunction in the other systems, be sure to check for DTCs in the other systems.
- Be sure to remove and install the hydraulic brake booster and each sensor with the ignition switch off unless specified in the inspection procedure.
- When removing and installing the hydraulic brake booster and each sensor, be sure to check that the normal display is output in test mode inspection and in DTC output inspection after installing all the parts.
- After replacing the master cylinder solenoid and/or the yaw rate and acceleration sensor, make sure to perform yaw rate and acceleration sensor zero point calibration (See page [BC-20](#)).
- The CAN communication system is used for data communication between the skid control ECU (included in the actuator), the steering angle sensor, and the yaw rate sensor (the acceleration sensor is included). If there is trouble in the CAN communication line, the DTC of the communication line is output.
- If the DTC of the CAN communication line is output, repair the malfunction in the communication line and troubleshoot the Vehicle Stability Control system.
- Since the CAN communication line has its own length and route, it cannot be repaired temporarily with the bypass wire, etc.


PARTS LOCATION

HYDRAULIC BRAKE BOOSTER

- MASTER CYLINDER SOLENOID (SKID CONTROL ECU)
- BRAKE FLUID LEVEL WARNING SWITCH

PARK/NEUTRAL POSITION SWITCH

REAR SPEED SENSOR

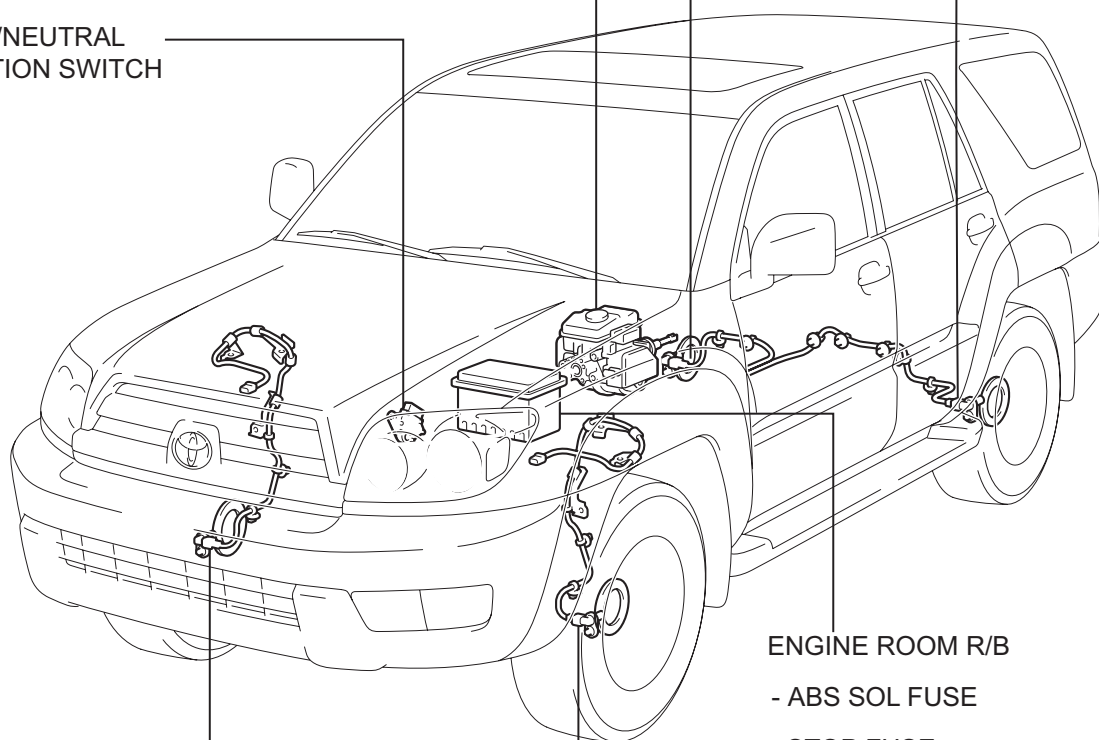


FRONT SPEED SENSOR

ENGINE ROOM R/B

- ABS SOL FUSE
- STOP FUSE
- ABS MTR FUSE
- STOP LIGHT OPERATION RELAY

BC

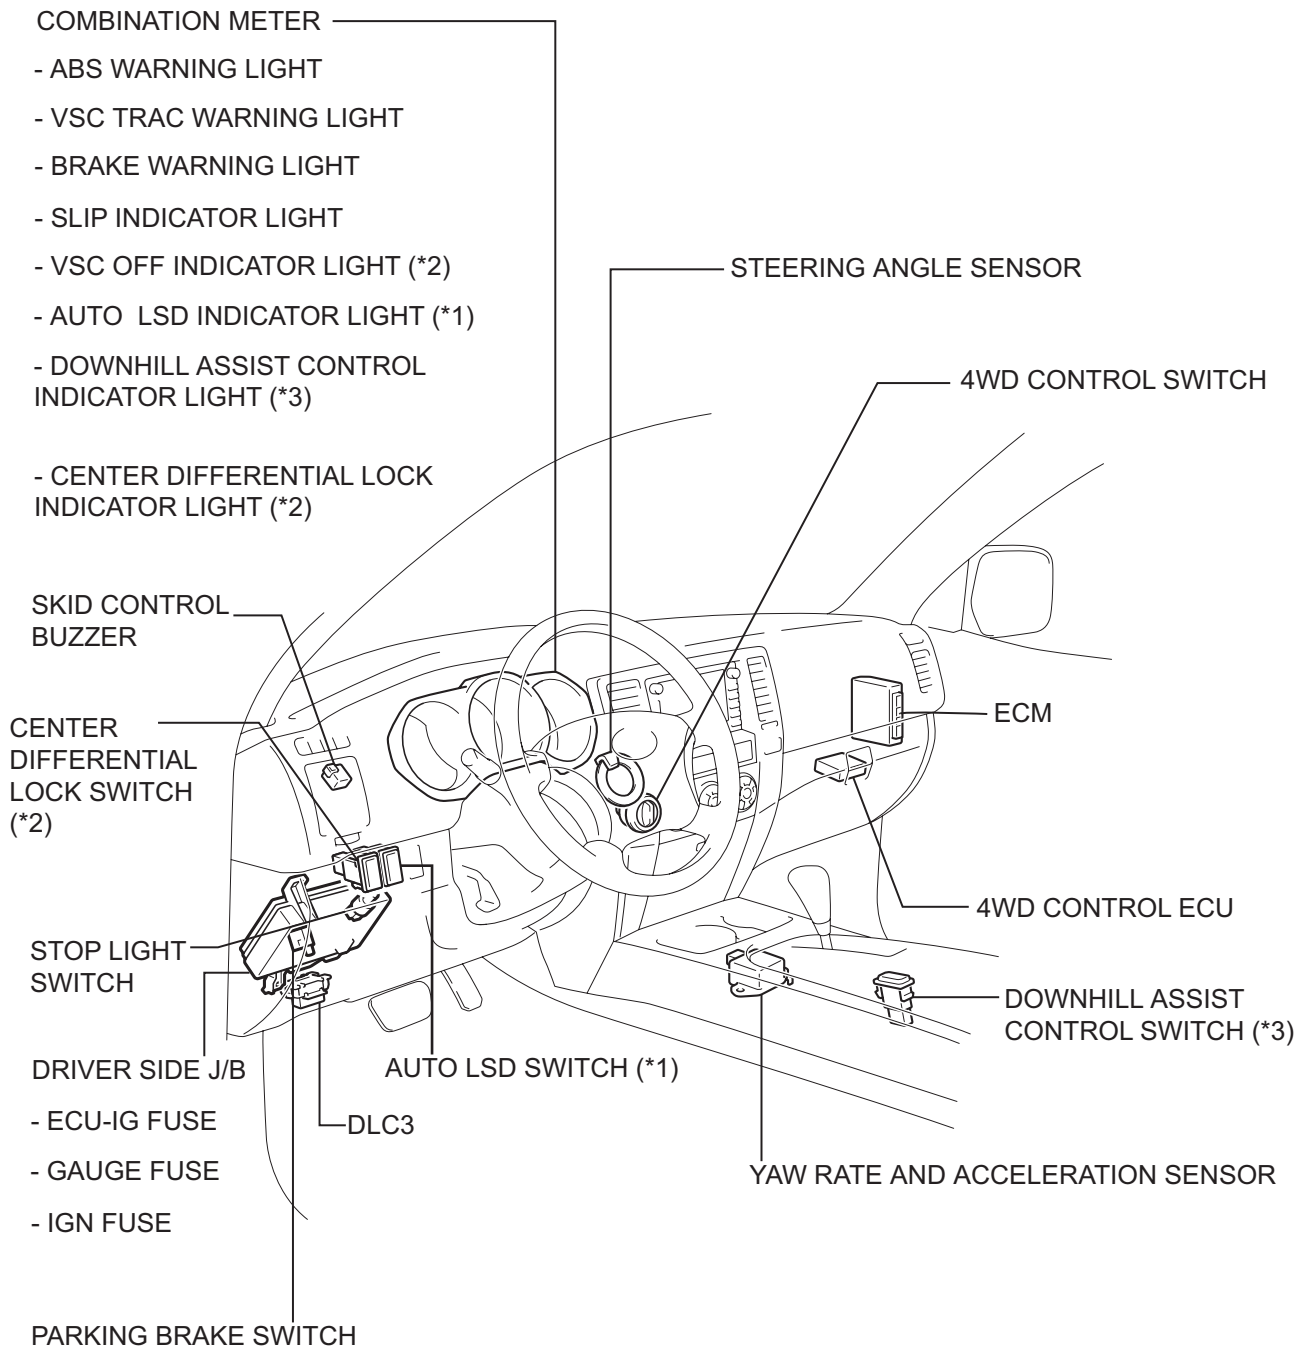

(*1): 2WD (*2): 4WD (*3): Multi Mode 4WD