


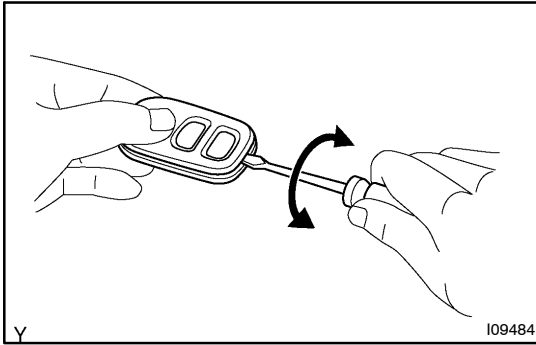


REPLACEMENT

1. REPLACE TRANSMITTER (LITHIUM) BATTERY

- (a) Using a screwdriver, remove the cover.

NOTICE:

Do not pry out the cover forcibly.

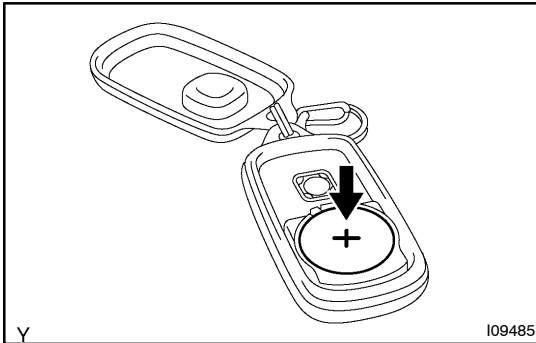

- (b) Remove the battery (lithium battery) as shown in the illustration.

NOTICE:

- **Do not push the terminals with a finger.**
- **If prying up the battery (lithium battery) forcibly to remove, the terminals are deformed.**

- (c) Install a battery (lithium battery).

NOTICE:

Face the battery upward. Take care not to deform the terminals.

- (d) Install the cover.

NOTICE:

It might cause faulty contact of battery (lithium battery) and terminals.

2. REPLACE BACK DOOR ECU AND TRANSMITTER

NOTICE:

When replacing the back door ECU and transmitter, registration of recognition code is necessary because they are provided as a single components.

- (a) Select the operation mode to perform from the following operation modes.
- Add mode
 - Rewrite mode
 - Prohibition mode
 - Confirmation mode


HINT:

- The add mode is used to retain codes already registered while you register new recognition codes. This mode is used when adding a transmitter. However, if the number of registered codes exceeds 4 codes, previously registered codes are correspondingly erased in order, starting from the first registered code.
- The rewrite mode is used to erase all previously registered codes and register only new recognition codes.
- The prohibition mode is used to erase all registered codes and cancels the wireless door lock function. Use this mode when the transmitter is lost.

- The confirmation mode is for confirming few many recognition codes are already registered before you register additional recognition codes.
- (b) Follow the chart on the following page to register the transmitter recognition code at the back door ECU.

HINT:


- When procedure is out of the specified, the operation returns to normal operation.
- Maximum 4 recognition codes can be registered.

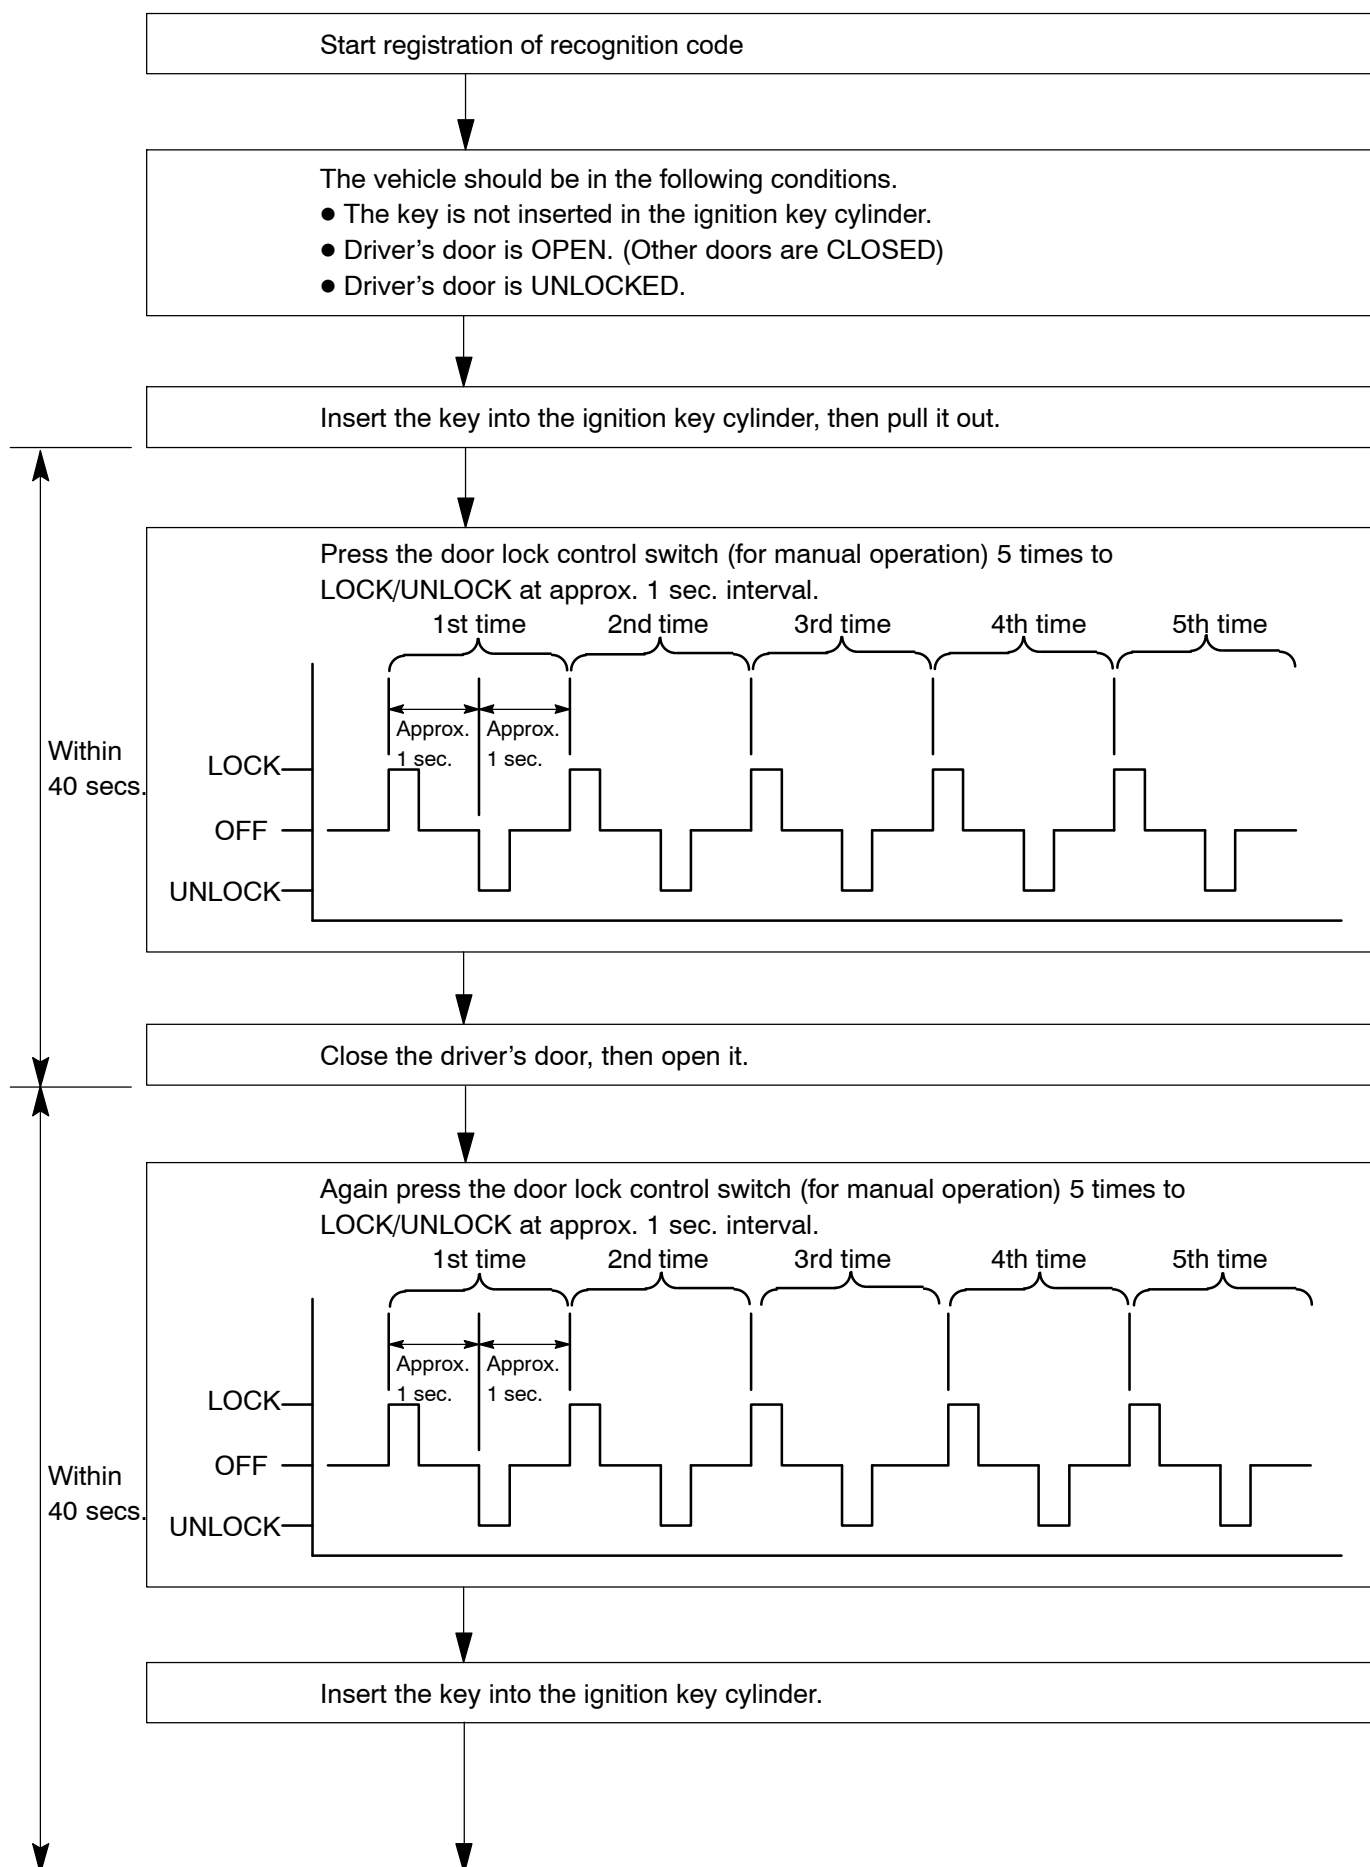

Turn the ignition switch from ON to LOCK at approx. 1 sec. interval 1 to 5 times to select the mode.


Add mode

ON - LOCK change occurs 1 time

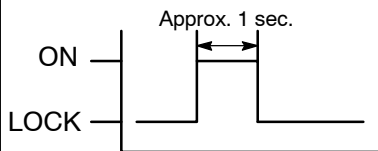


Confirmation mode

ON - LOCK change occurs 3 times

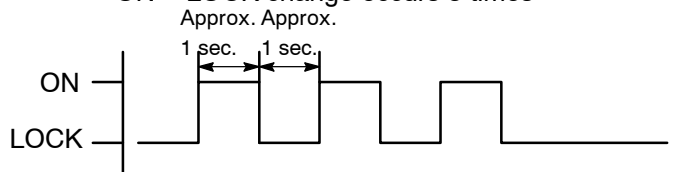


Rewrite mode

ON - LOCK change occurs 2 times

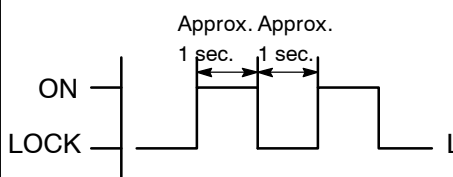

Prohibition mode

ON - LOCK change occurs 5 times

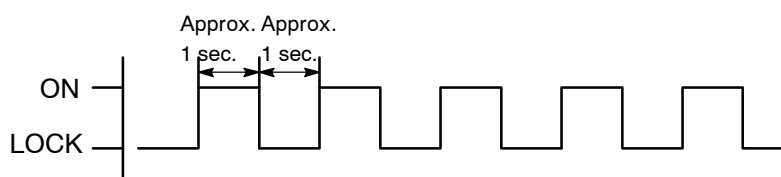


Pull out the key plate from the ignition key cylinder.

When add mode or rewrite mode is selected.

Body ECU automatically performs the LOCK-UNLOCK operation once or twice at 1 sec. interval to inform the operator that either the add mode or rewrite mode has been selected.


LOCK-UNLOCK occurs once

Indicates that add mode has been selected.



LOCK-UNLOCK occurs twice

Indicates that rewrite mode has been selected.



Within 3 secs.

When prohibition mode is selected.

When confirmation mode is selected.


Body ECU automatically performs the LOCK-UNLOCK operation 1 to 4 times at 2 sec. interval to inform the operator of the number of the registered codes.

HINT:

When the number of the registered code is 0, the operation is automatically performed 5 times.

Example:

When the operation is performed twice, it directs that 2 type of recognition code have been registered.

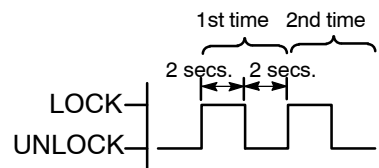

Registration of recognition code (Confirmation mode and probation mode) is completed.

