



TRANSFER ASSY (VF4BM)


COMPONENTS

31032-05

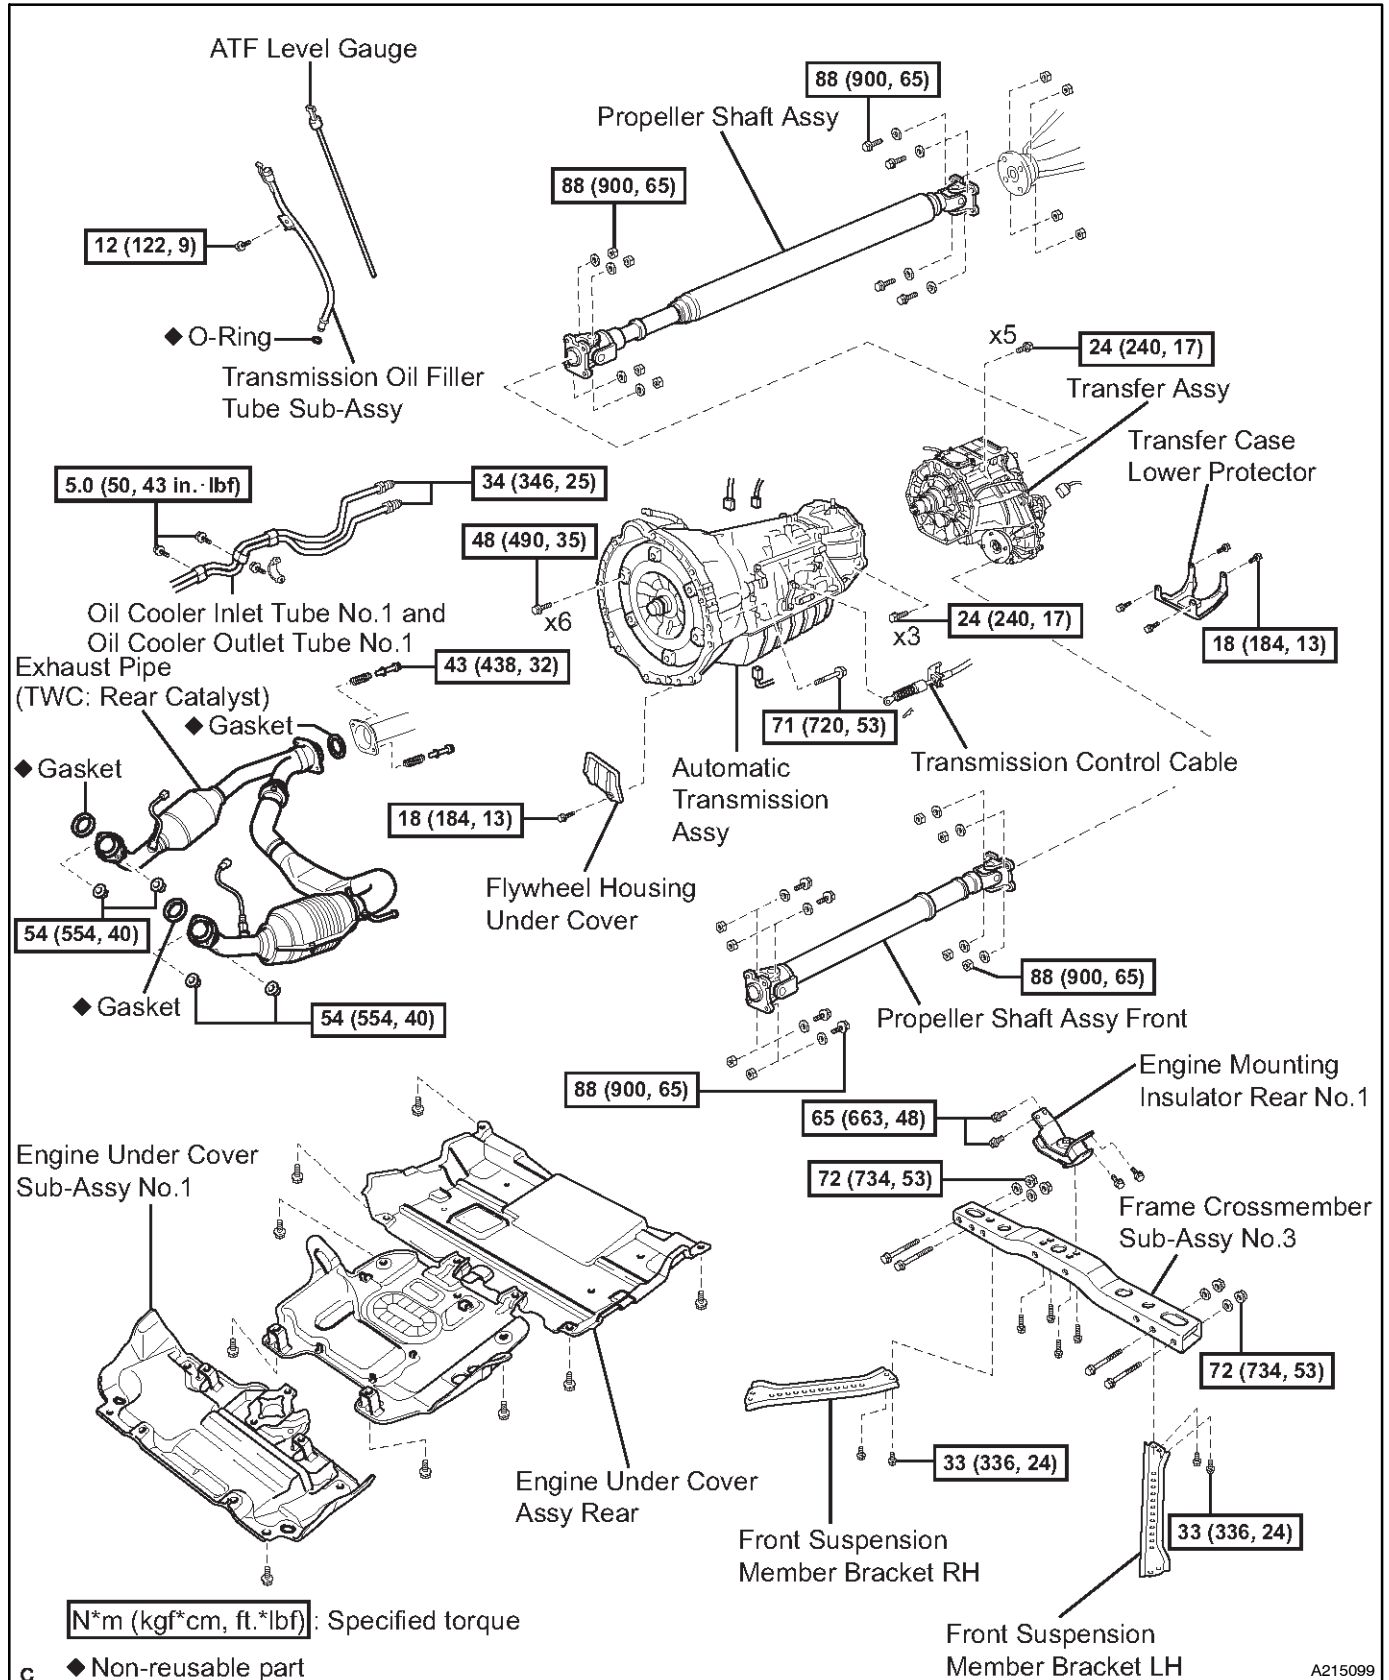

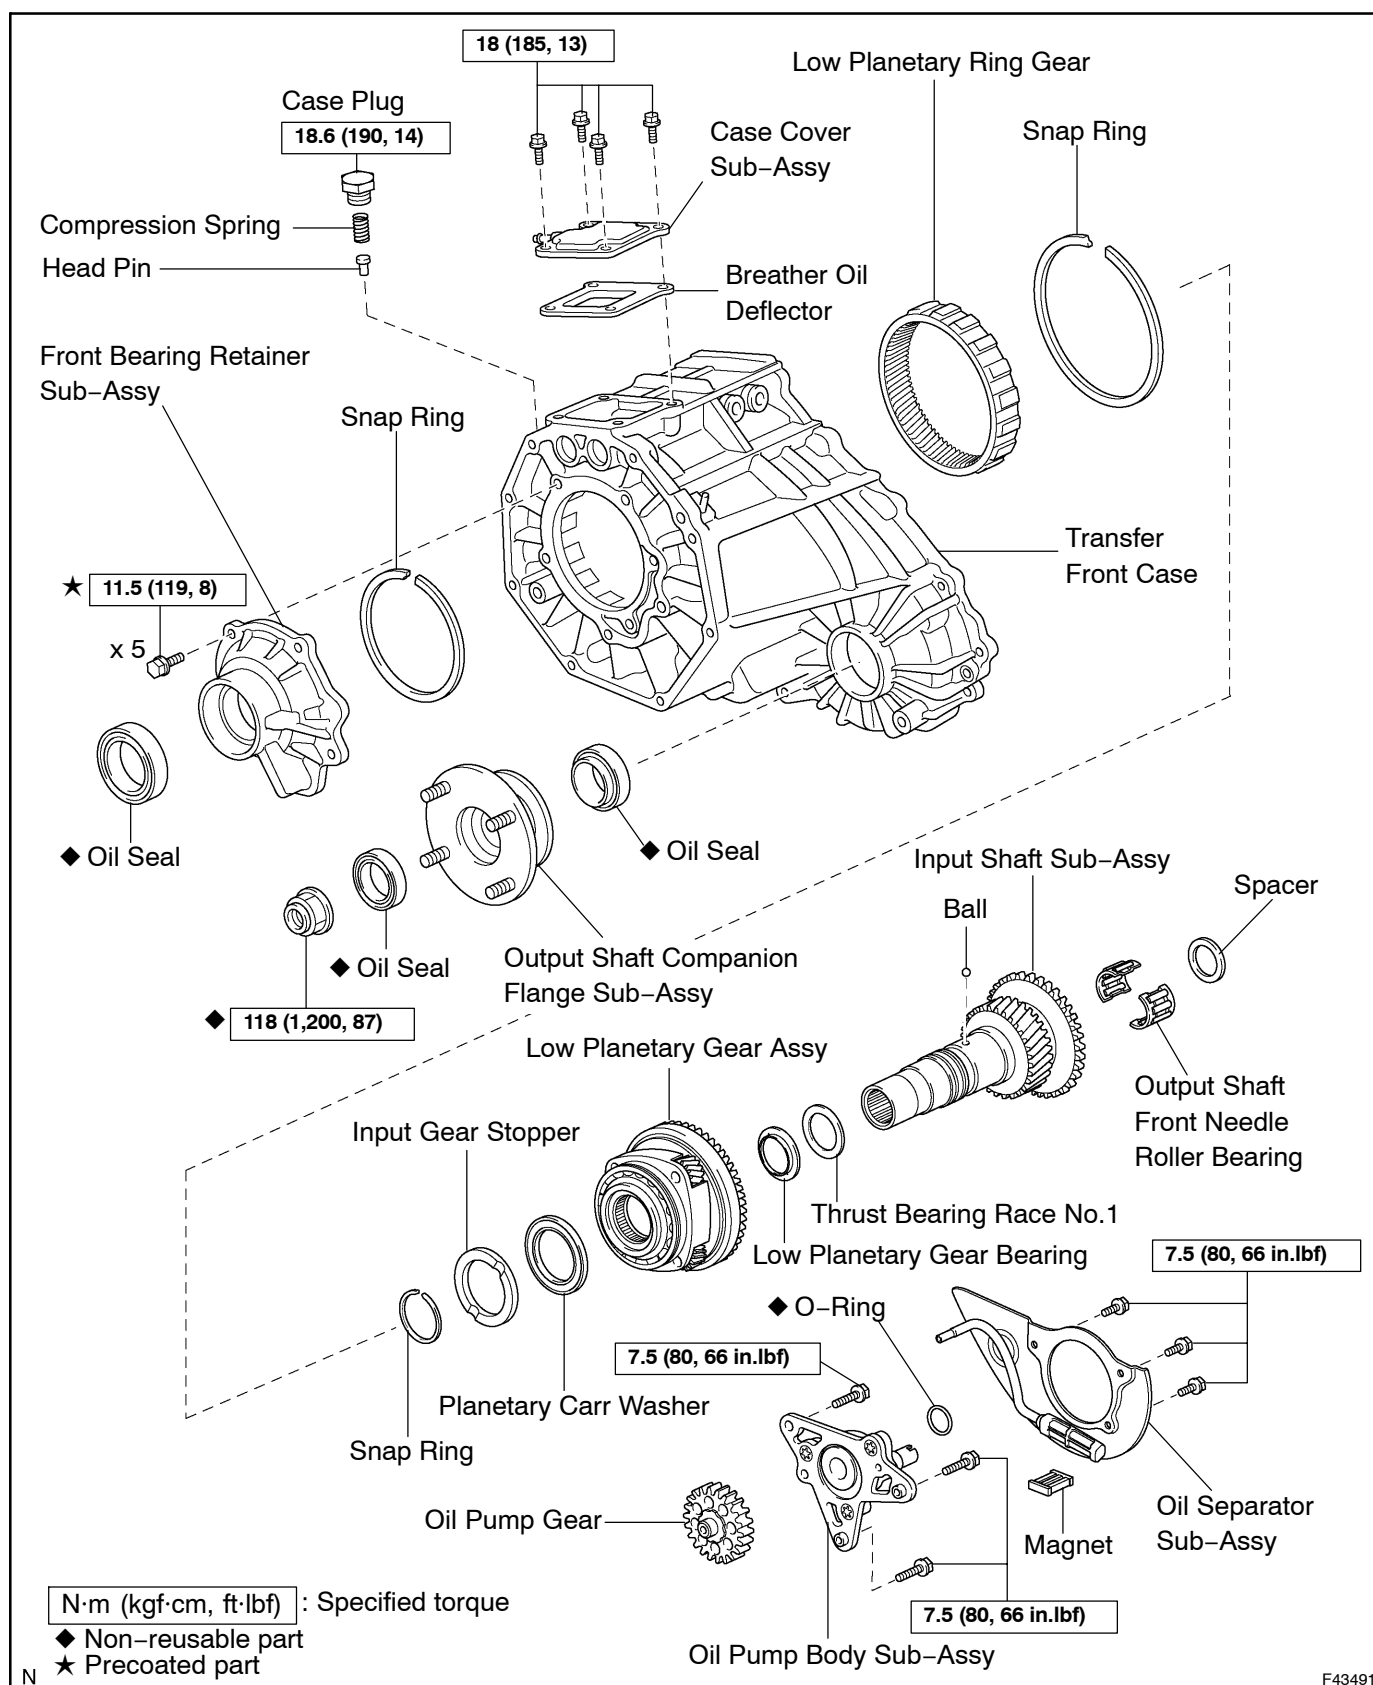



F43491

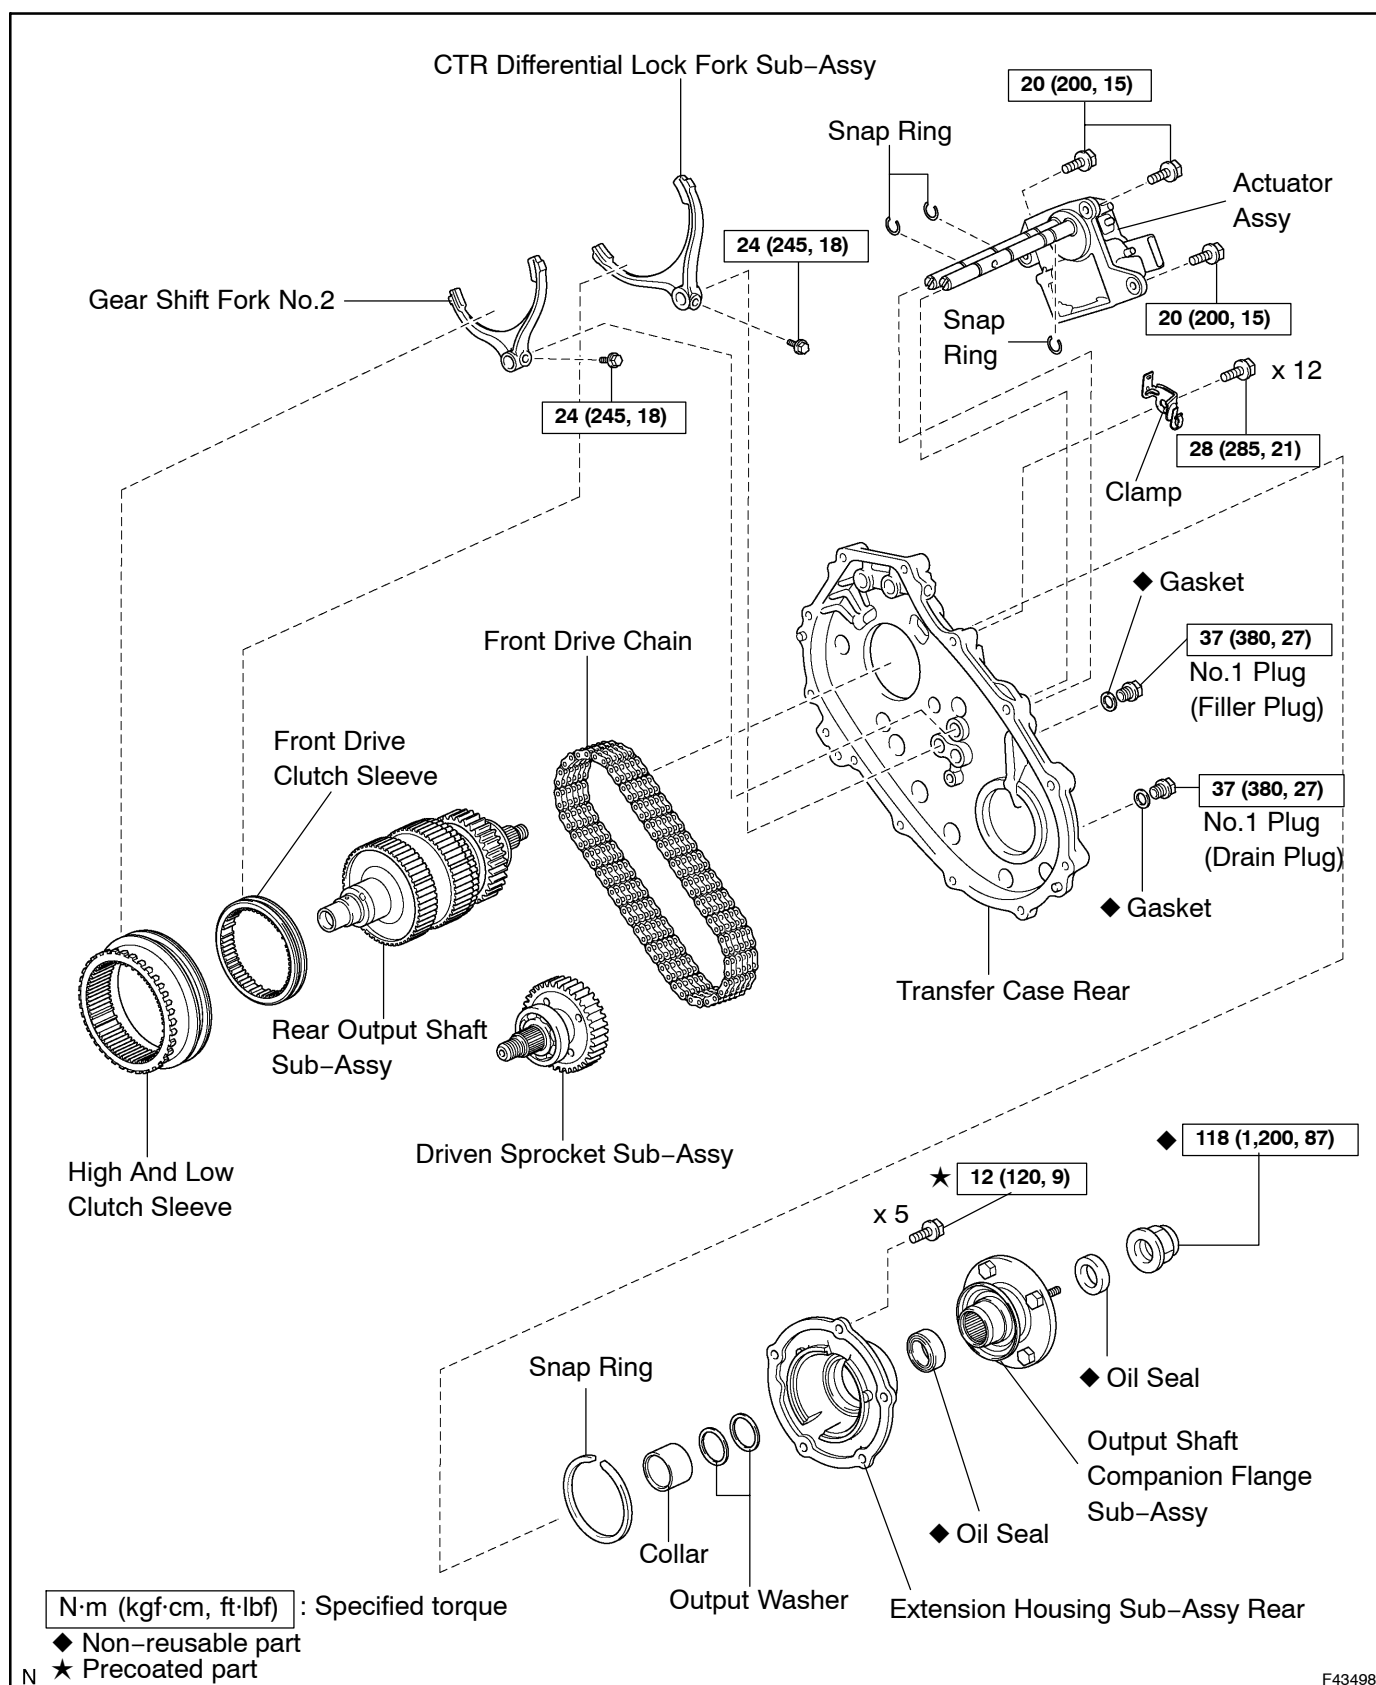

F43498

Input Shaft Sub-Assy:

◆ Seal Ring No.1

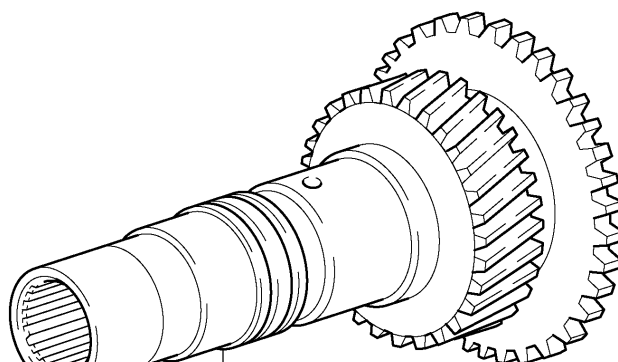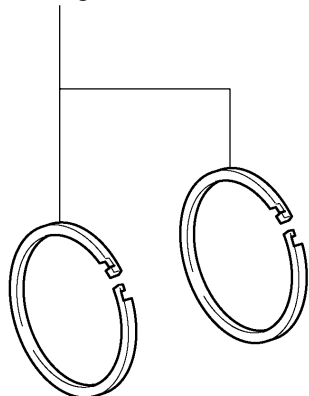

Input Shaft


◆ Non-reusable part

N



F43496

Driven Sprocket Sub-Assy:

◆ Input Gear Radial Ball Bearing

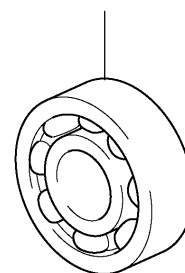

◆ Driven Sprocket Bearing

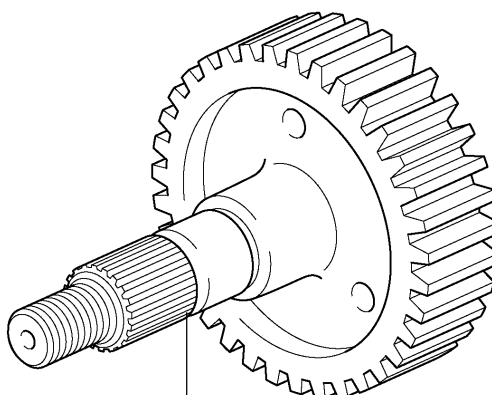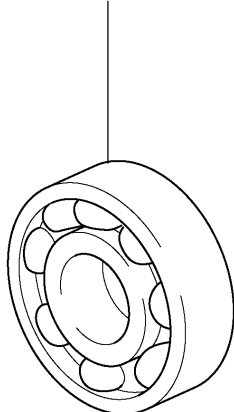


Driven Sprocket

◆ Non-reusable part


N

F43494

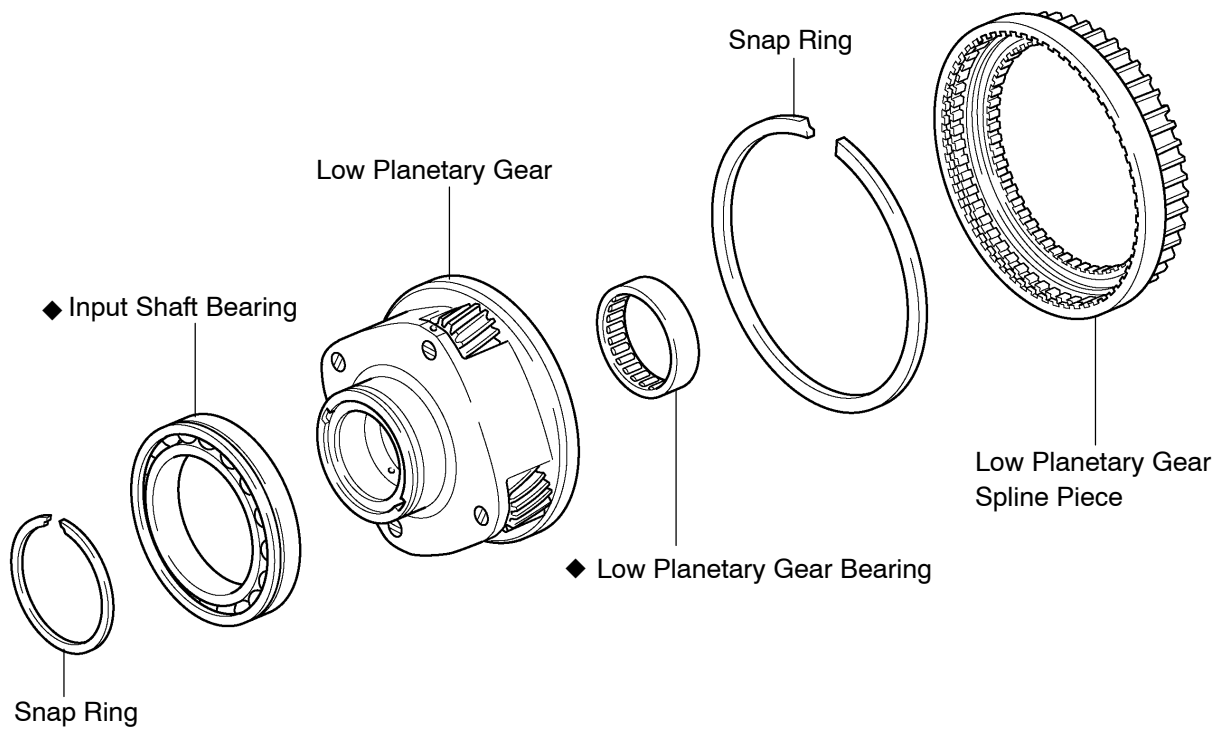Low Planetary Gear Sub-Assy:

N ◆ Non-reusable part

F43495

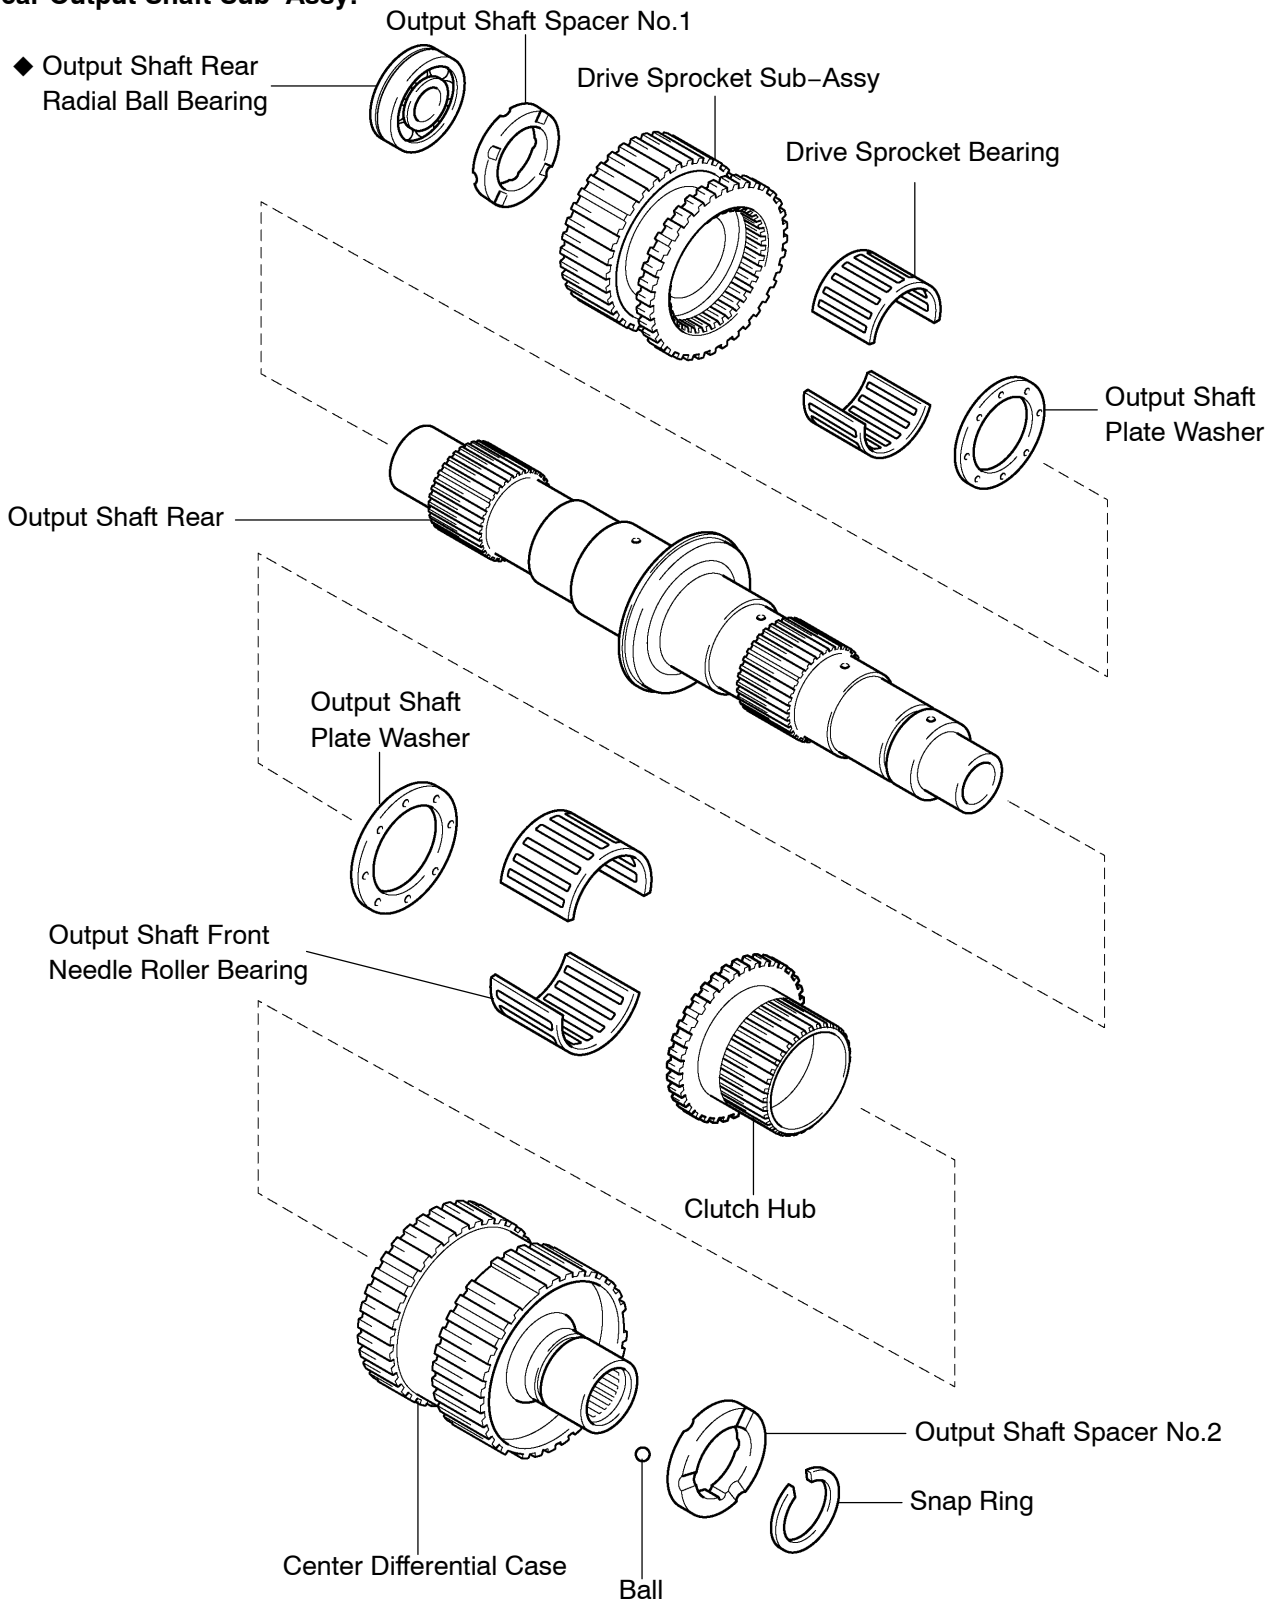Rear Output Shaft Sub-Assy:

N

F43497