


REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without torque specification is a standard bolt (see page 03-2).

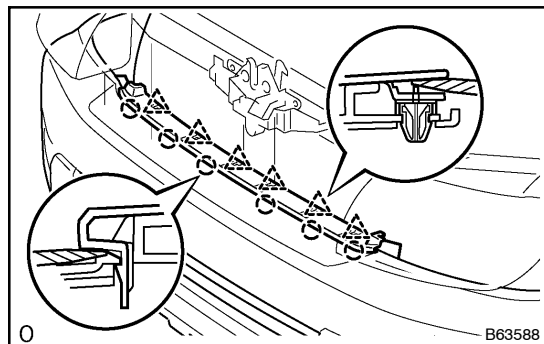


1. REMOVE RADIATOR GRILLE LOWER

- Using a screwdriver, disengage the 6 clips and 6 claws, and remove the radiator grille.


HINT:

Tape the screwdriver tip before use.

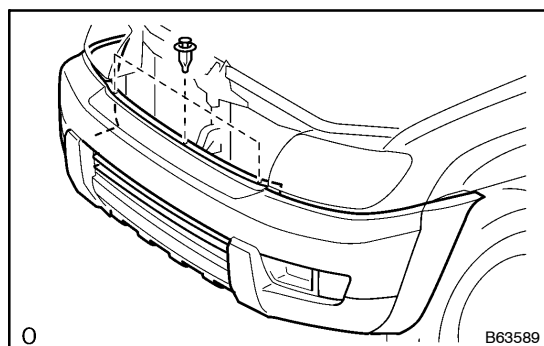


2. REMOVE FRONT BUMPER COVER SUB-ASSY

- Disconnect the turn signal lamp connectors.
- w/ Fog lamp:
Disconnect the fog lamp connectors.
- Remove the 3 clips.

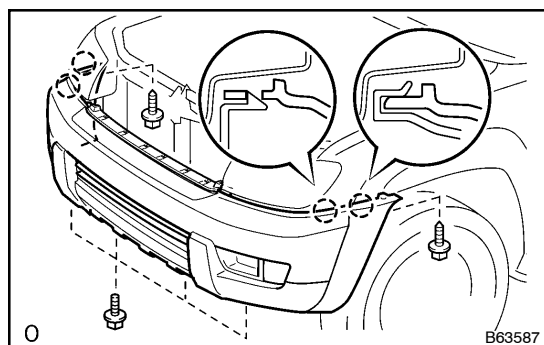

- Remove the 6 bolts and front bumper cover.
- Using a screwdriver, disengage the 4 claws and remove the bumper cover.

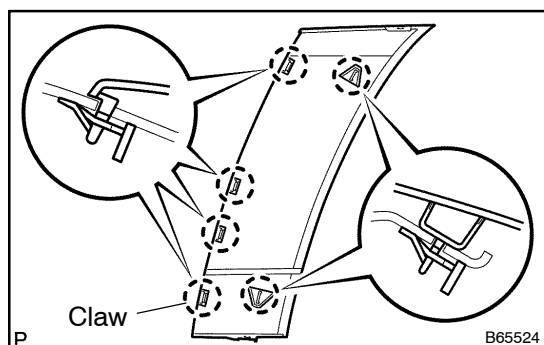

3. REMOVE FRONT BUMPER EXTENSION LH

- Remove the 3 bolts.
- Using a screwdriver, disengage the 6 claws and remove the extension.


HINT:

Tape the screwdriver tip before use.

4. REMOVE FRONT BUMPER EXTENSION RH

HINT:

Use the same procedures above for the LH side.

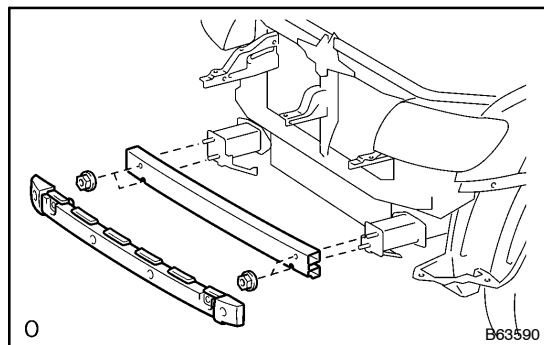5. REMOVE FRONT BUMPER ENERGY ABSORBER**6. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY**

- (a) Remove the 4 nuts and bumper reinforcement.

7. REMOVE FRONT BUMPER REINFORCEMENT PLATE

- (a) Using a screwdriver, remove the reinforcement plate.

HINT:

Tape the screwdriver tip before use.

8. REMOVE FRONT BUMPER SIDE MOUNTING BRACKET LH

- (a) Using a screwdriver, remove the mounting bracket.

HINT:

Tape the screwdriver tip before use.

9. REMOVE FRONT BUMPER SIDE MOUNTING BRACKET RH

HINT:

Using the same procedures described above for the LH side.

10. REMOVE FRONT BUMPER SIDE SUPPORT LH

- (a) Using a screwdriver, remove the 2 bolts and side support.

HINT:

Tape the screwdriver tip before use.

11. REMOVE FRONT BUMPER SIDE SUPPORT RH**12. REMOVE FRONT VALANCE PANEL**

- (a) Remove the 5 nuts and valance panel.


13. REMOVE FRONT BUMPER HOLE COVER LH (W/O FOG LAMP)

- (a) Remove the 2 screws and hole cover LH.


14. REMOVE FRONT BUMPER HOLE COVER RH (W/O FOG LAMP)

- (a) Remove the 2 screws and hole cover RH.

15. REMOVE FOG LAMP ASSY LH (W/ FOG LAMP)**16. REMOVE FOG LAMP ASSY RH (W/ FOG LAMP)****17. REMOVE FRONT TURN SIGNAL LAMP LH****18. REMOVE FRONT TURN SIGNAL LAMP RH**

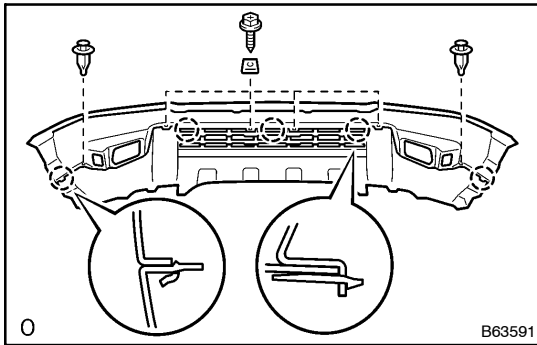
**19. REMOVE FRONT BUMPER COVER**

- (a) Remove the 4 bolts, 2 clips and the bumper cover upper.

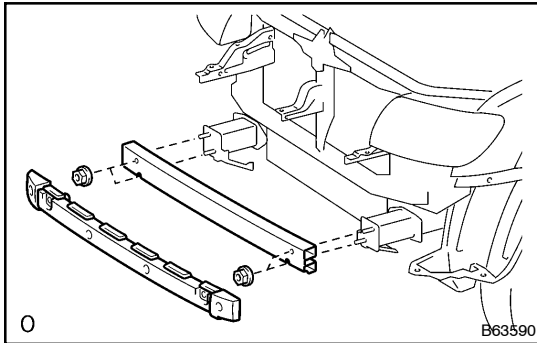**20. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY**

- (a) Install the bumper reinforcement with the 4 nuts.

Torque: 58 N·m (591 kgf·cm, 43 ft·lbf)

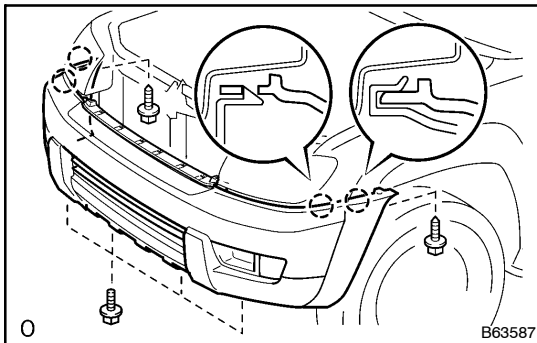**21. INSTALL FRONT BUMPER COVER SUB-ASSY**

- (a) Install the bumper cover with the 6 bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)