


NOTE:

1. ALL SOCKET WIRING IS VIEWED LOOKING INTO SOCKET.
2. DISCONNECT FACTORY WIRING HARNESS FROM PASSENGER-SIDE HIGH-BEAM BULB.

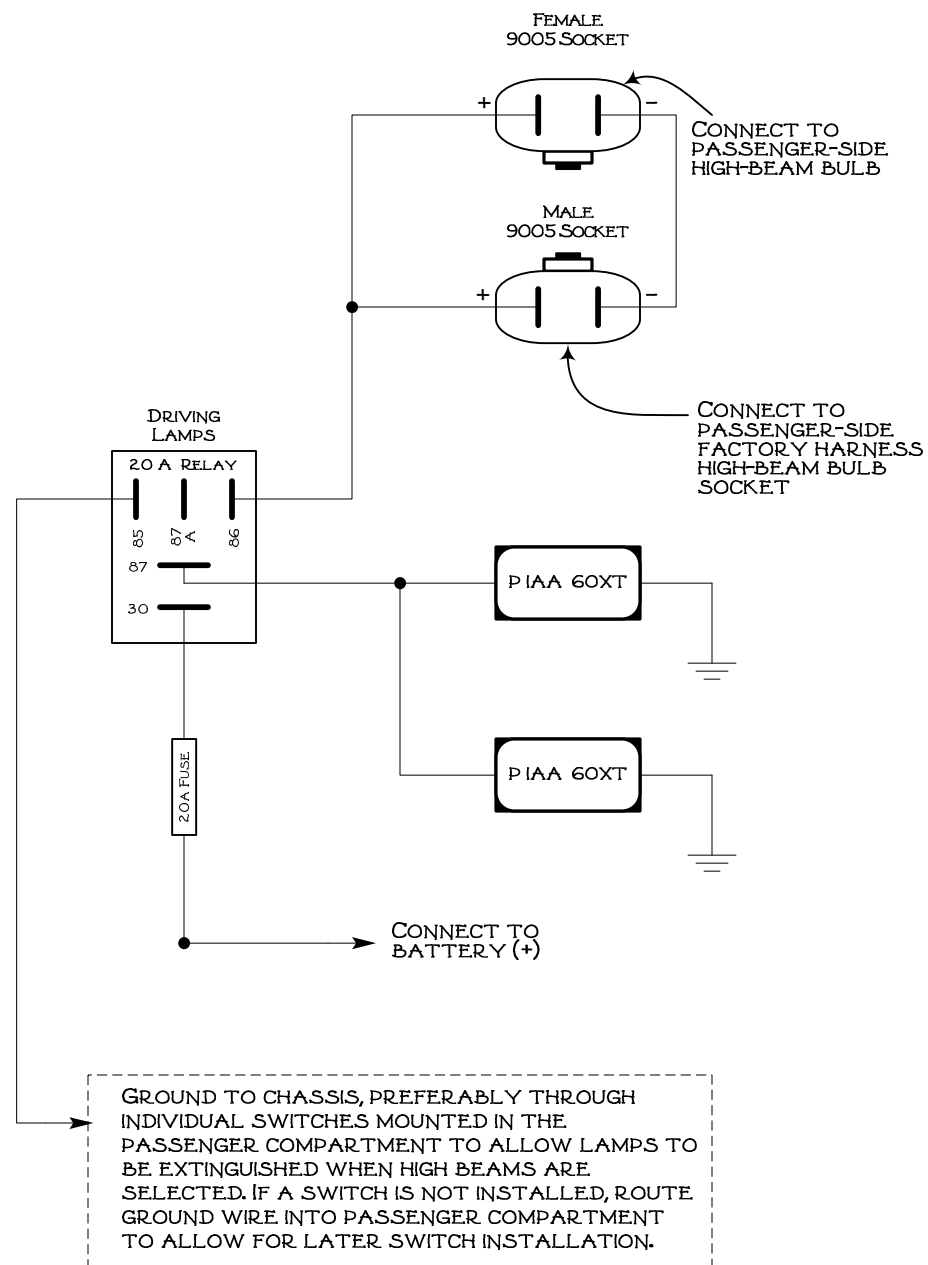

ALTERNATE TOYOTA 4RUNNER FRONT LIGHTING MODIFICATIONS