


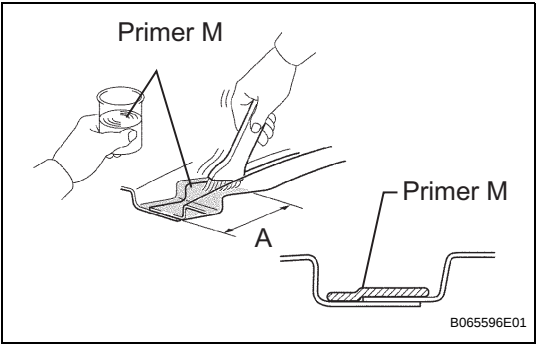

# INSTALLATION

## 1. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP NO. 1

- (a) Using a brush, coat the exposed part of the body on the vehicle side with Primer M.

**Dimension (A):**  
**40 mm (3.125 in.)**

- NOTICE:**
- Dry the primer coating for 3 minutes or more.
  - Do not coat the adhesive with Primer M.
  - Do not keep any of the opened Primer M for later use.

- (1) Using a heat light, heat the body and moulding.

**Heating temperature:**


|          |                            |
|----------|----------------------------|
| Body     | 40 to 60 °C (104 to 140°F) |
| Moulding | 20 to 30 °C (68 to 86°F)   |


- NOTICE:**  
**Do not heat the moulding and body excessively.**

- (b) Apply new adhesive tape to the clip as shown in the illustration.

- (1) Attach the clip to the protrusion on the vehicle body with adhesive tape.


ET

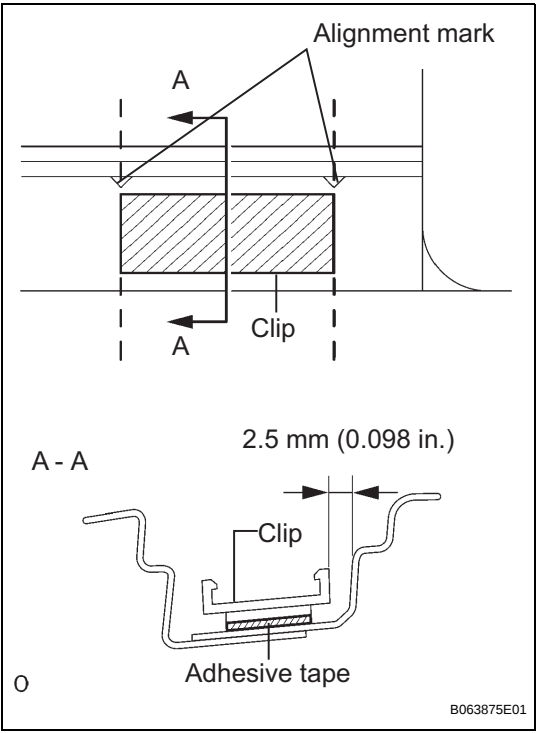

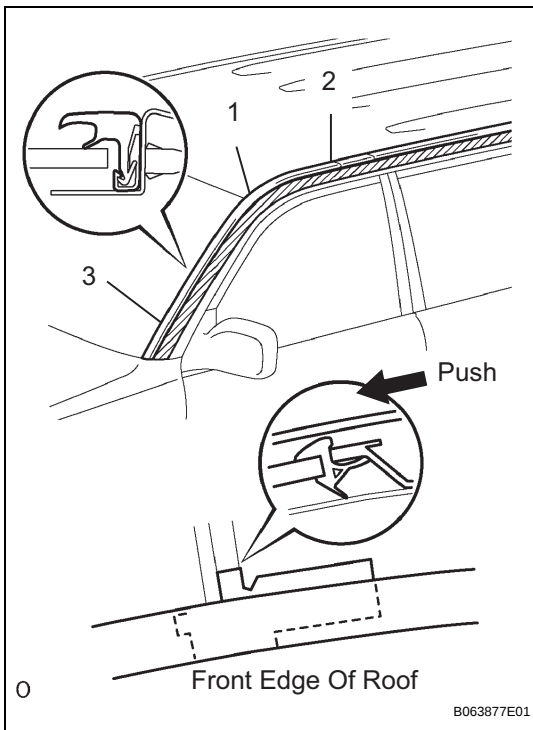


## 2. INSTALL WINDSHIELD MOULDING OUTSIDE LH

- (a) Install the moulding as shown in the illustration.
- (1) Install the middle of the moulding onto the front edge of the roof.
  - (2) Install the rear end of the moulding along the side edge of the roof.
  - (3) Install the front end of the moulding along the side edge of the windshield.

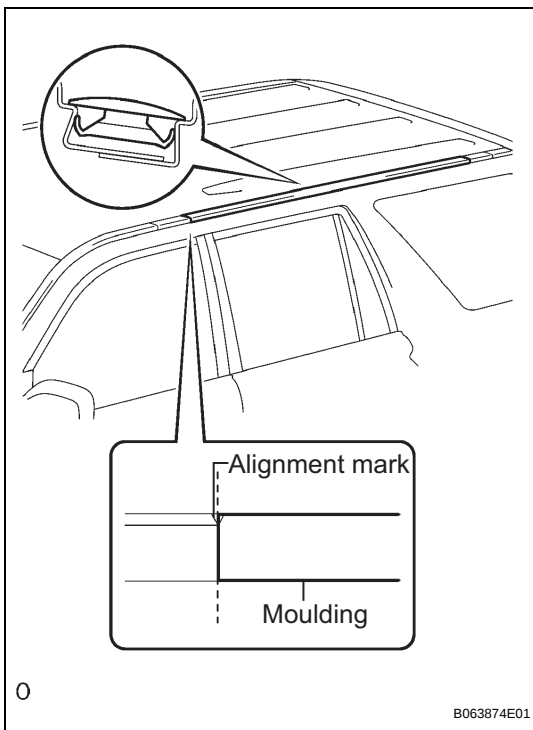

## 3. INSTALL ROOF DRIP SIDE FINISH MOULDING CENTER NO. 2 LH

- (a) Install the moulding as shown in the illustration.
- (1) Aligning the front end of the moulding with the alignment mark on the body, install the moulding.

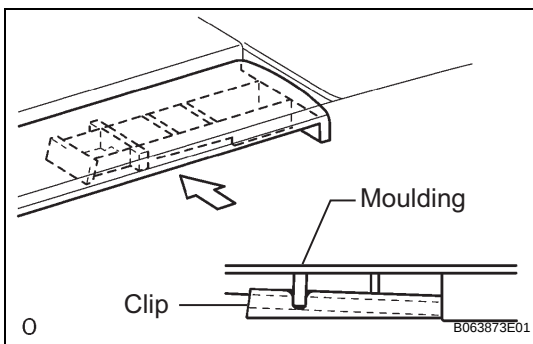

## 4. INSTALL ROOF DRIP SIDE FINISH MOULDING REAR LH

- (a) Install the moulding as shown in the illustration.