



Overland Warehouse Suspension Install Instructions

KDSS Calibration

2010 Toyota 4Runner KDSS Equipped

Note:

Overland Warehouse recommends that all products are installed by trained professionals.


Tools required:

- 10, 12, 13, 14, 17, 19 mm wrenches and socket set
- Torque wrench




Instructions

1. Park vehicle on level surface.
2. Remove stabilizer control valve protector cover, located on frame rail by the drive door.

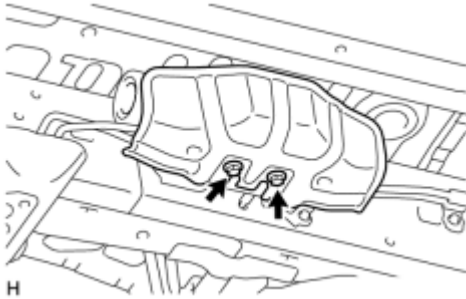

3. Loosen the upper and lower chamber shutter valves on the accumulator. **Do not loosen more than the top of the bolt protrudes 12mm (1/2") from the surface of the block. DO NOT REMOVE THE SHUTTER VALVES.**

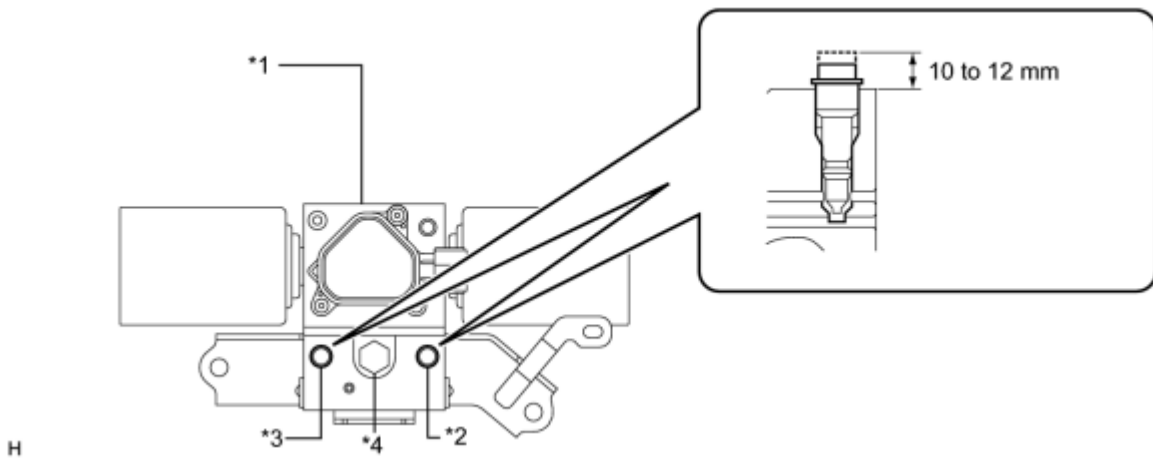

4. Bounce the vehicle till the left and right sides are level.
5. Torque the shutter valves shut **80in/ft or 6.5lb/ft.**
6. Reinstall the protective cover, torque the bolts **21ft/lb.**

*- Products for off road use only.
Copyright © 2009 Overland Warehouse LLC