

Receiver Wiring Adaptor

IMPORTANT

Before starting, compare items on your invoice with items received. Carefully check through packaging material. If an item is missing, please call **Crutchfield** at 1-888-955-6000.

120 70-1761

Revision 10/01/13

STEP 1 -- CONNECT WIRES

A. Connect wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver).

B. **IMPORTANT:** The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.

C. Make final wiring connections following instructions on the next page.

Note: If the adaptor harness does not match the vehicle radio harness, the matching plug may be found below the factory radio at the amplifier. The amp must be bypassed by unplugging the matching plug from the factory amp and plugging it into the adaptor harness.


Note: Not all Toyota pickups have factory installed rear speaker wiring harnesses. If present, it will be taped to the power/front speaker harness.

If your receiver does not have an illumination wire, tape off the Orange/White wire.

Note: Do not connect the power antenna wire in pre-1997 Toyota Landcruisers.

Individually tape off any unused wires.

Note: In 1998-2000 Lexus GS vehicles, these harnesses connect at the amplifier location behind the passenger's side kickpanel. The 12 Volts Constant power, chassis ground and speaker wires must be lengthened in order to reach the kickpanel area. The power antenna and 12 Volts Switched power leads must be spliced at the radio location.

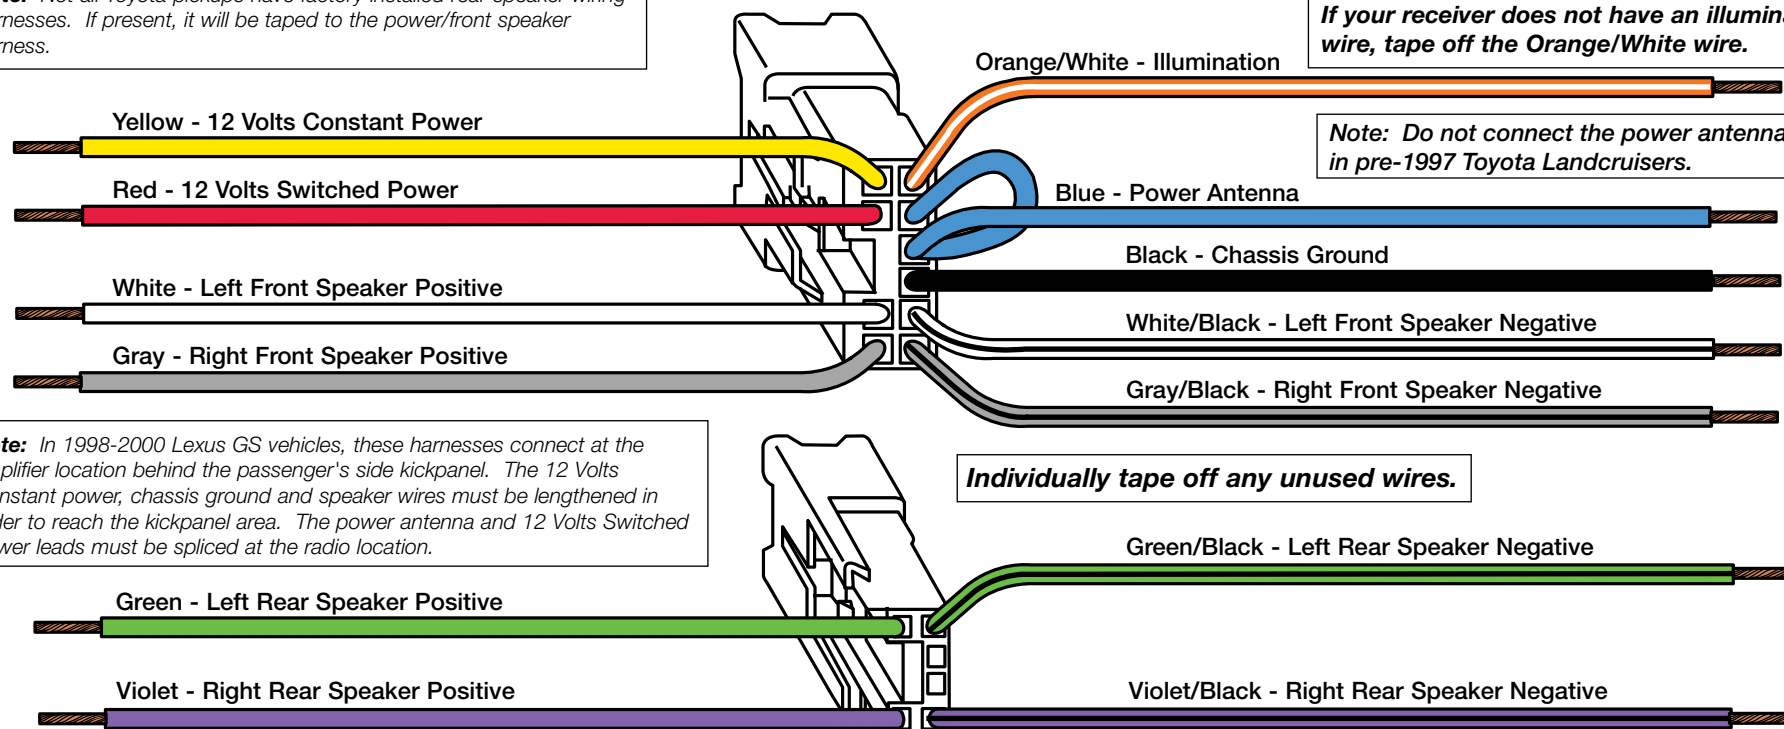

CRUTCHFIELD
Copyright 2013 Crutchfield Corporation



120701761

Receiver Wiring Adaptor Connections


120 70-1761

Page 2


STEP 2 -- CRIMP CONNECTIONS

Tools & Parts Required ▶


Wire Stripper/Crimp Tool

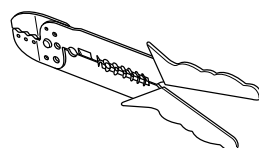


Crimp Caps




A. Strip wires back 1/2".

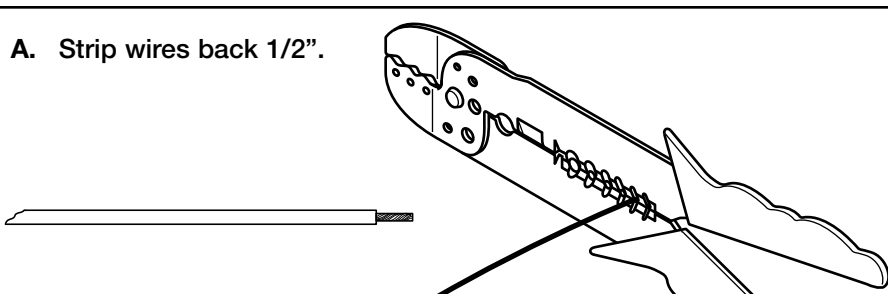

B. Twist wires together and insert in crimp cap.

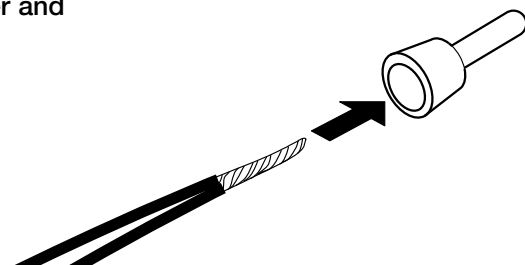

C. Squeeze middle of cap for tight connection.

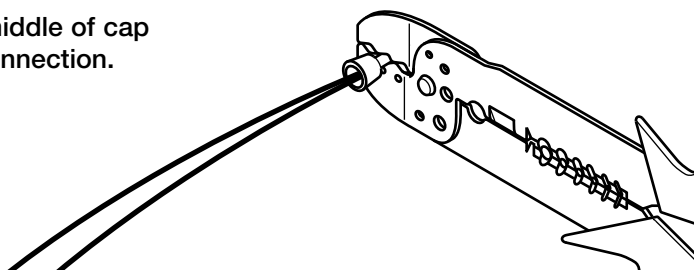


STEP 2 -- CONTINUED

D. Complete crimp connections for all necessary wires.

E. Be sure to wrap any wires from the Wiring Adaptor that are not necessary (wires with no match from the new receiver) with electrical tape.

Generic Illustration

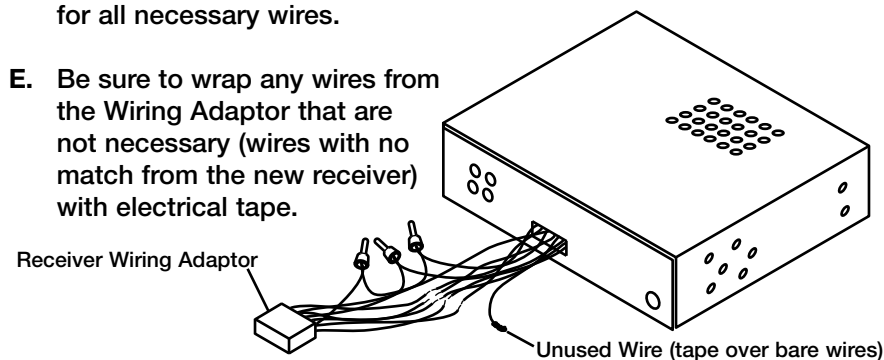

STEP 3 -- APPLICATION

When ready to install the receiver, plug the Wiring Adaptor from the new receiver or receiver assembly into the factory radio harness(es) in the vehicle dash.

Generic Illustration

