


2007 Toyota Solara E7009 Navigation system installed on 2005 Toyota Tundra



Toyota Voice Command Microphone: Extract the pin from the connector you should see a set of 7 wires:

Yellow, white, brow, blue, red, green and black.


Since we will not use the green and black, I bended back and use some electrical tape to tape it.

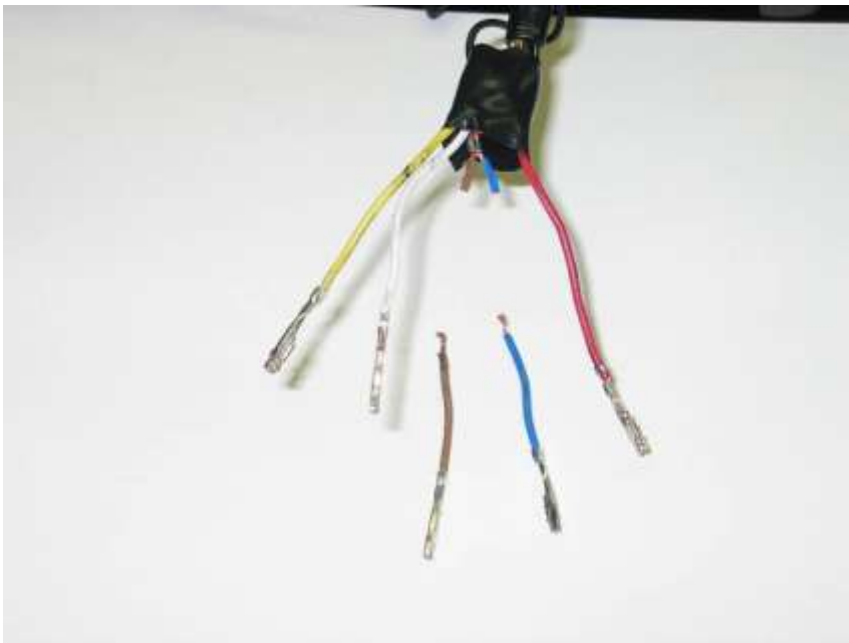

Cut off 2 wires: Brow and blue and trim the end.

Solder the brow and blue wire. Used hot air gun and some sleeving to cover the end of each wire.


**MIC wiring for 07 Solara Nav in
04 or 05 Sienna w/ MIC kit for Bluetooth**

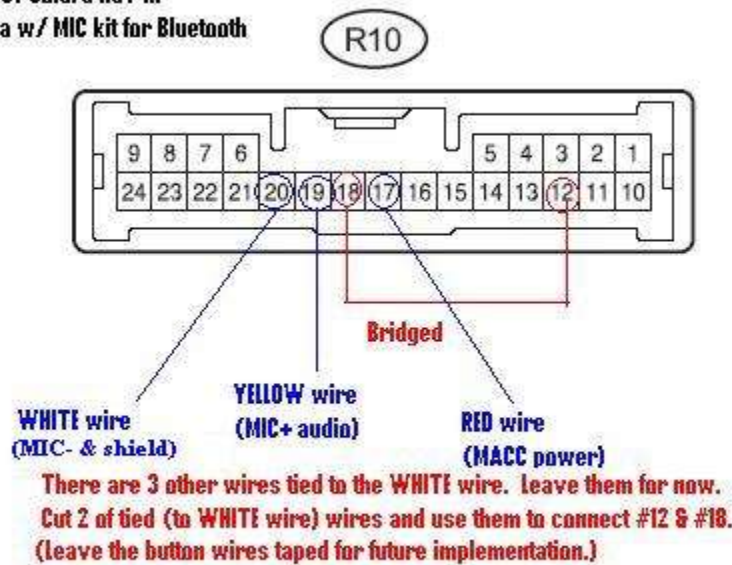

SiennaClub.org

SeanY

Follow this instruction and connect those wires to connector R10 of the Navigation unit

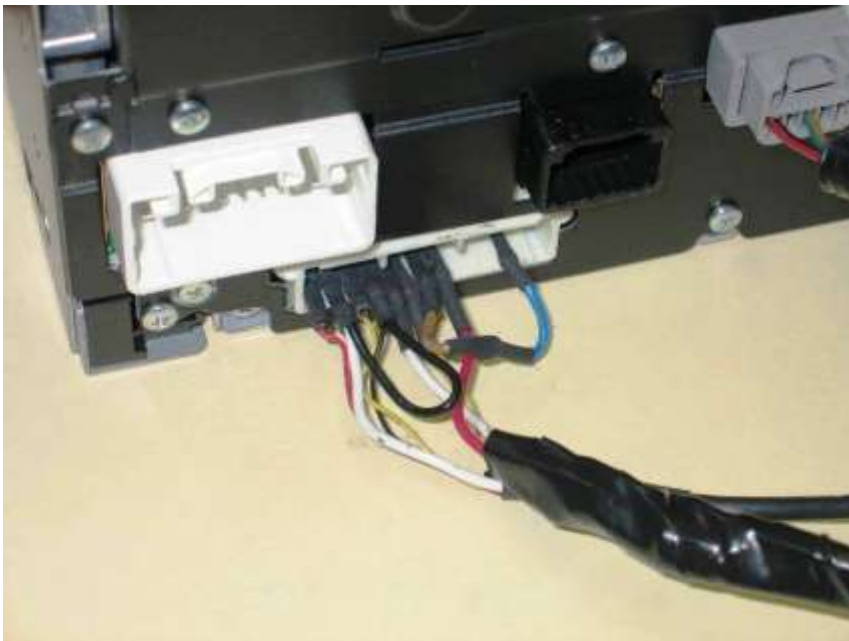

After done it should look like this