




M

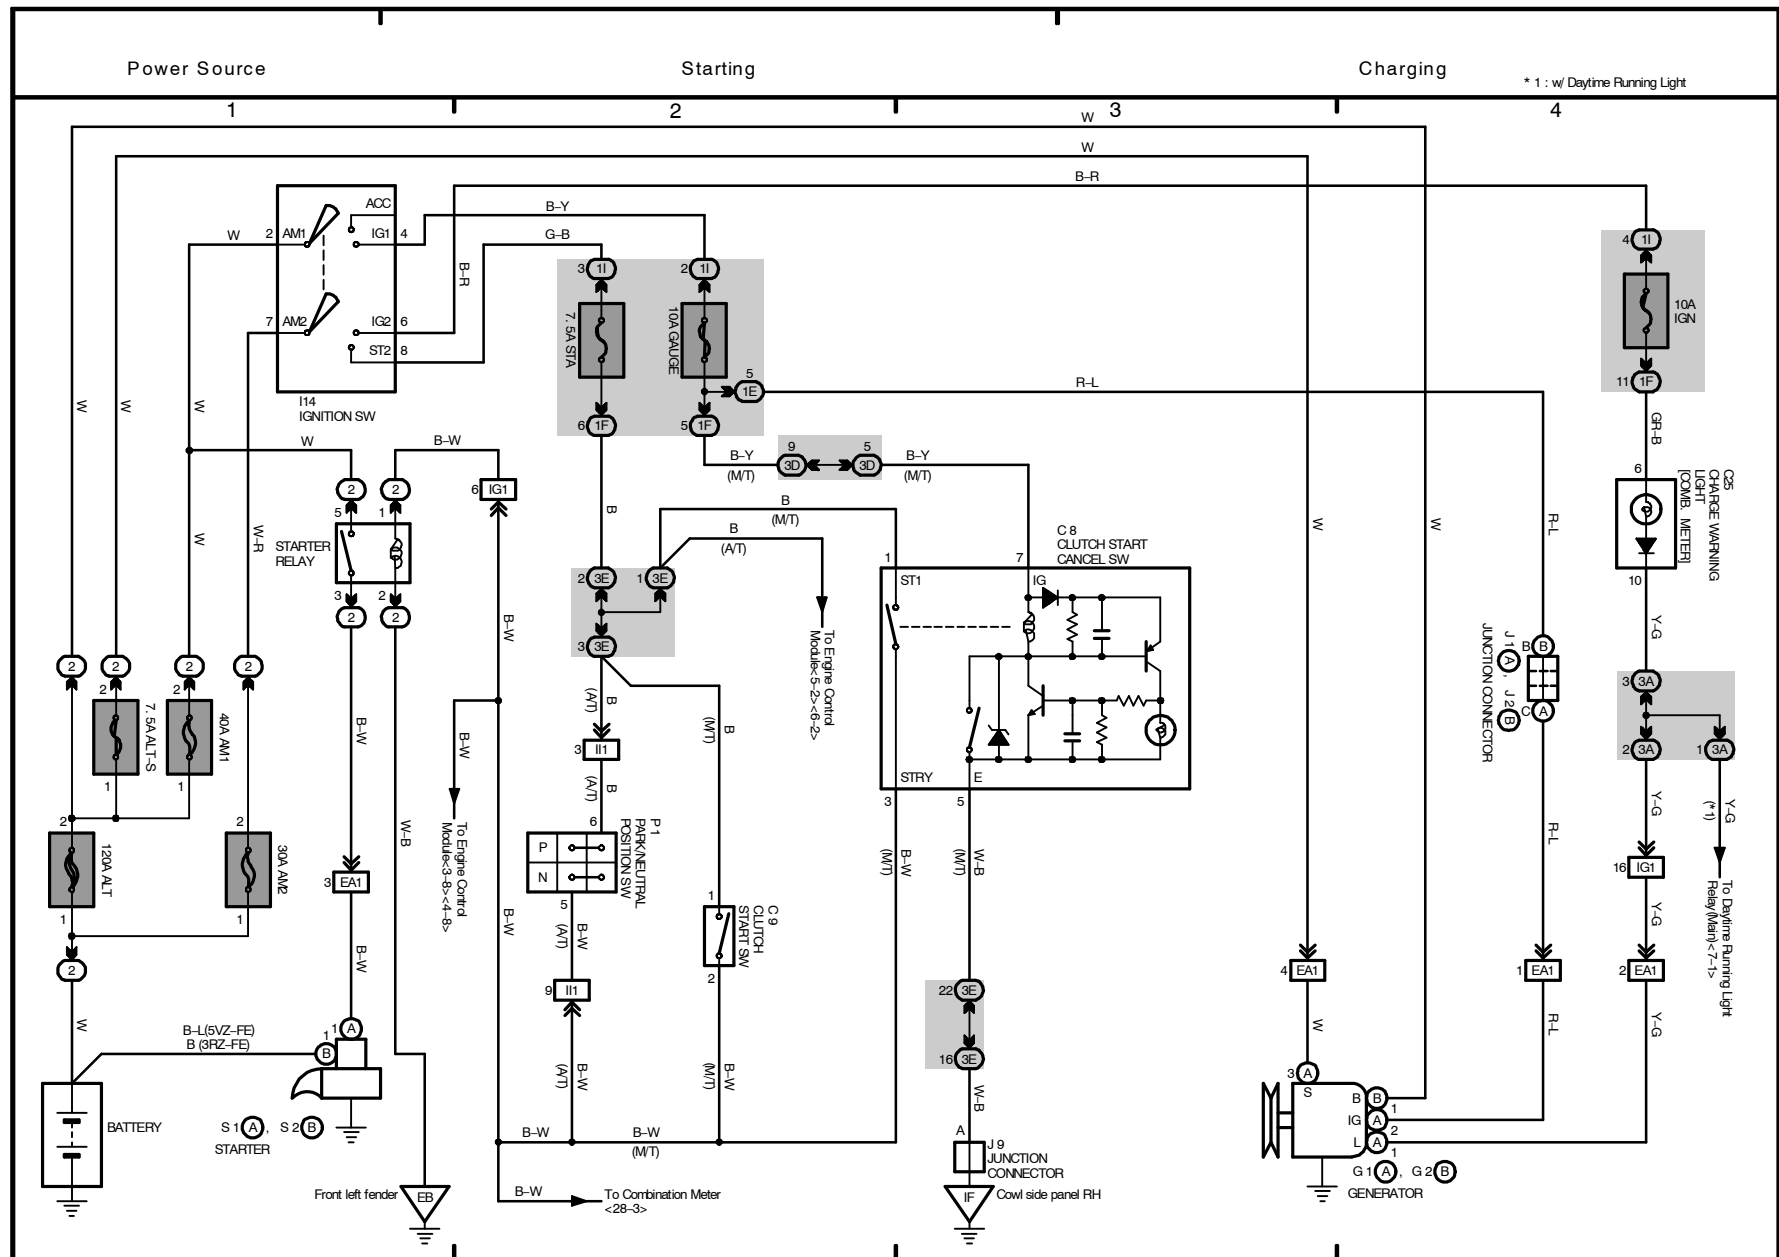




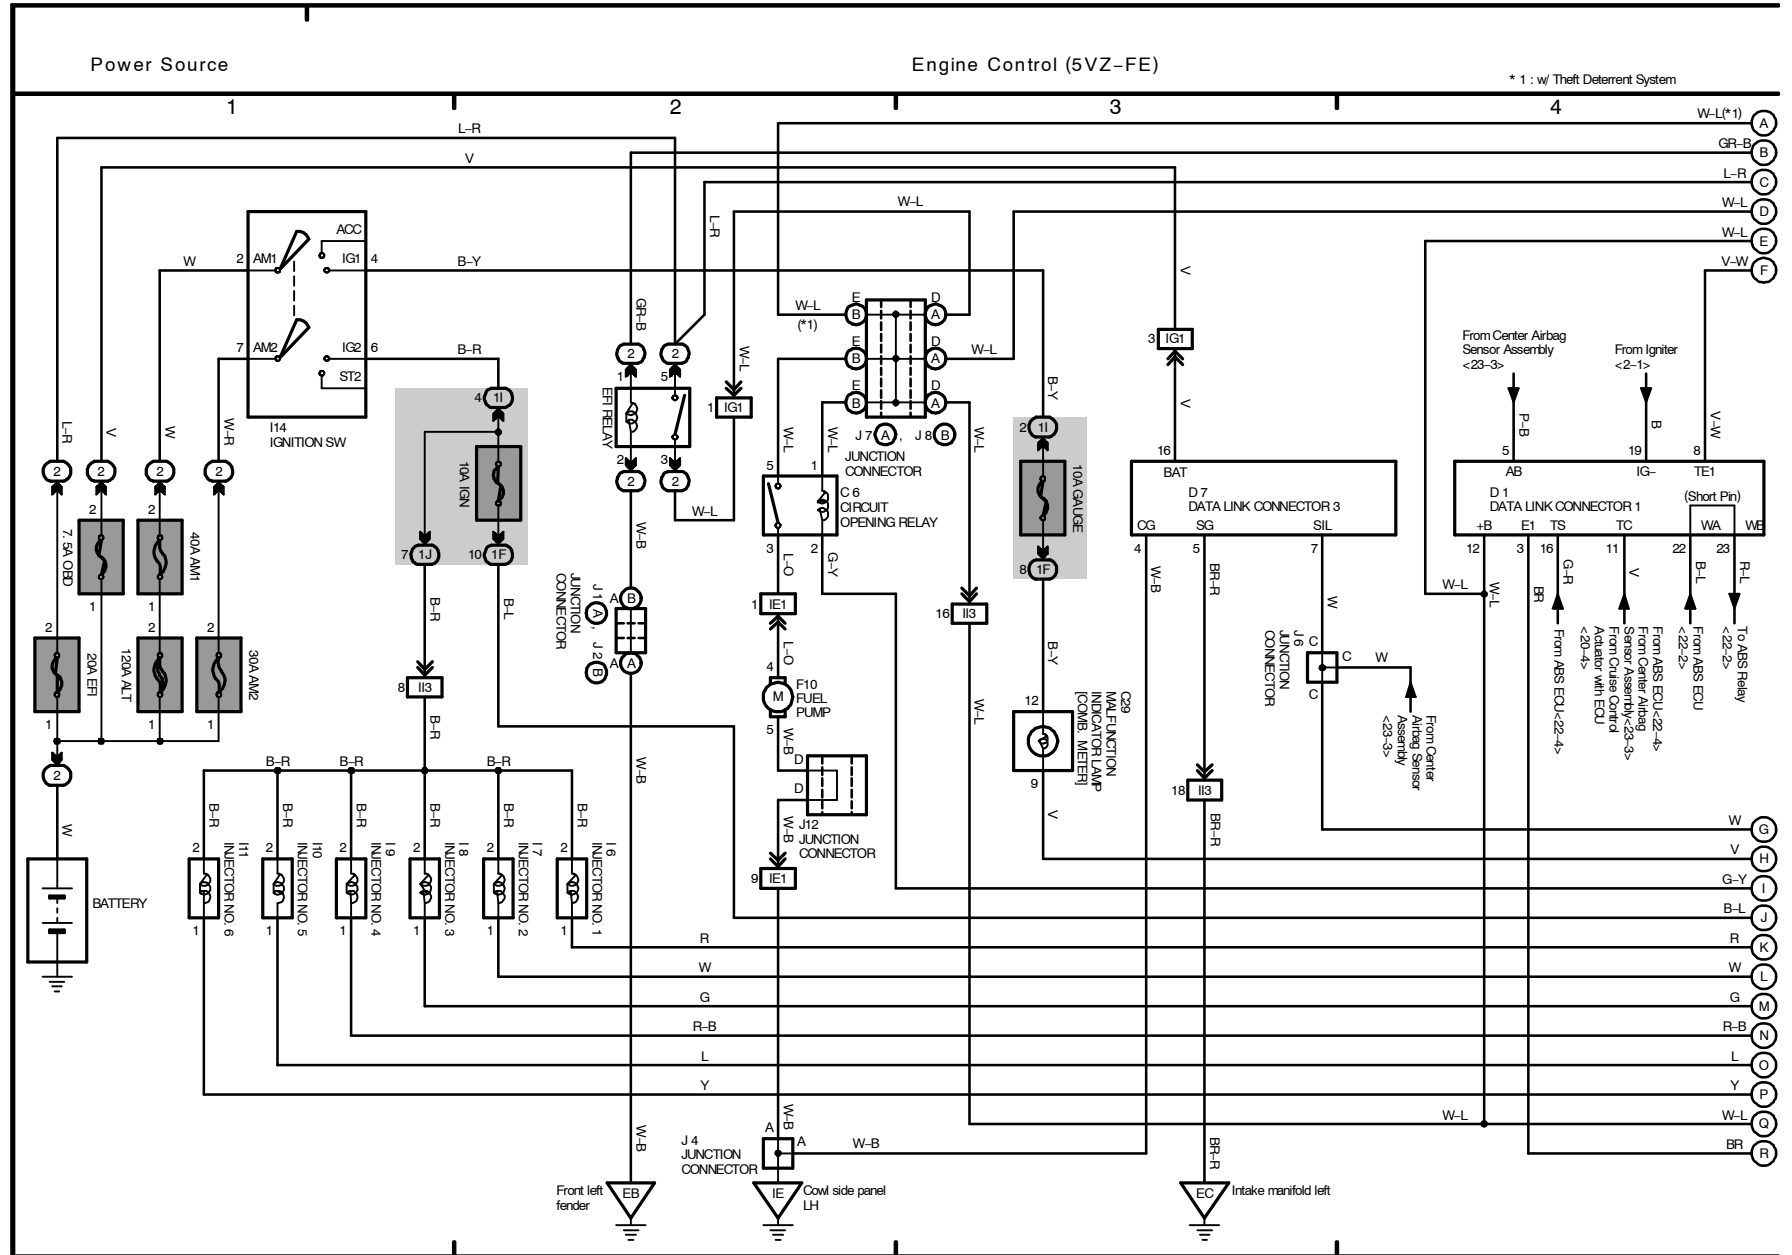


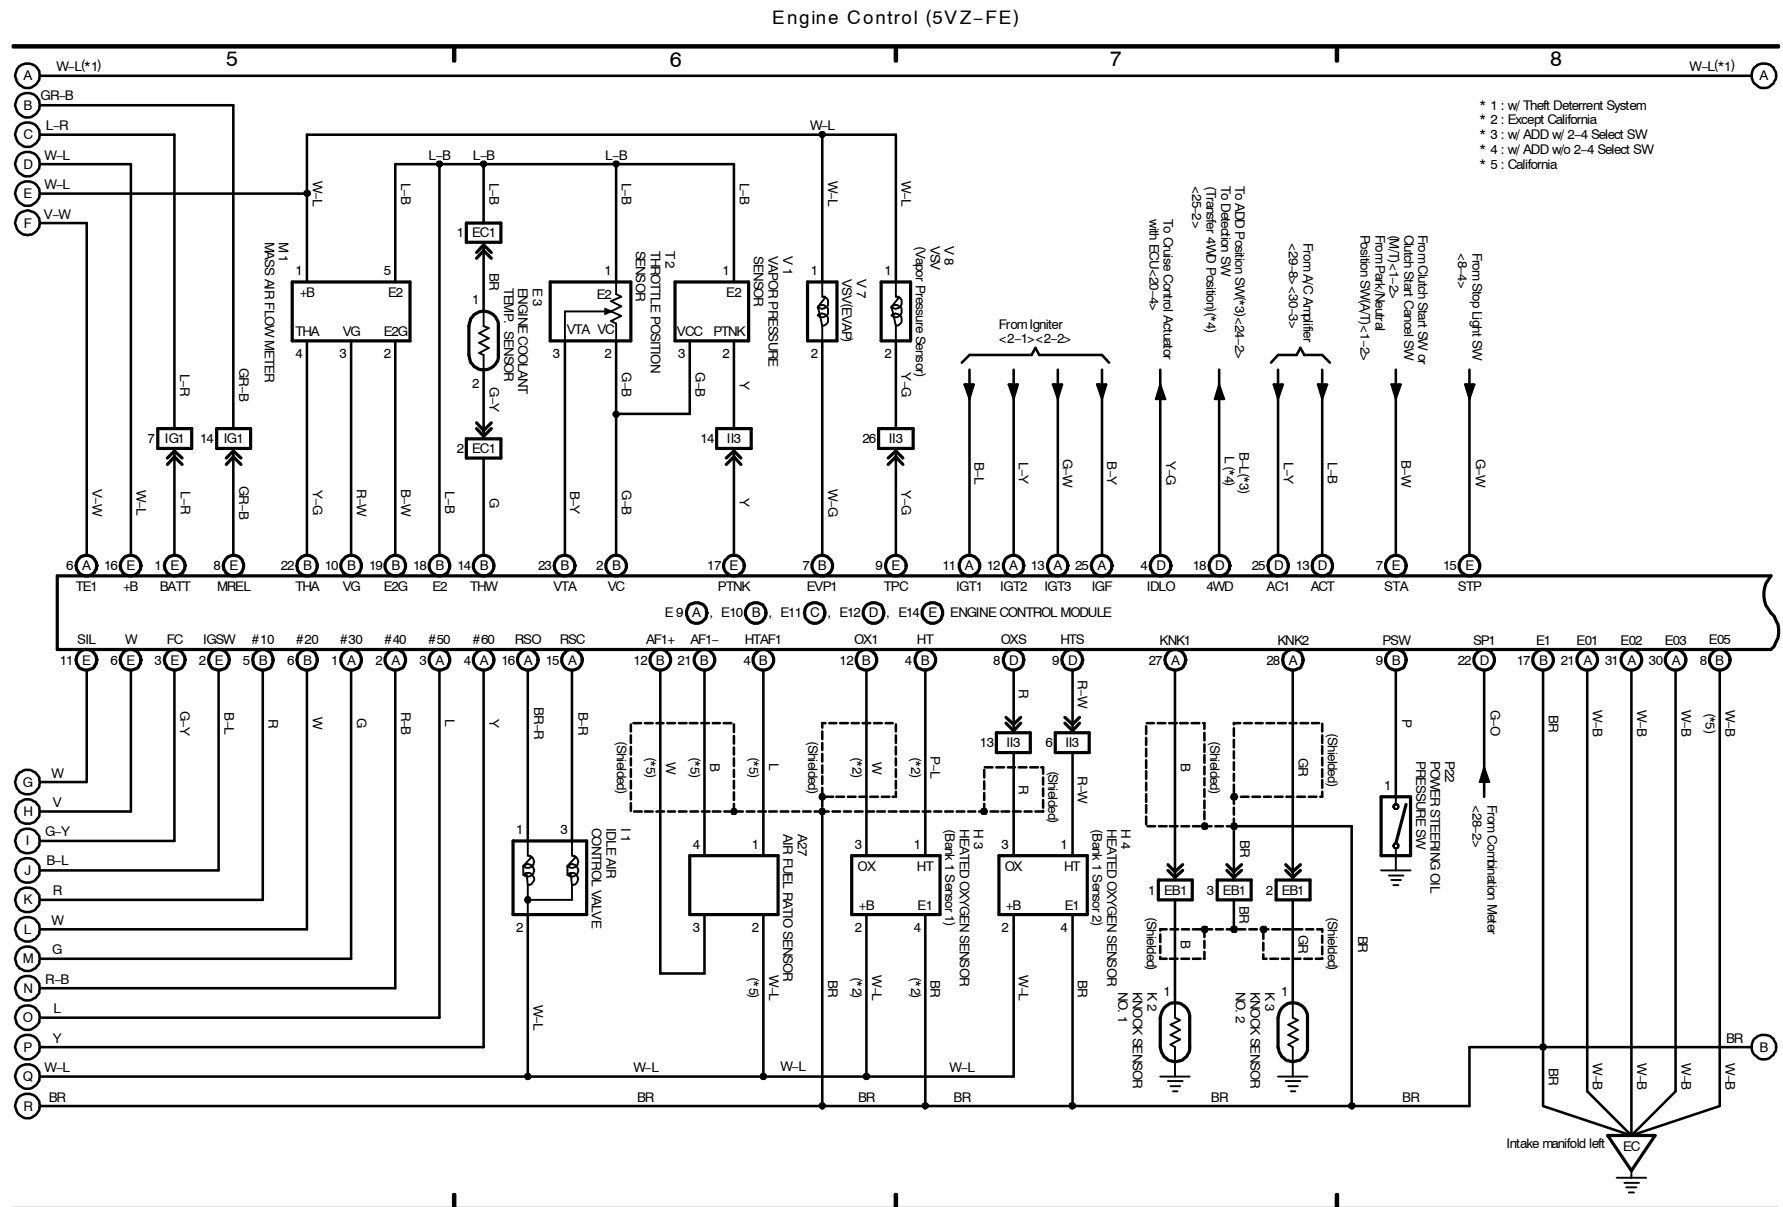


3 4RUNNER (Cont' d)

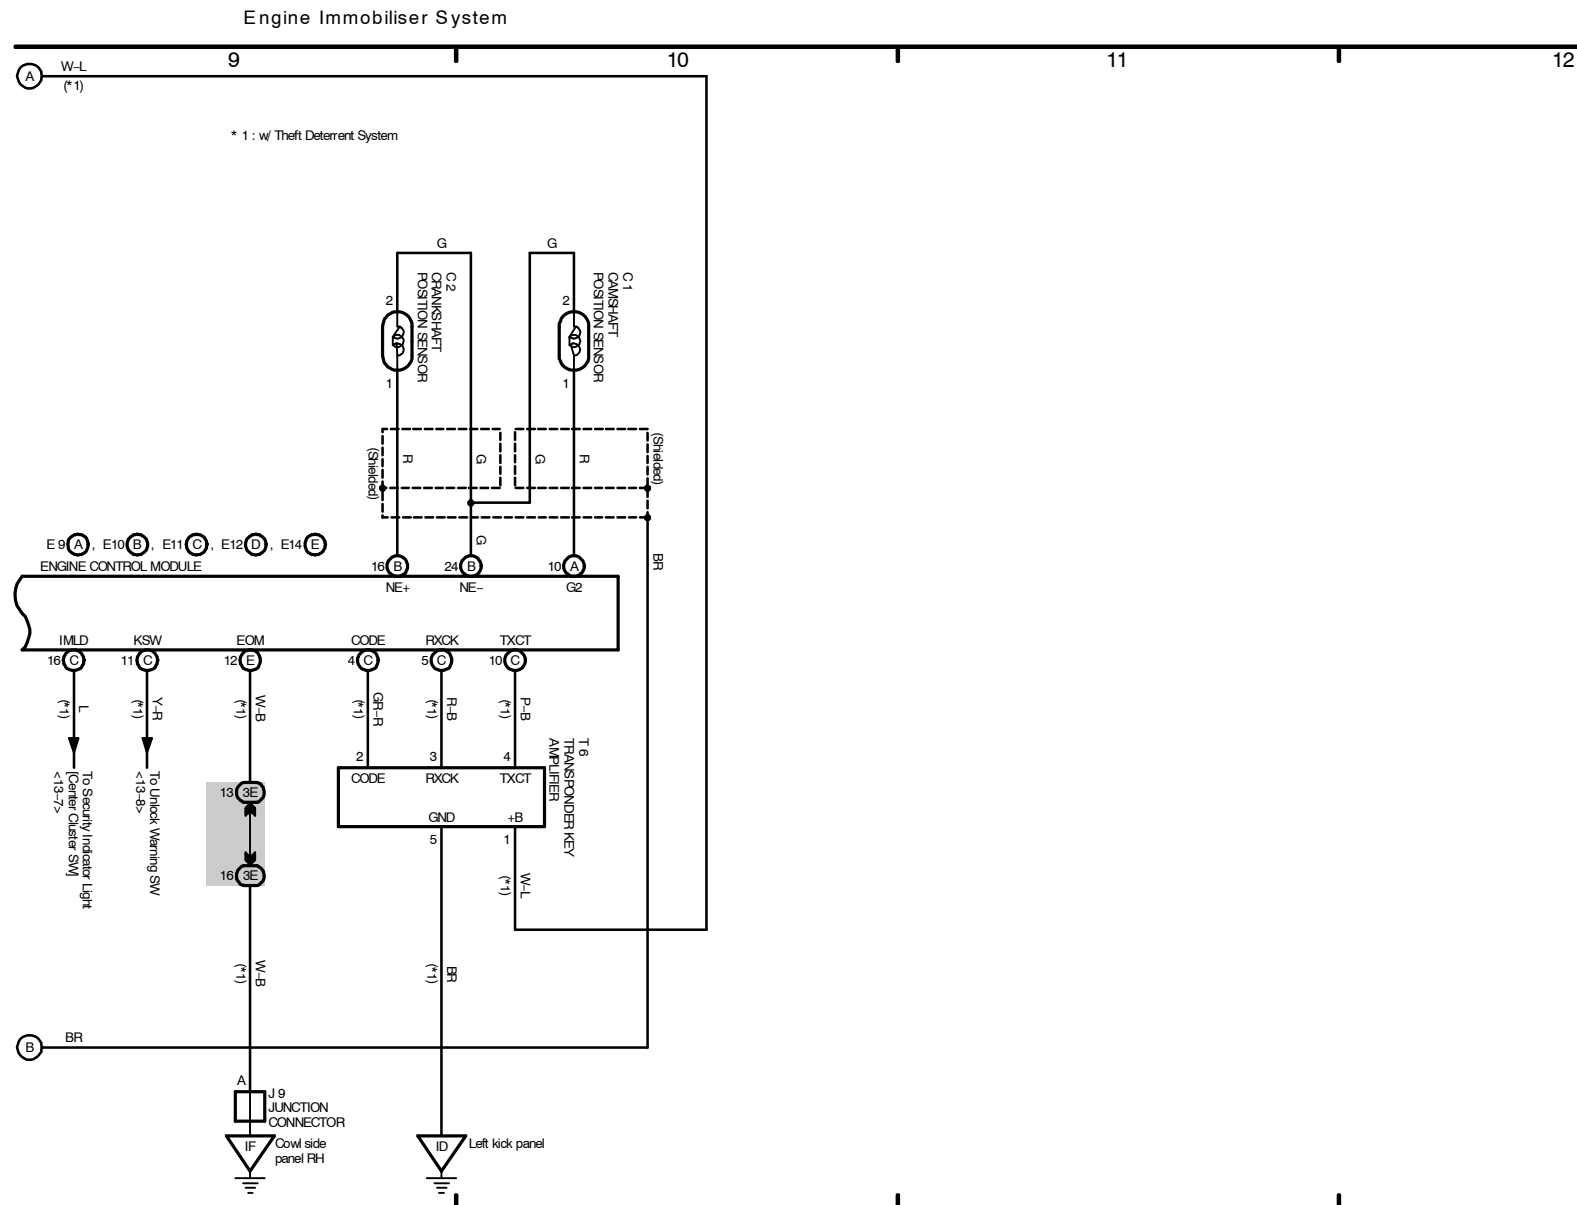


OVERALL ELECTRICAL WIRING DIAGRAM

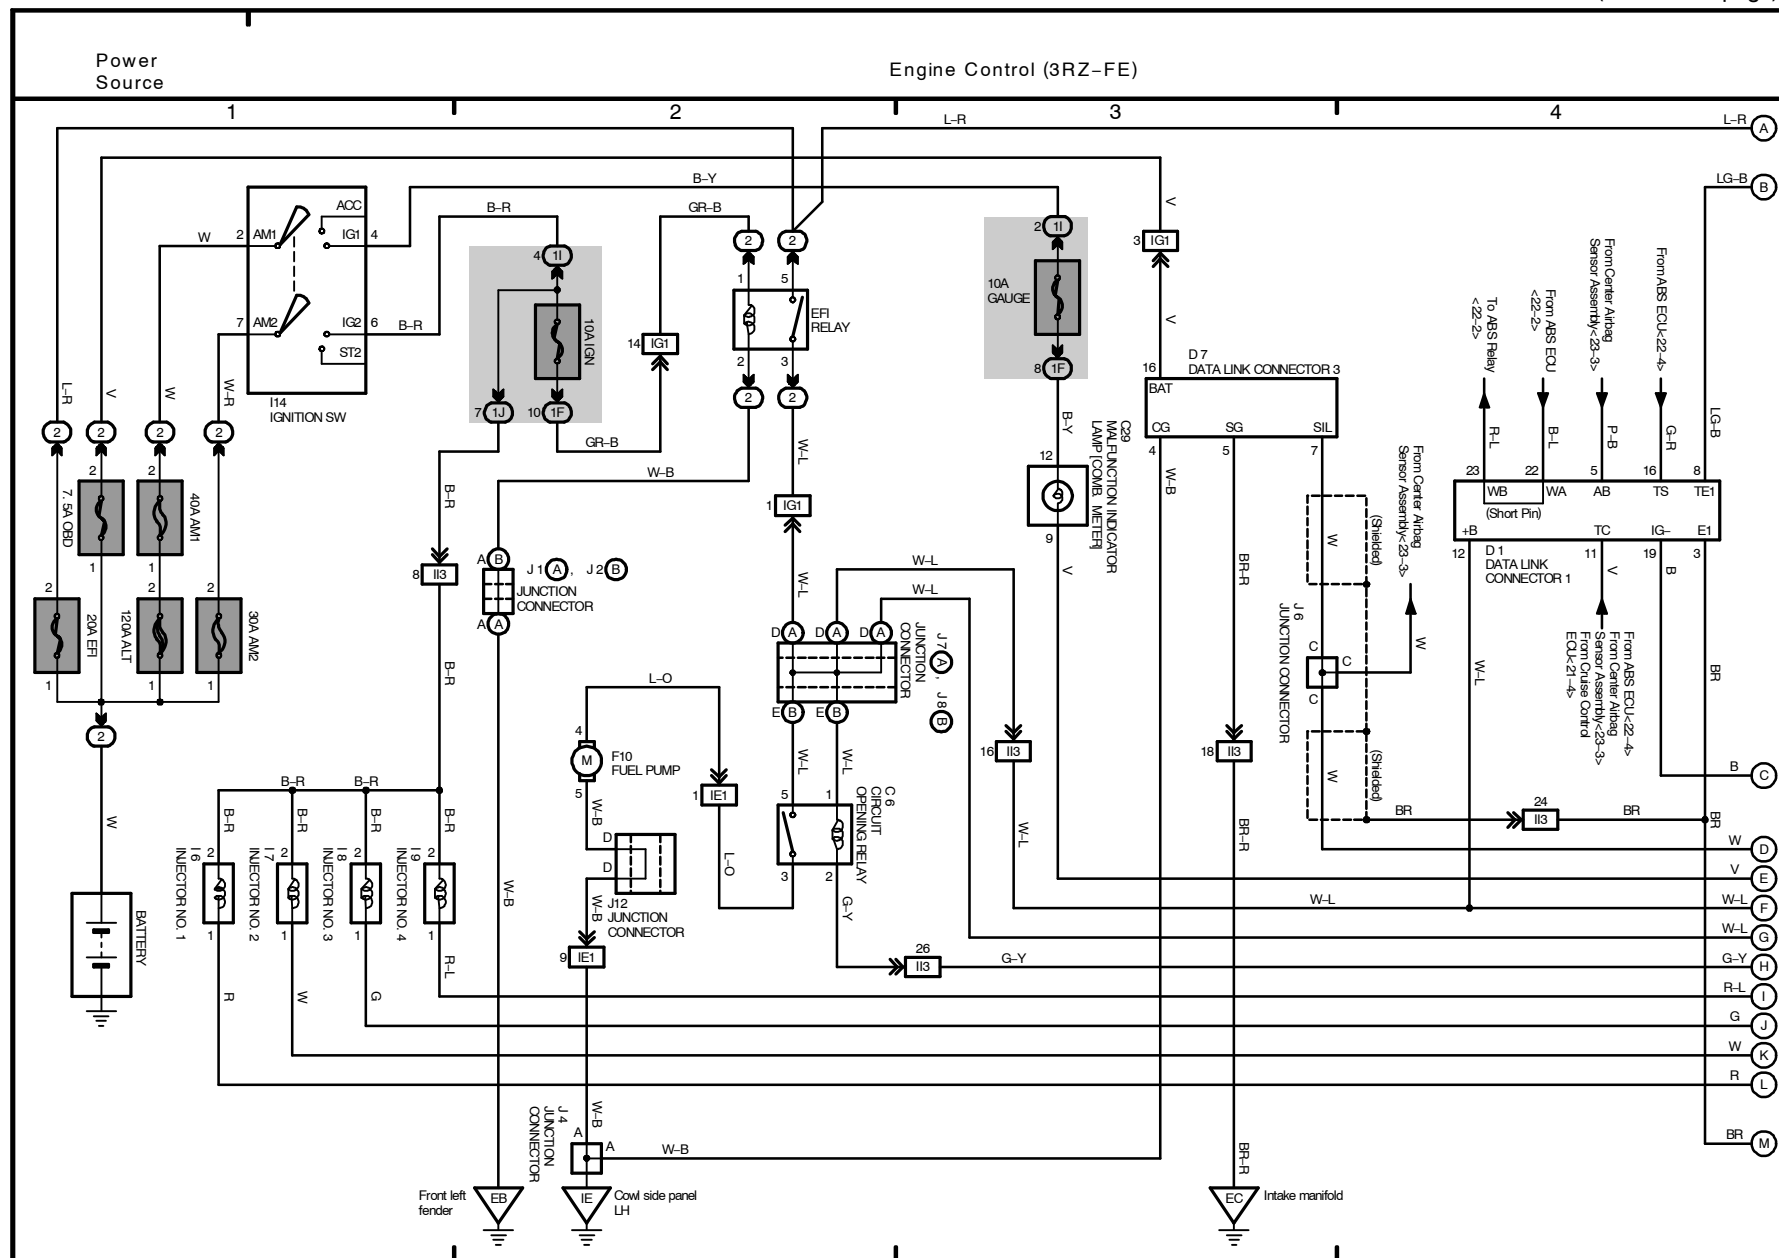


* 1 : California
* 2 : Except California

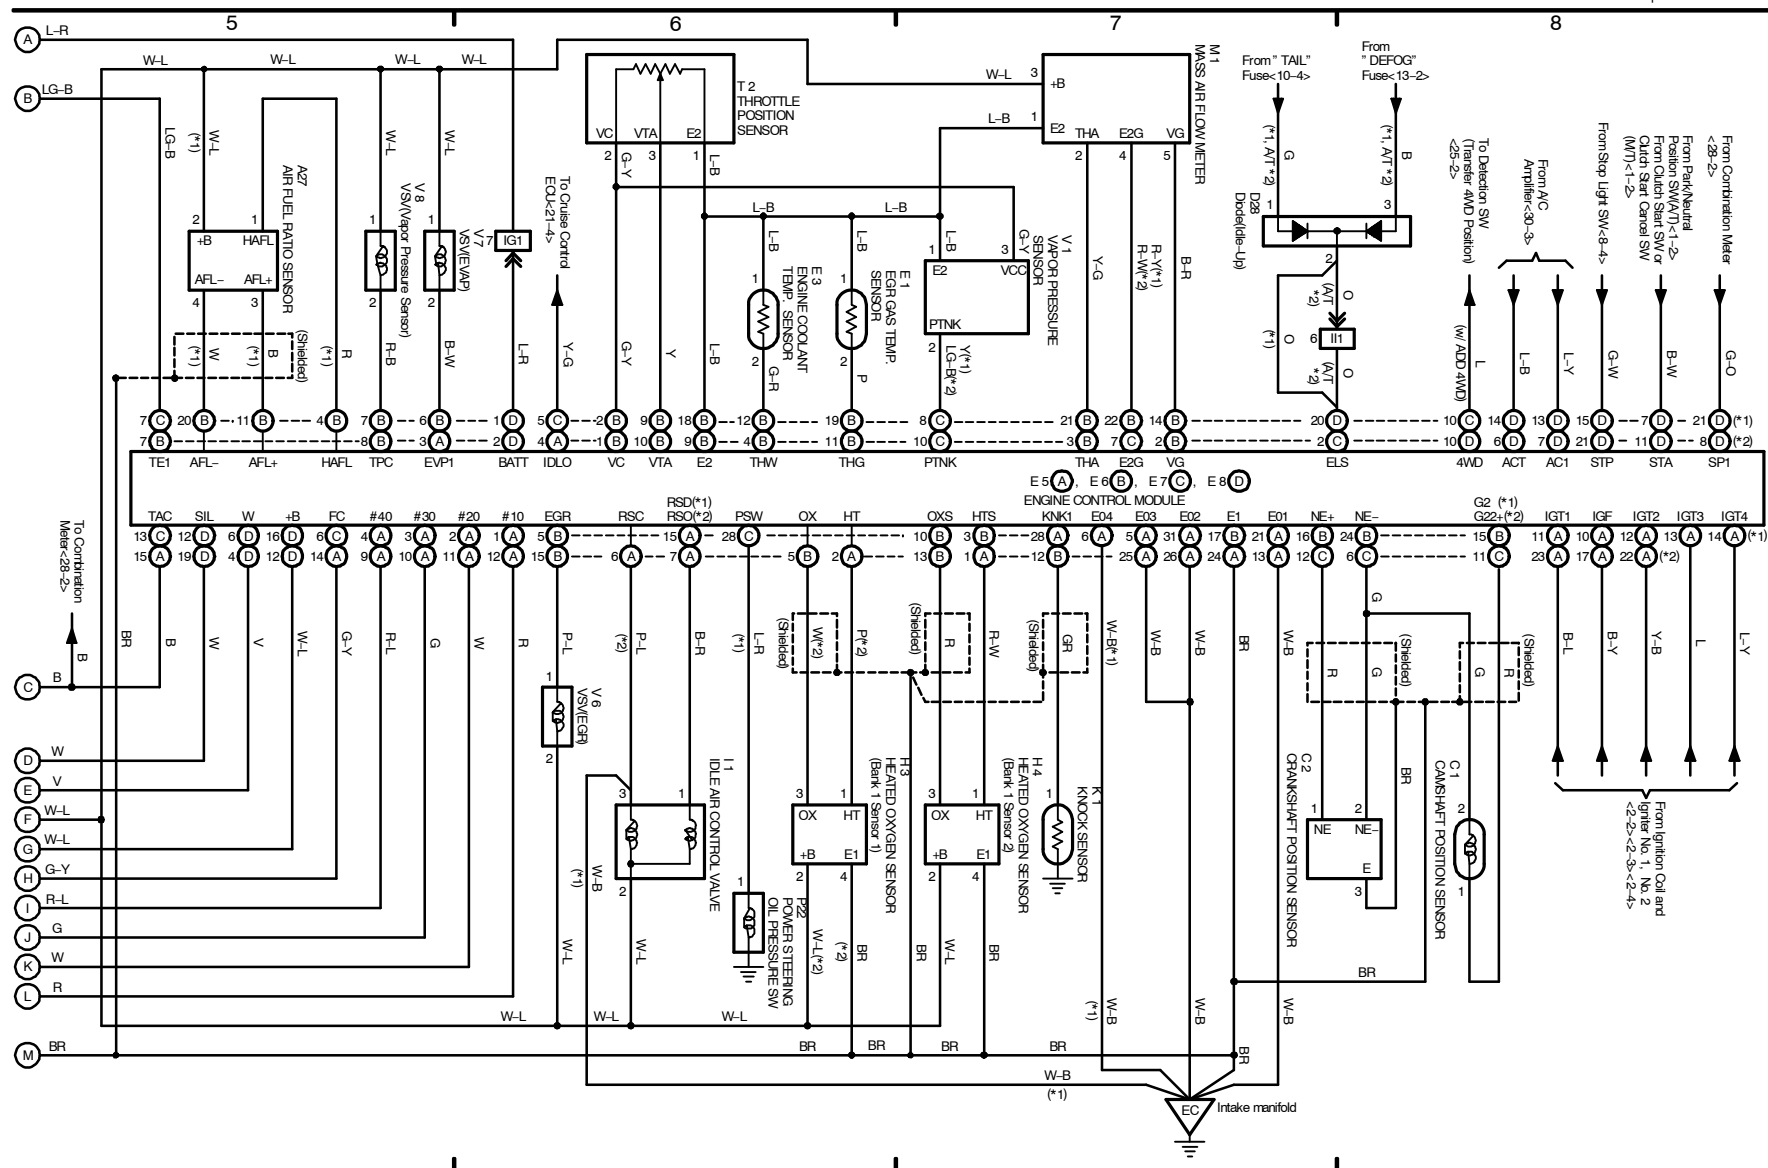


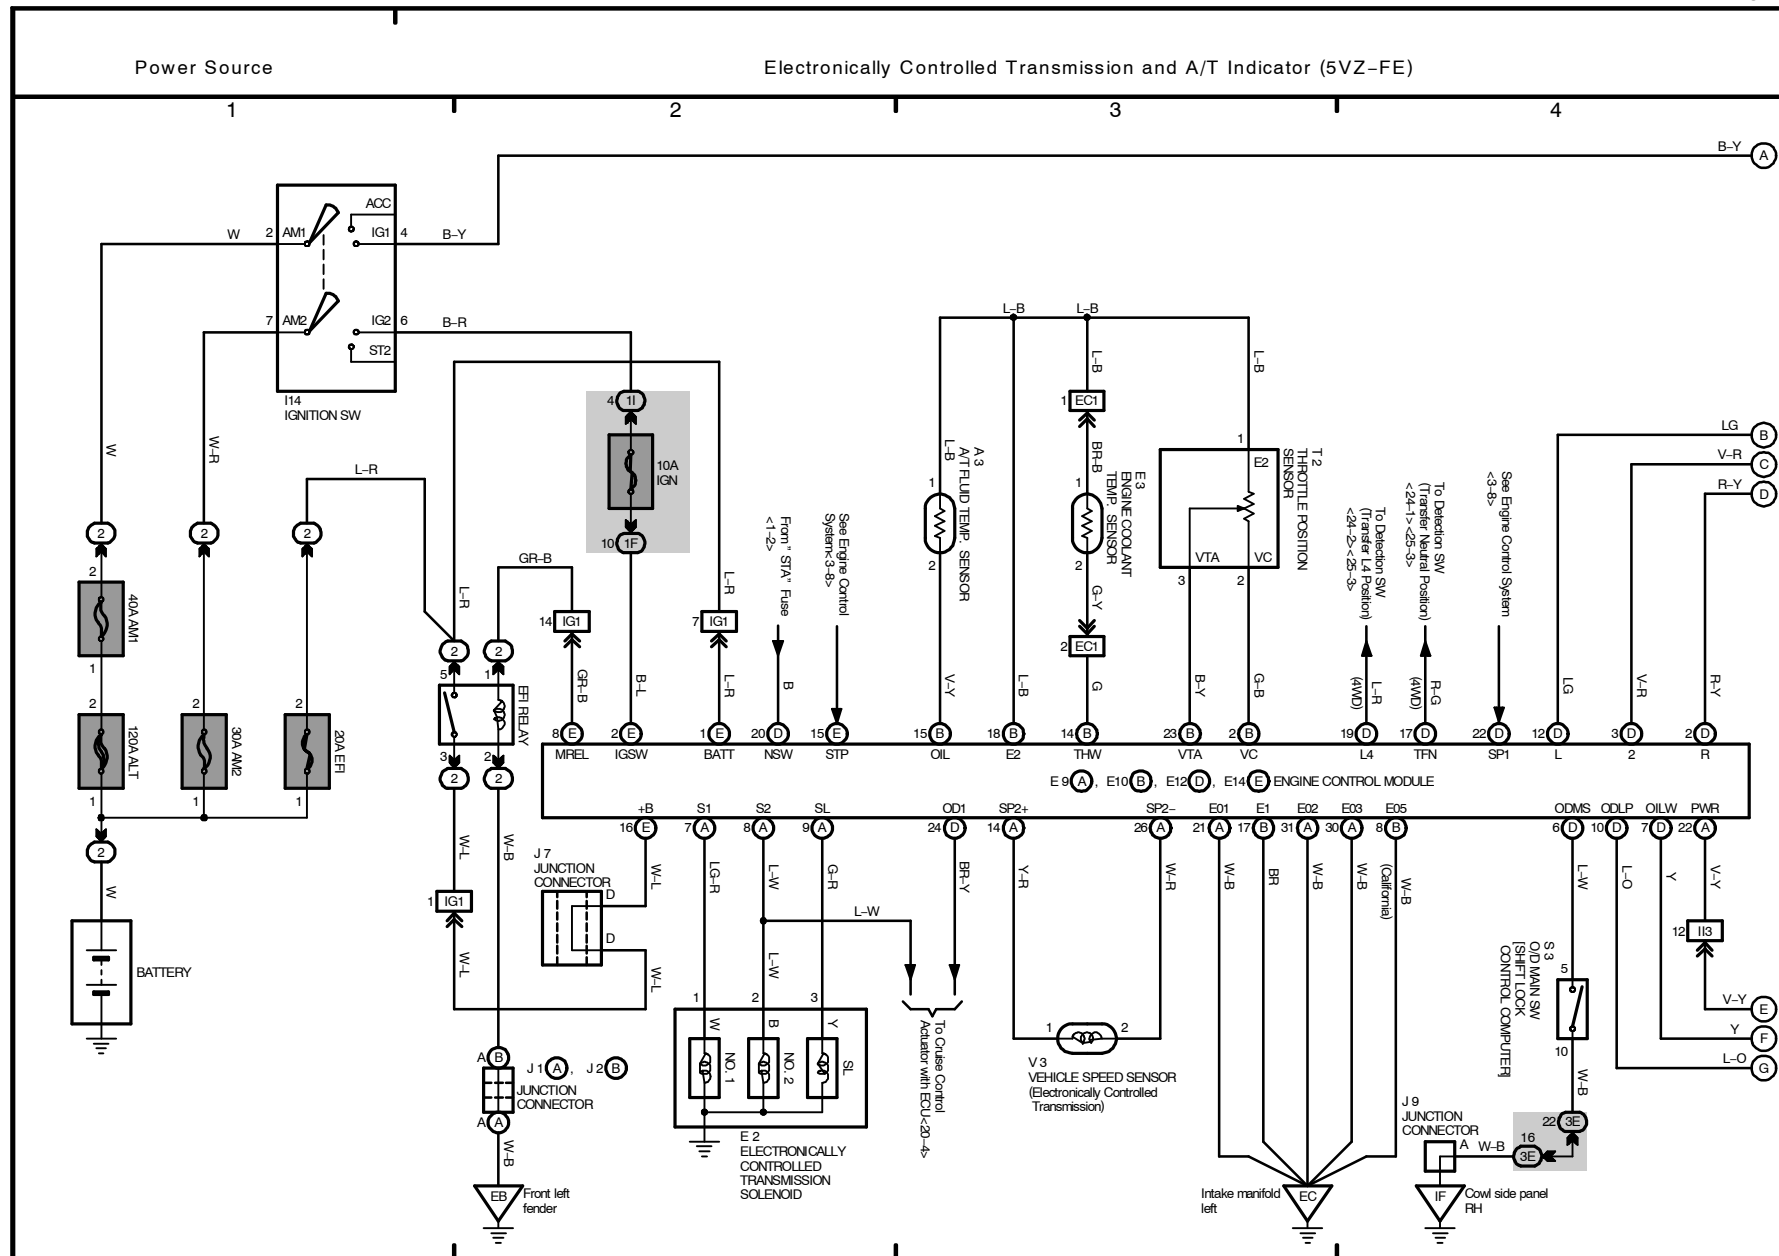

Electronically Controlled Transmission and A/T Indicator (5VZ-FE)


* 1 : w/ 2-4 Select SW
* 2 : w/o 2-4 Select SW

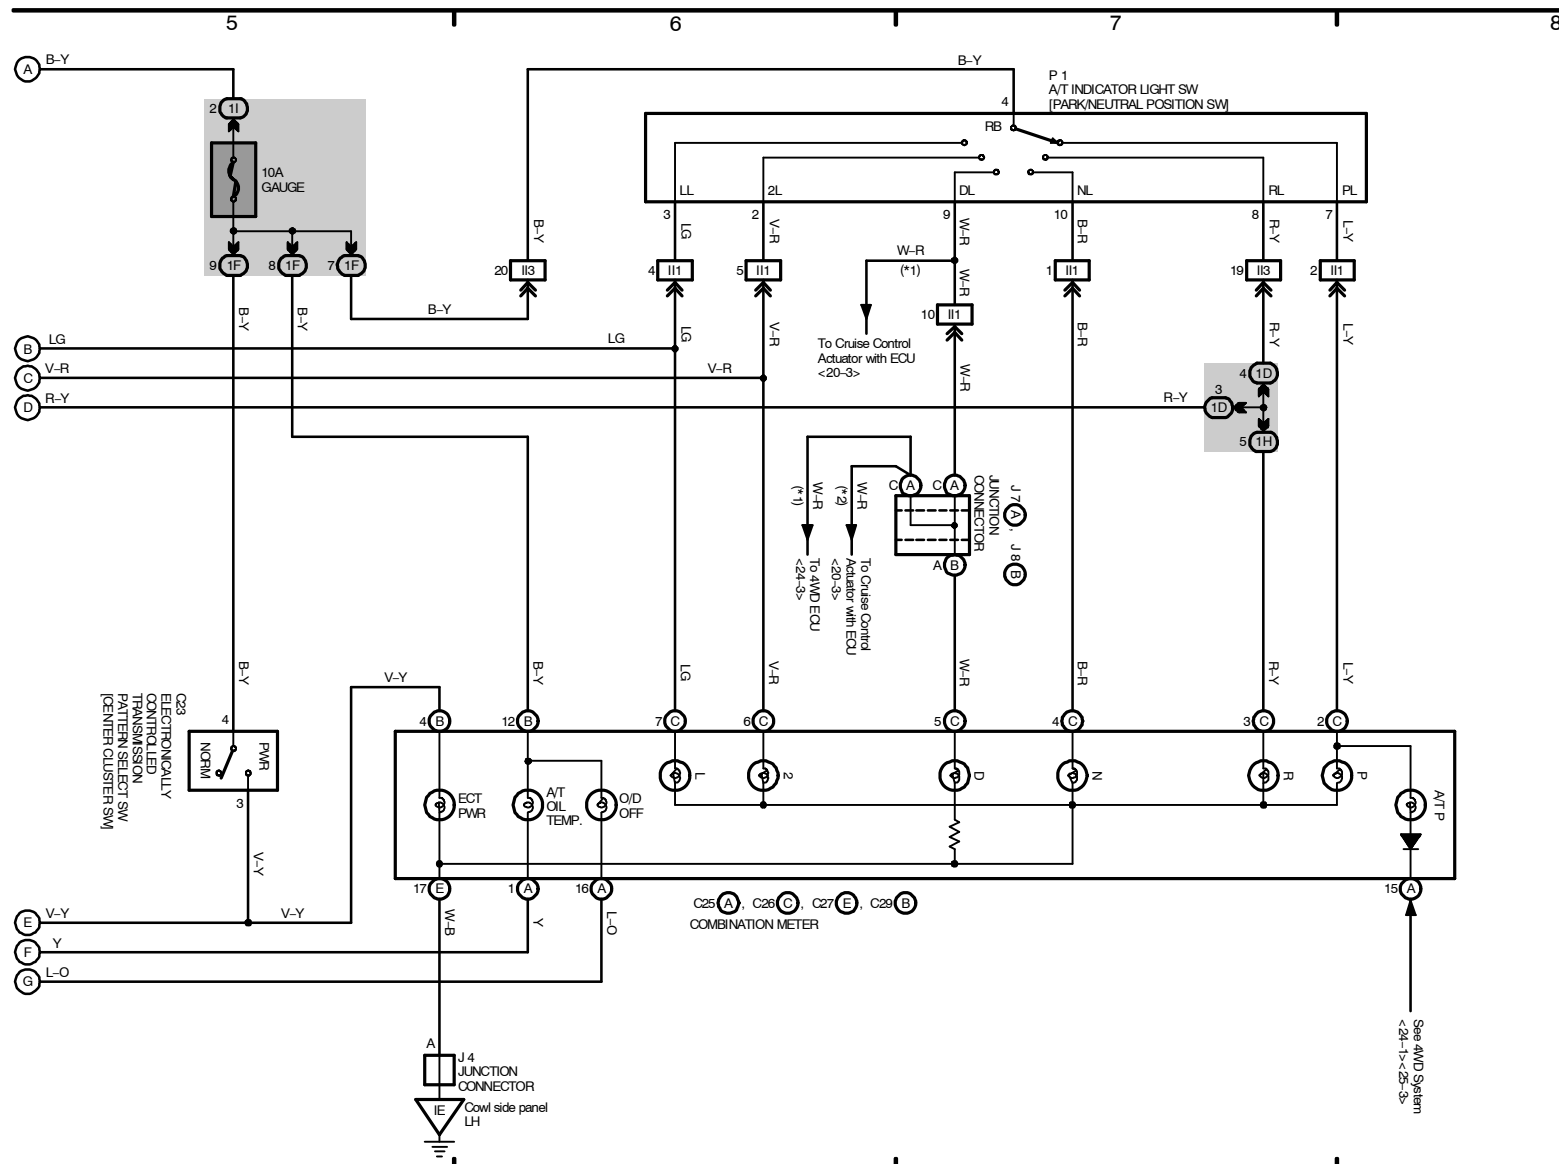


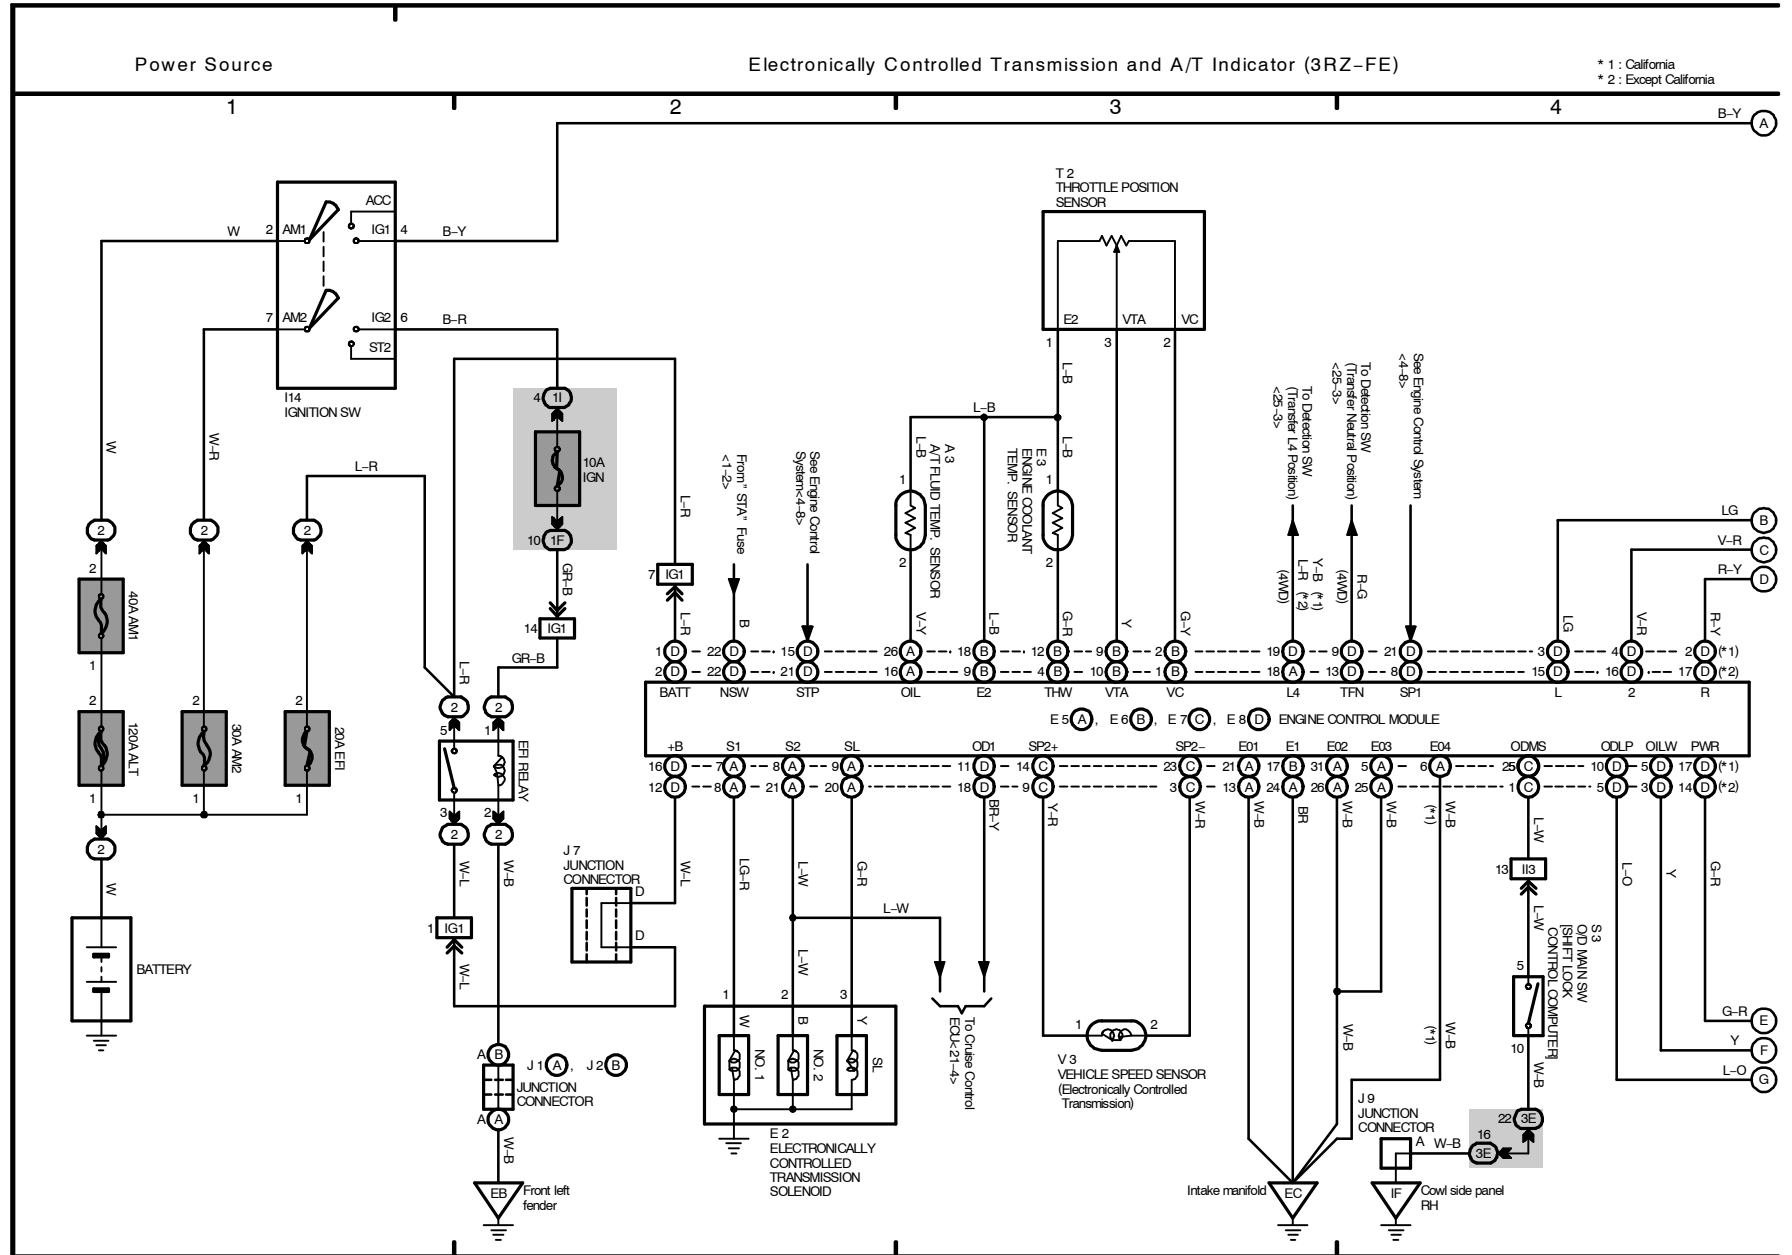



Electronically Controlled Transmission and A/T Indicator (3RZ-FE)

* 1 : w/ Cruise Control

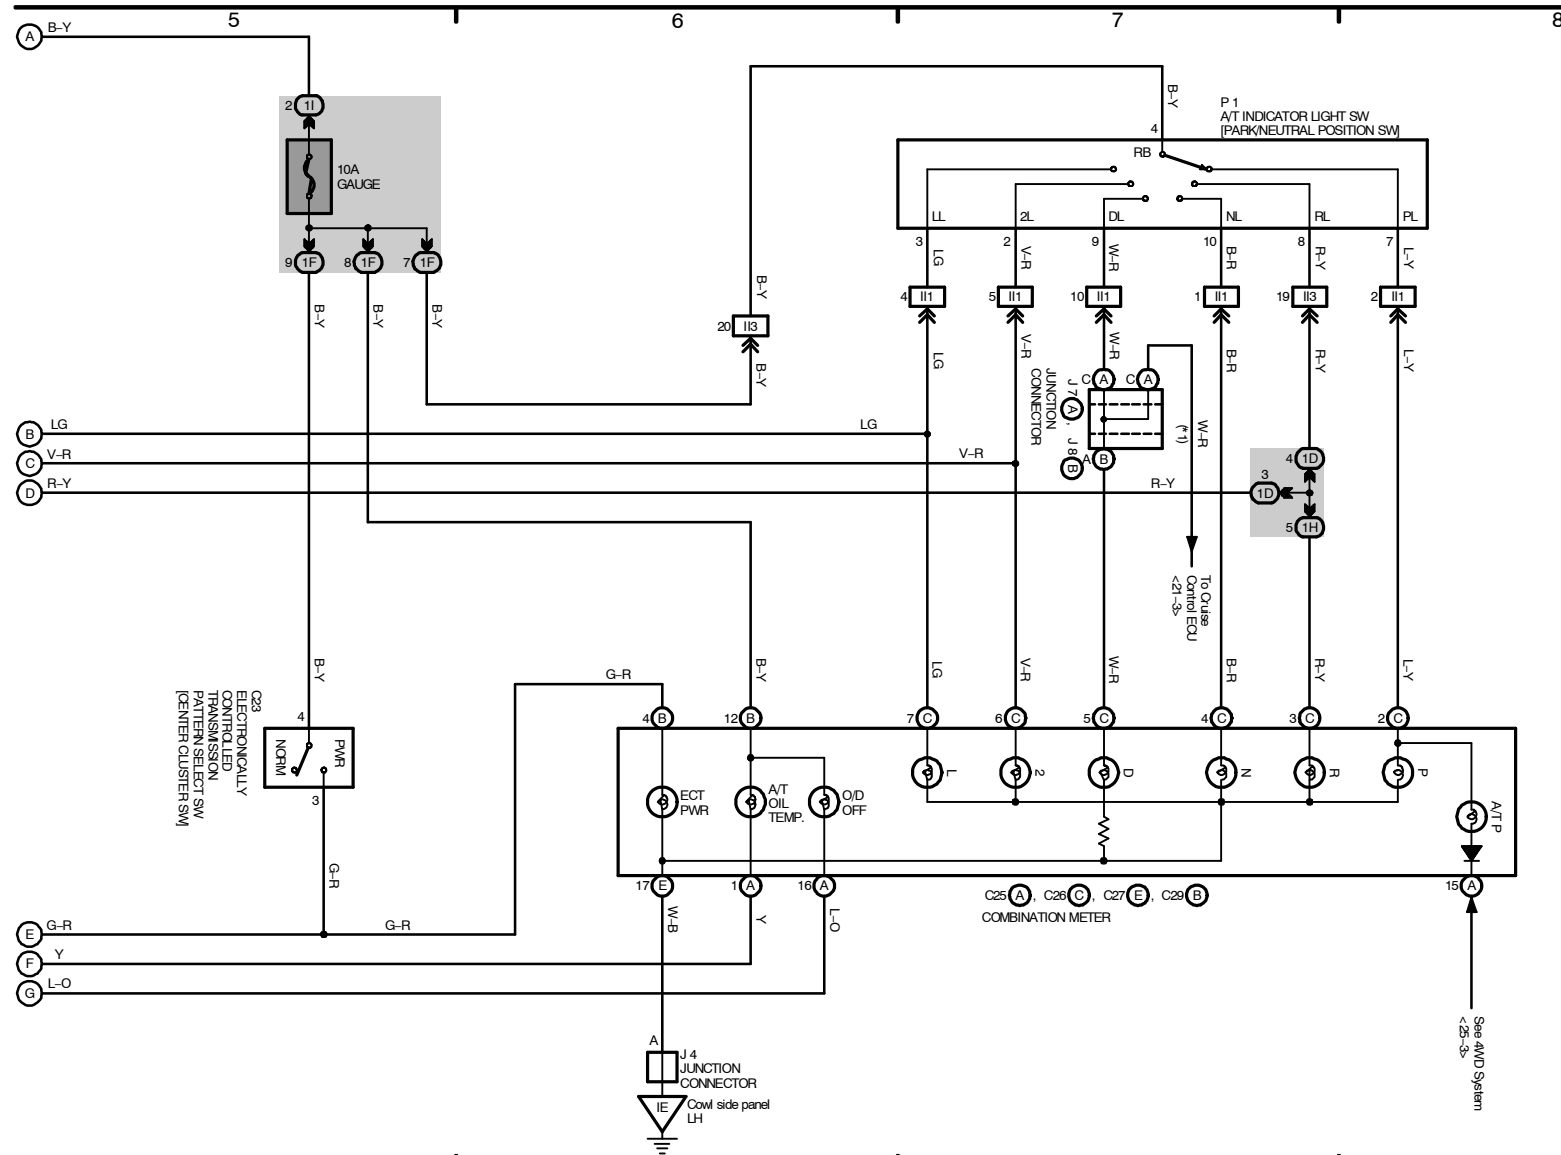


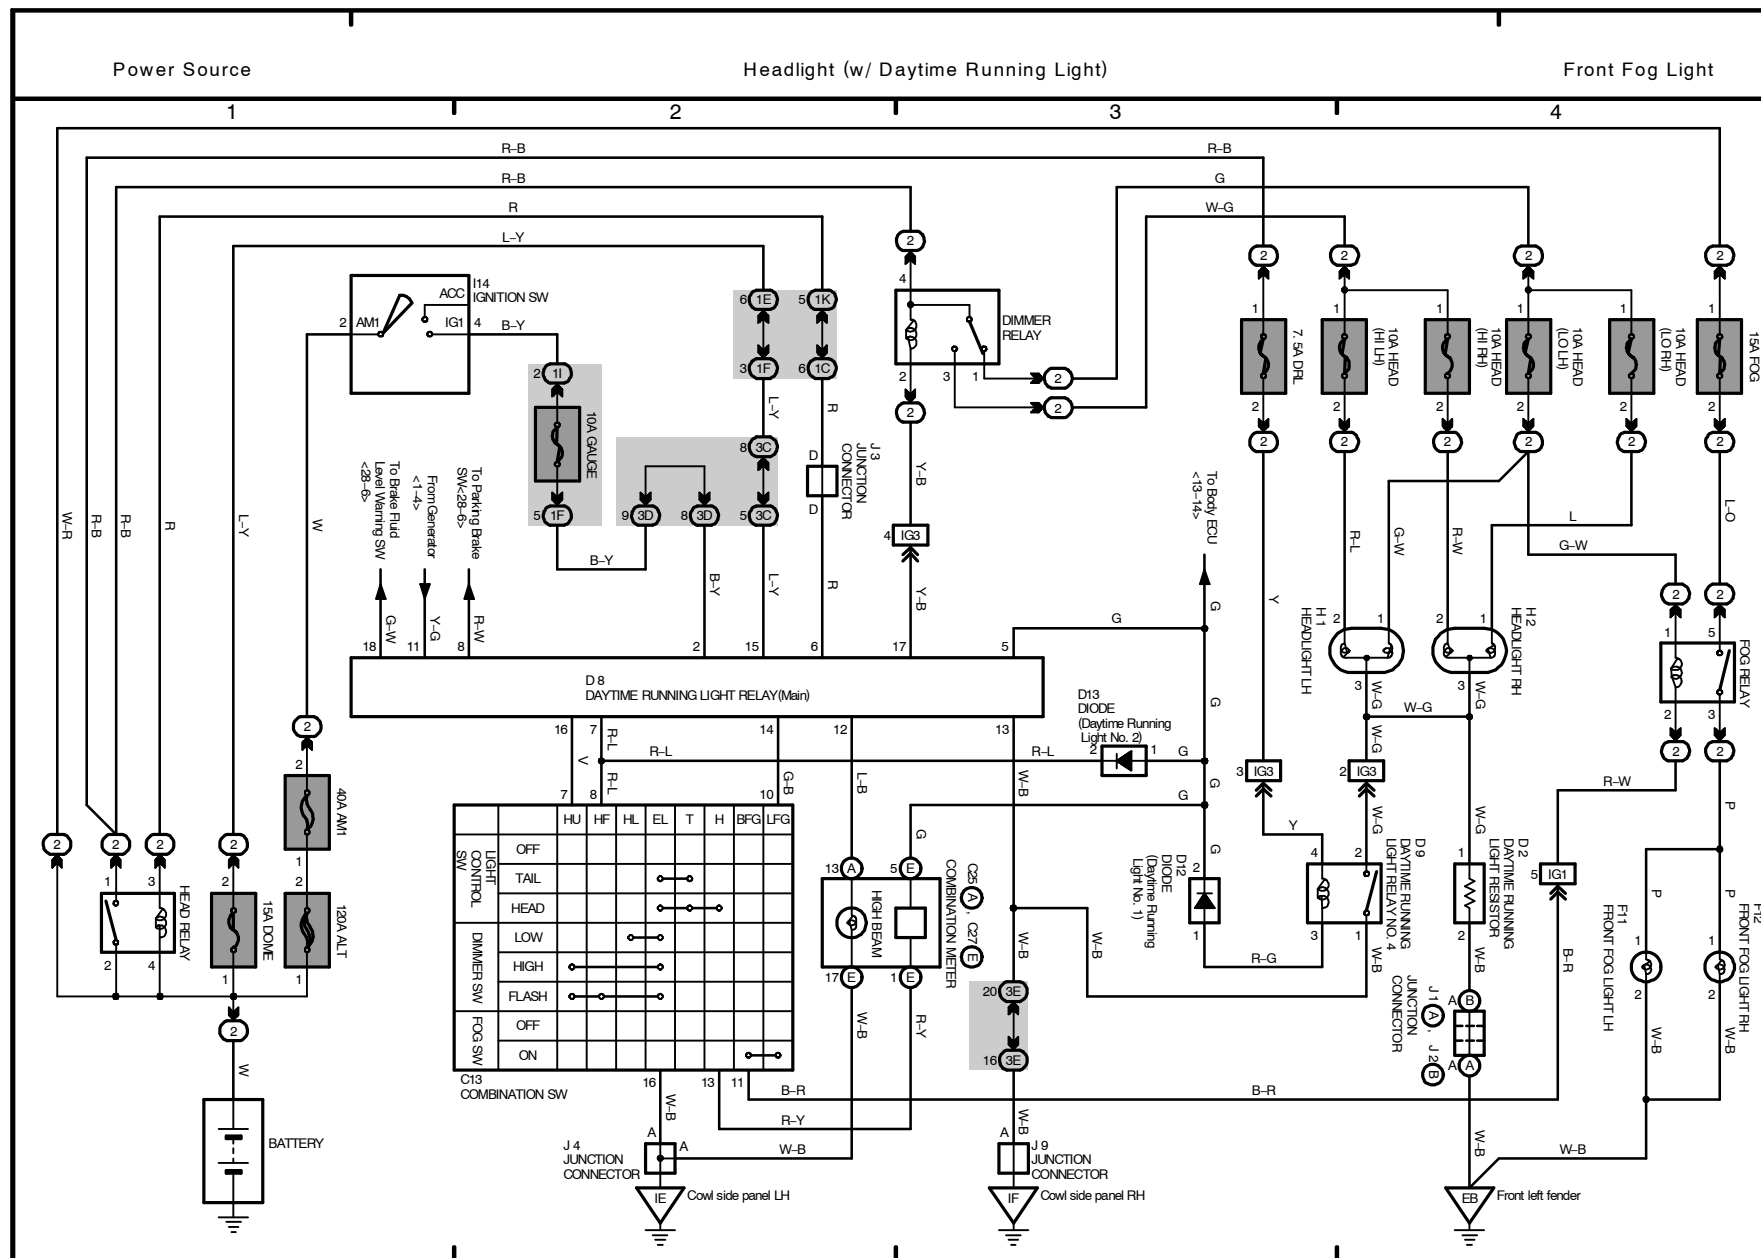


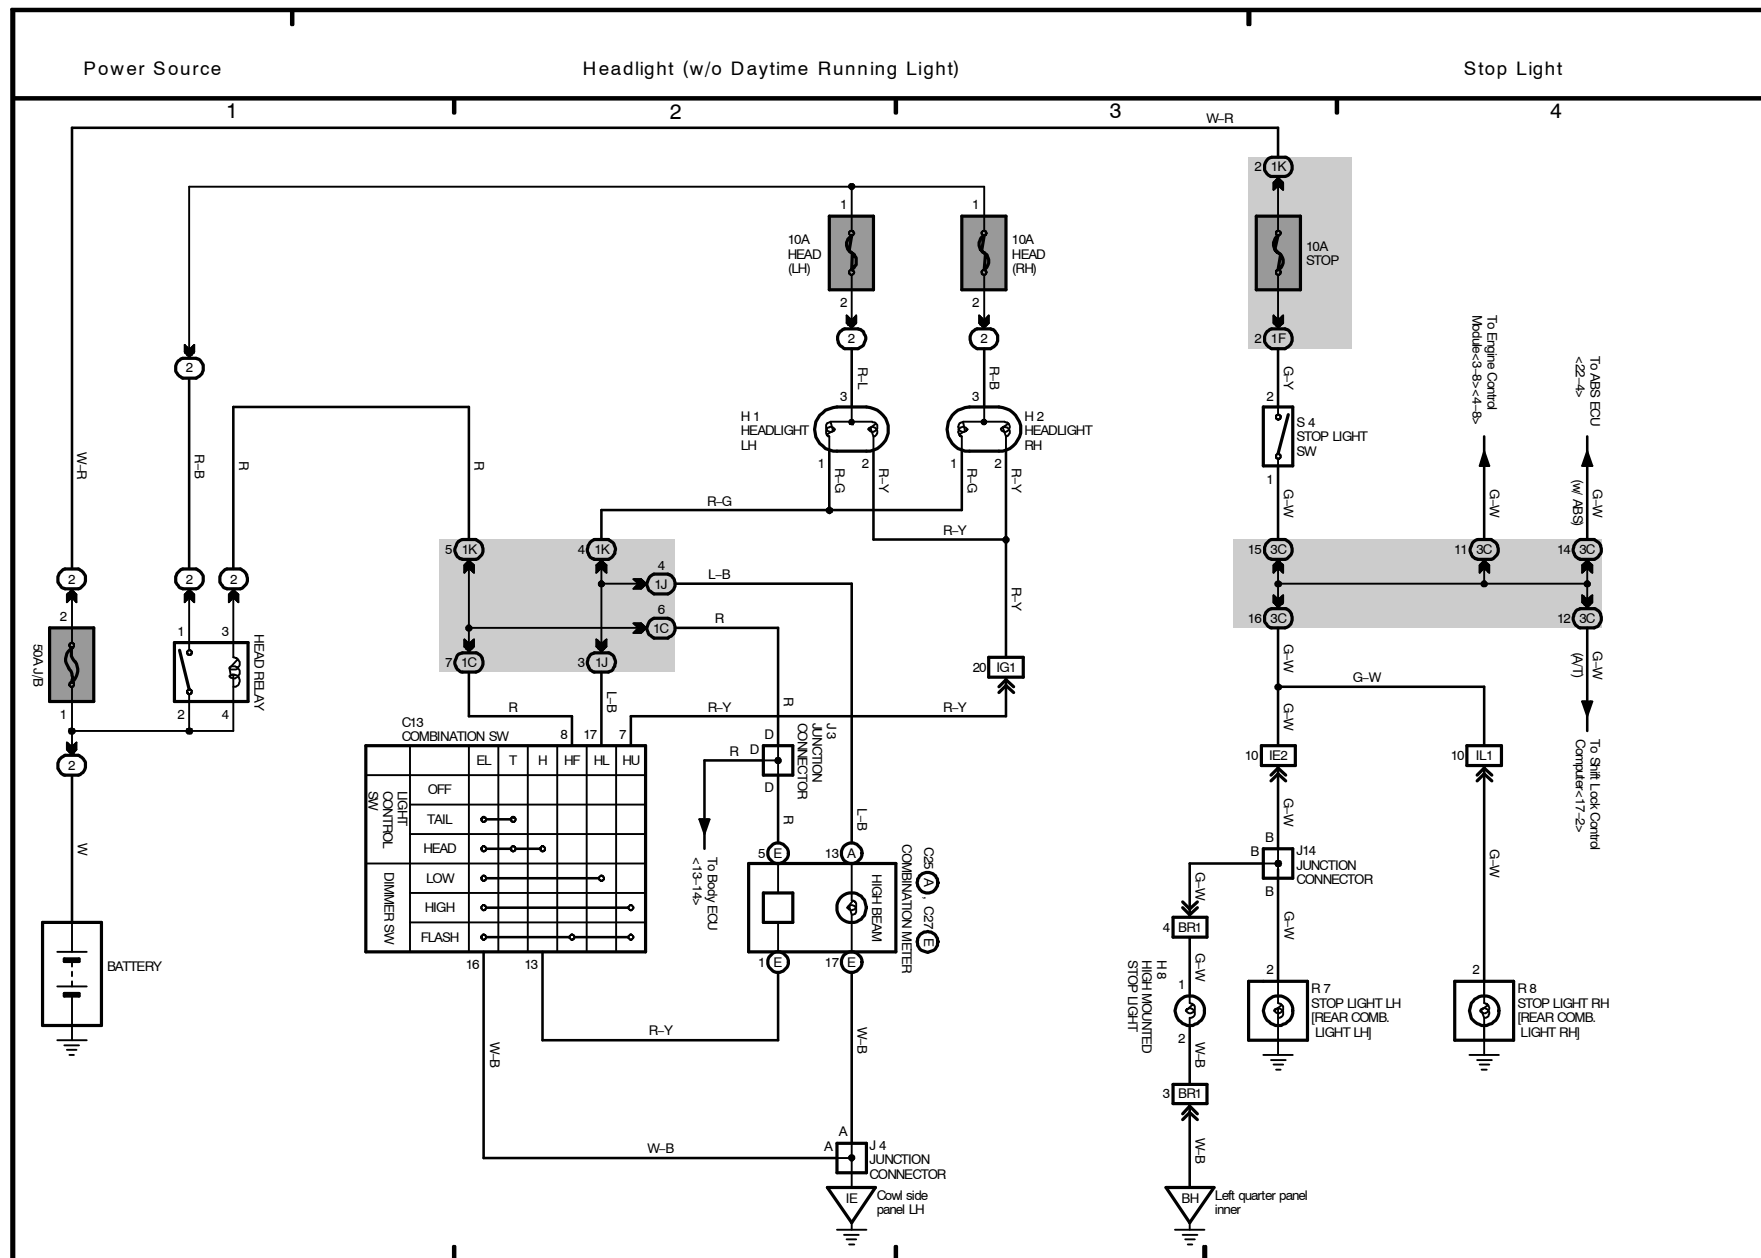

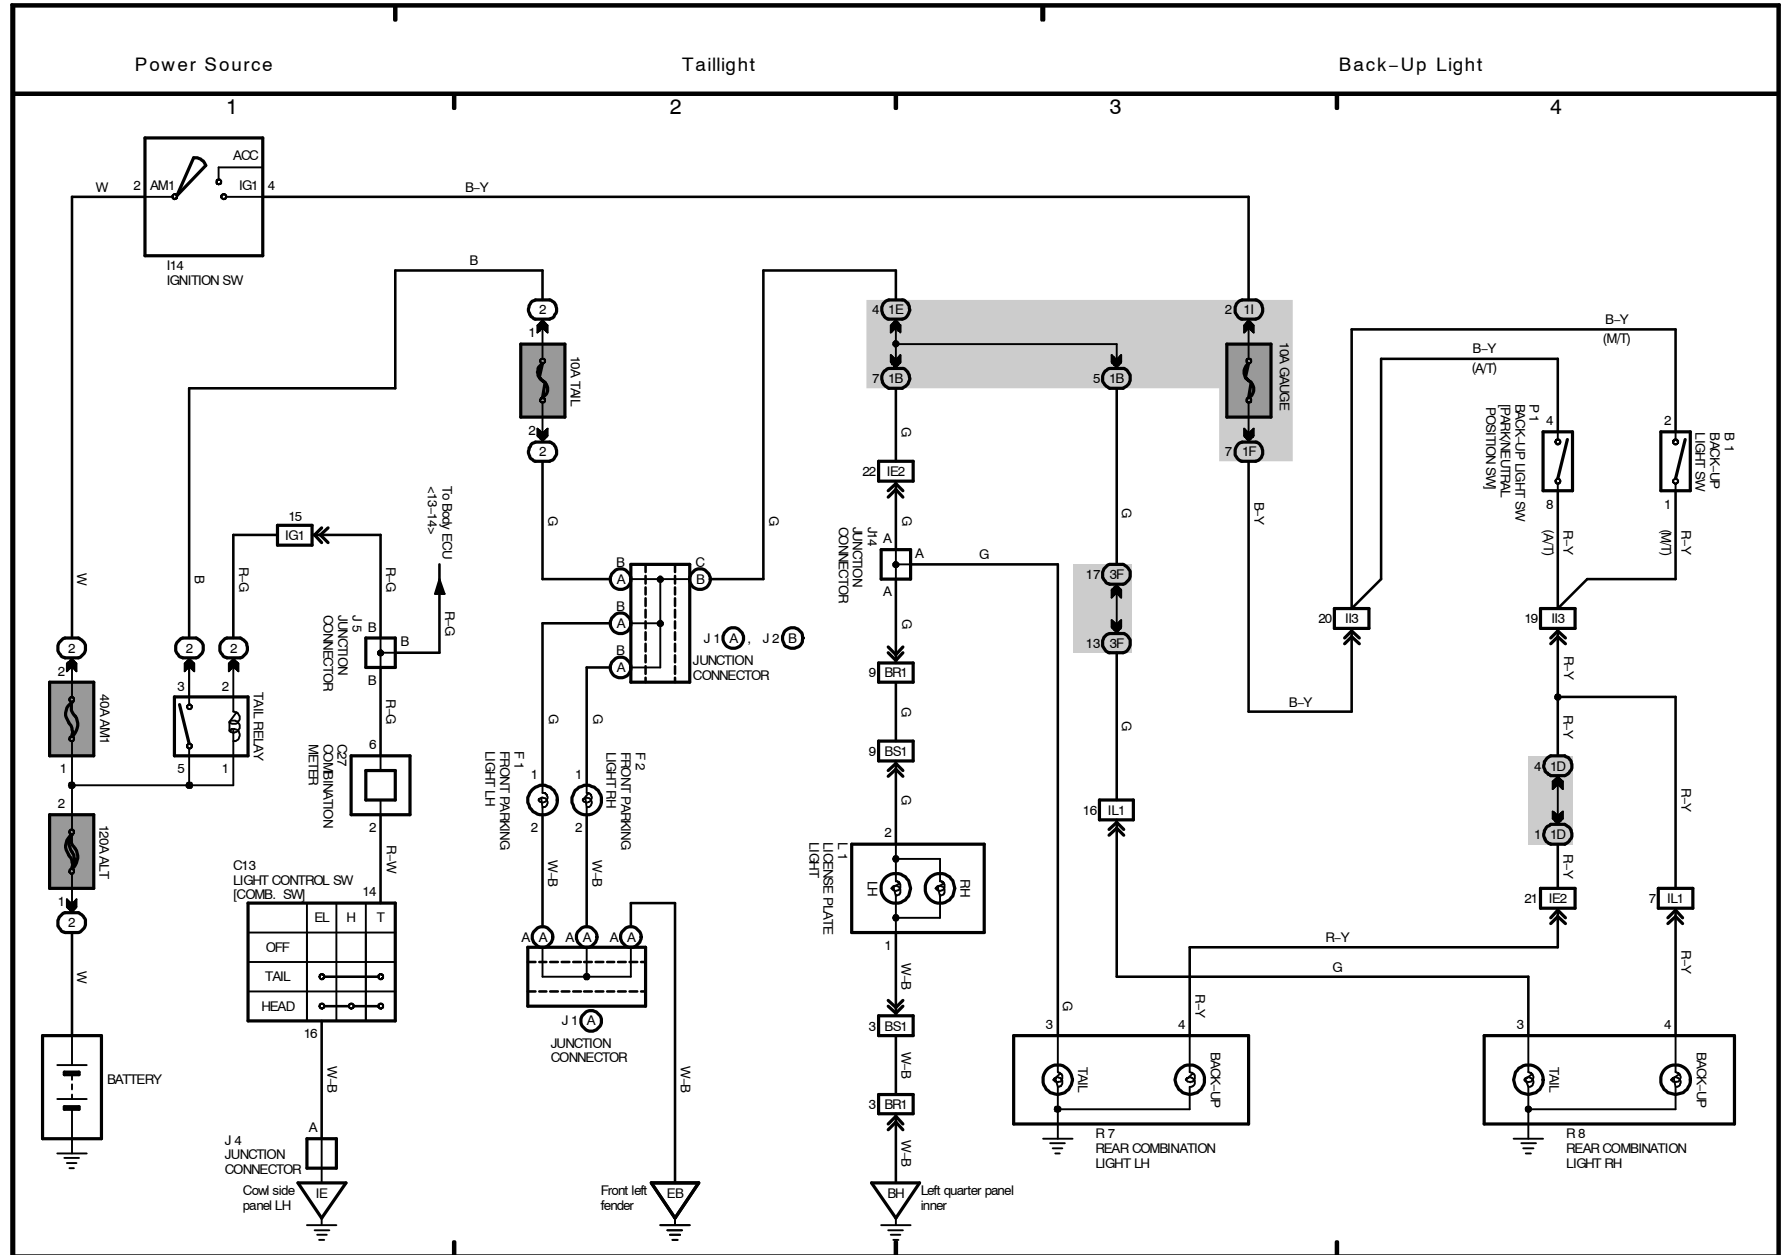




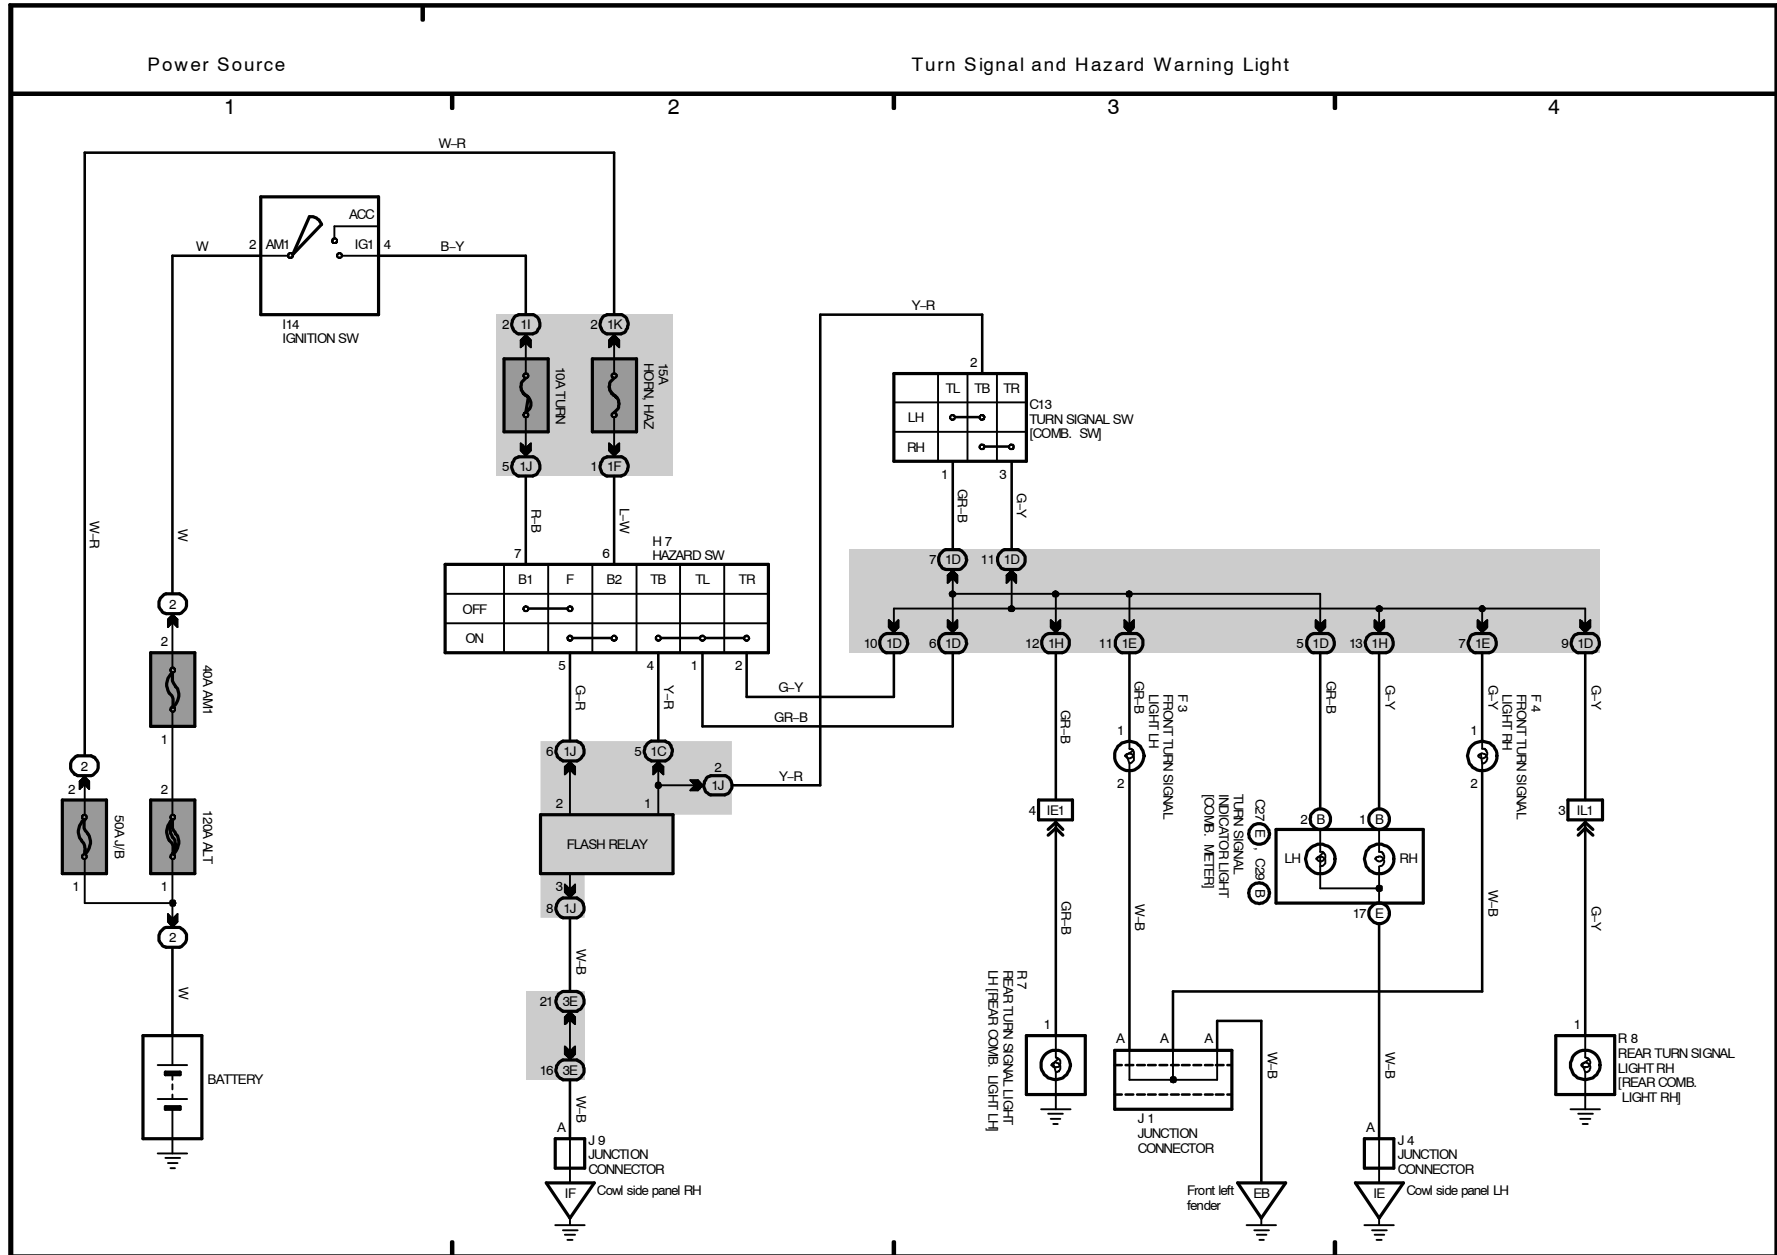


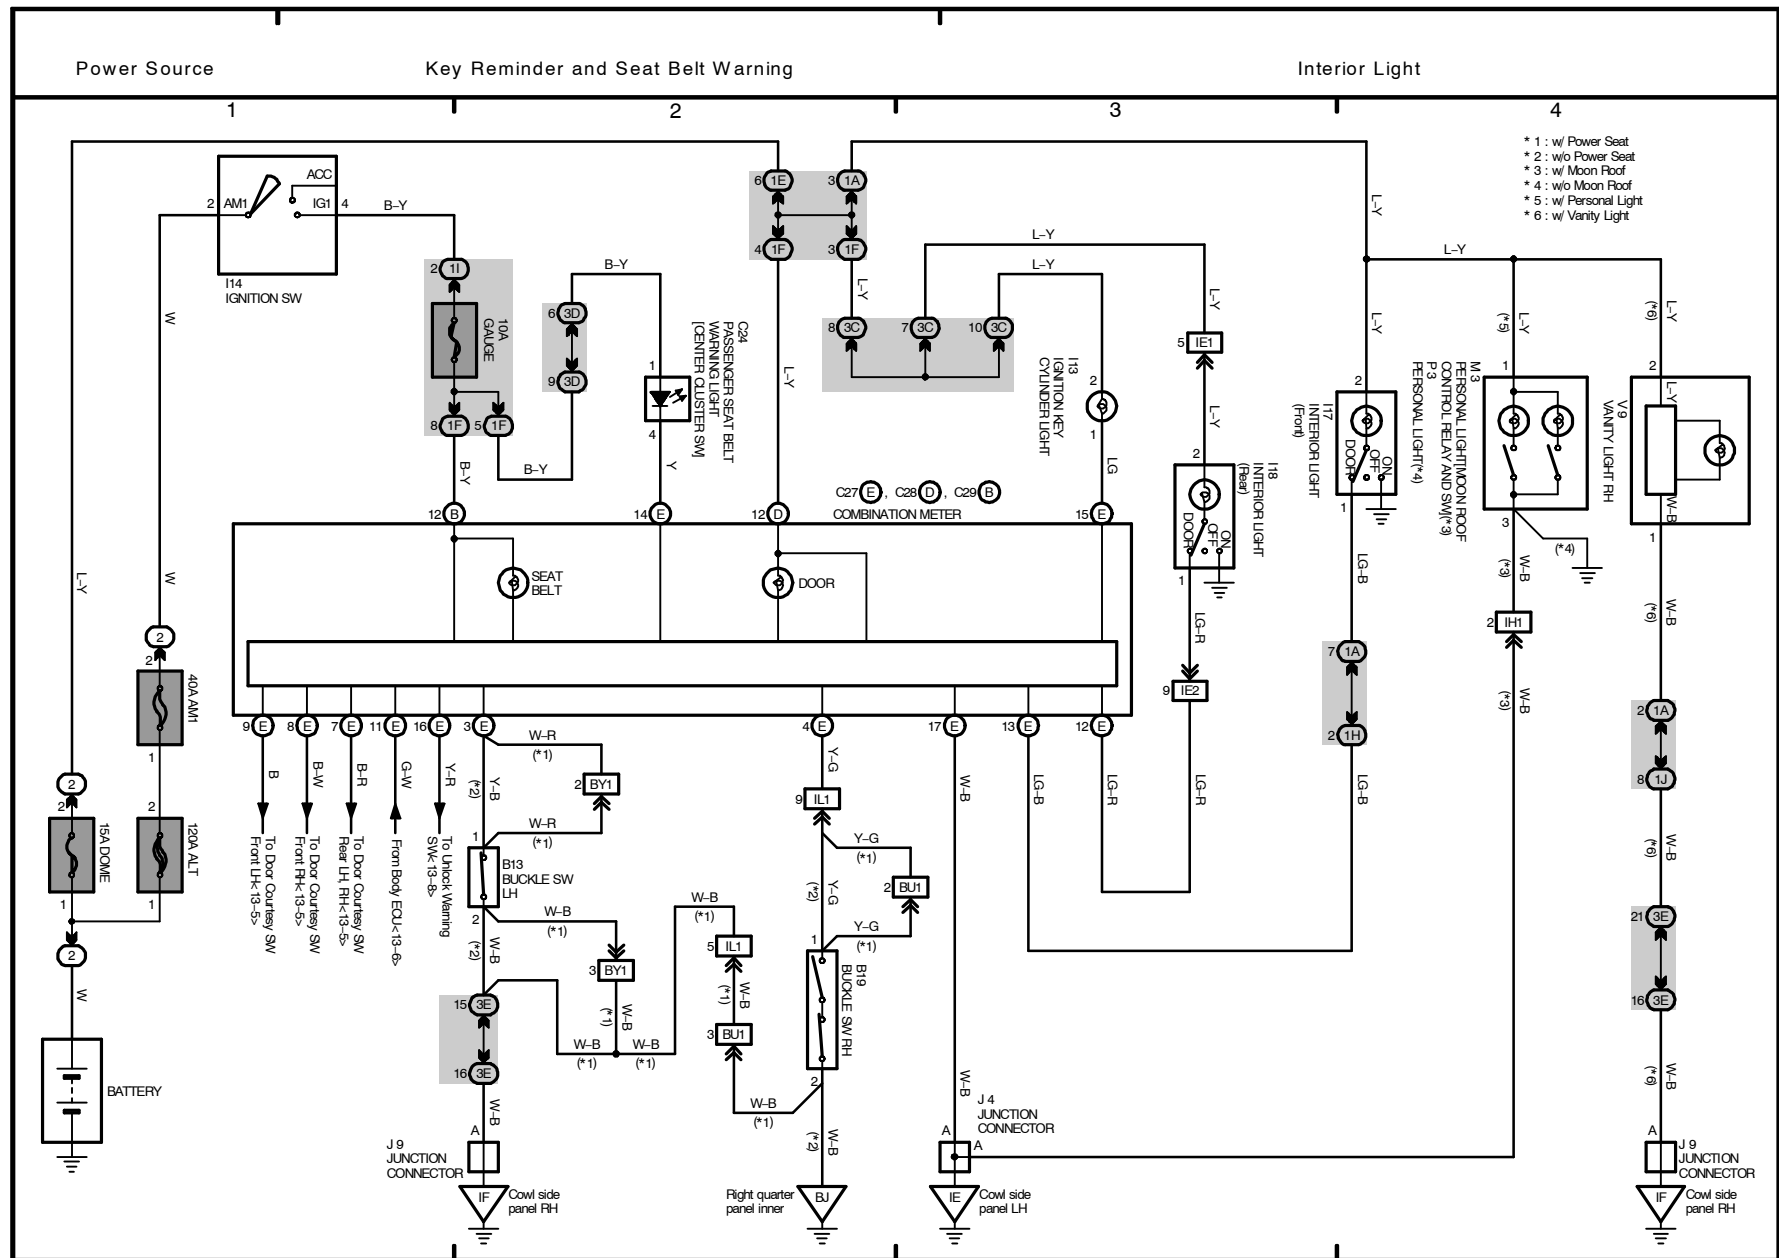



OVERALL ELECTRICAL WIRING DIAGRAM

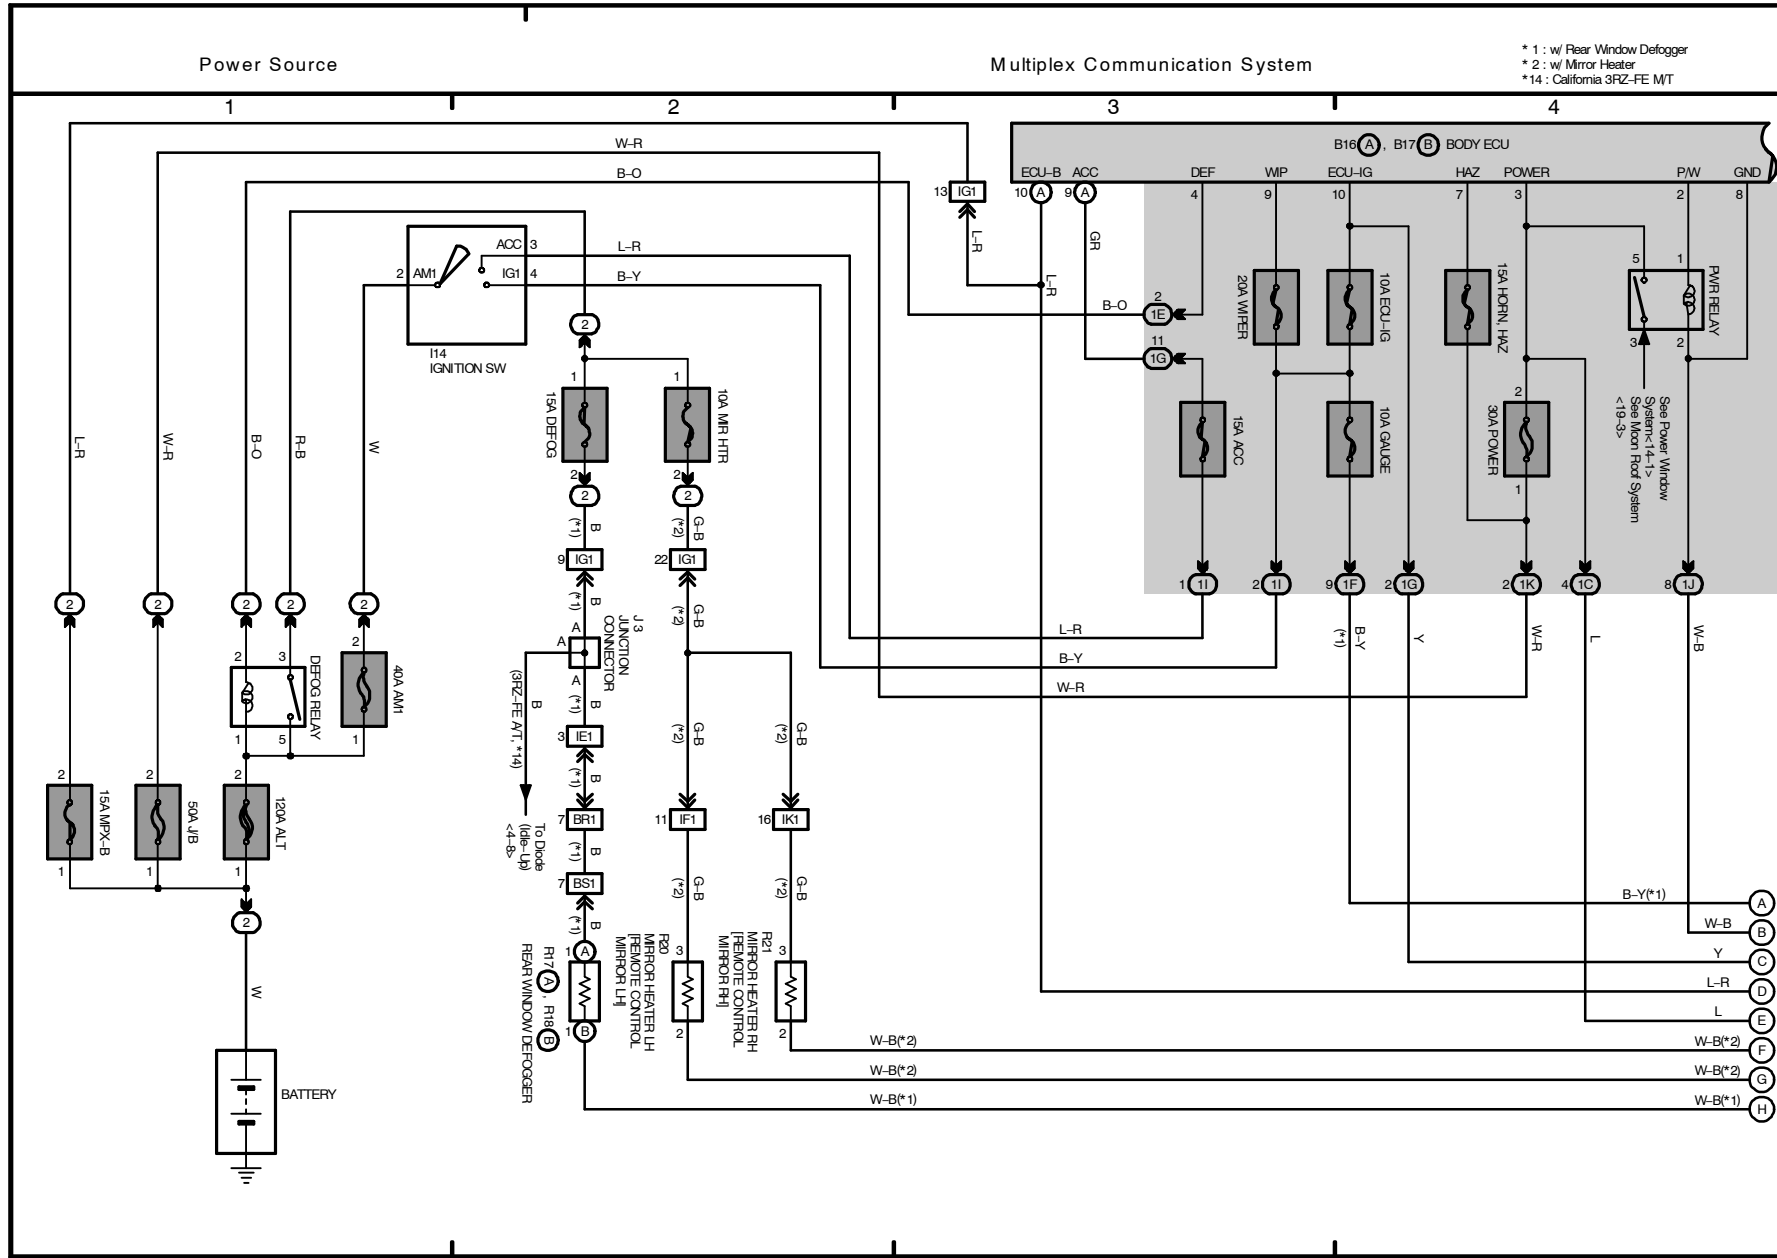



Multiplex Communication System

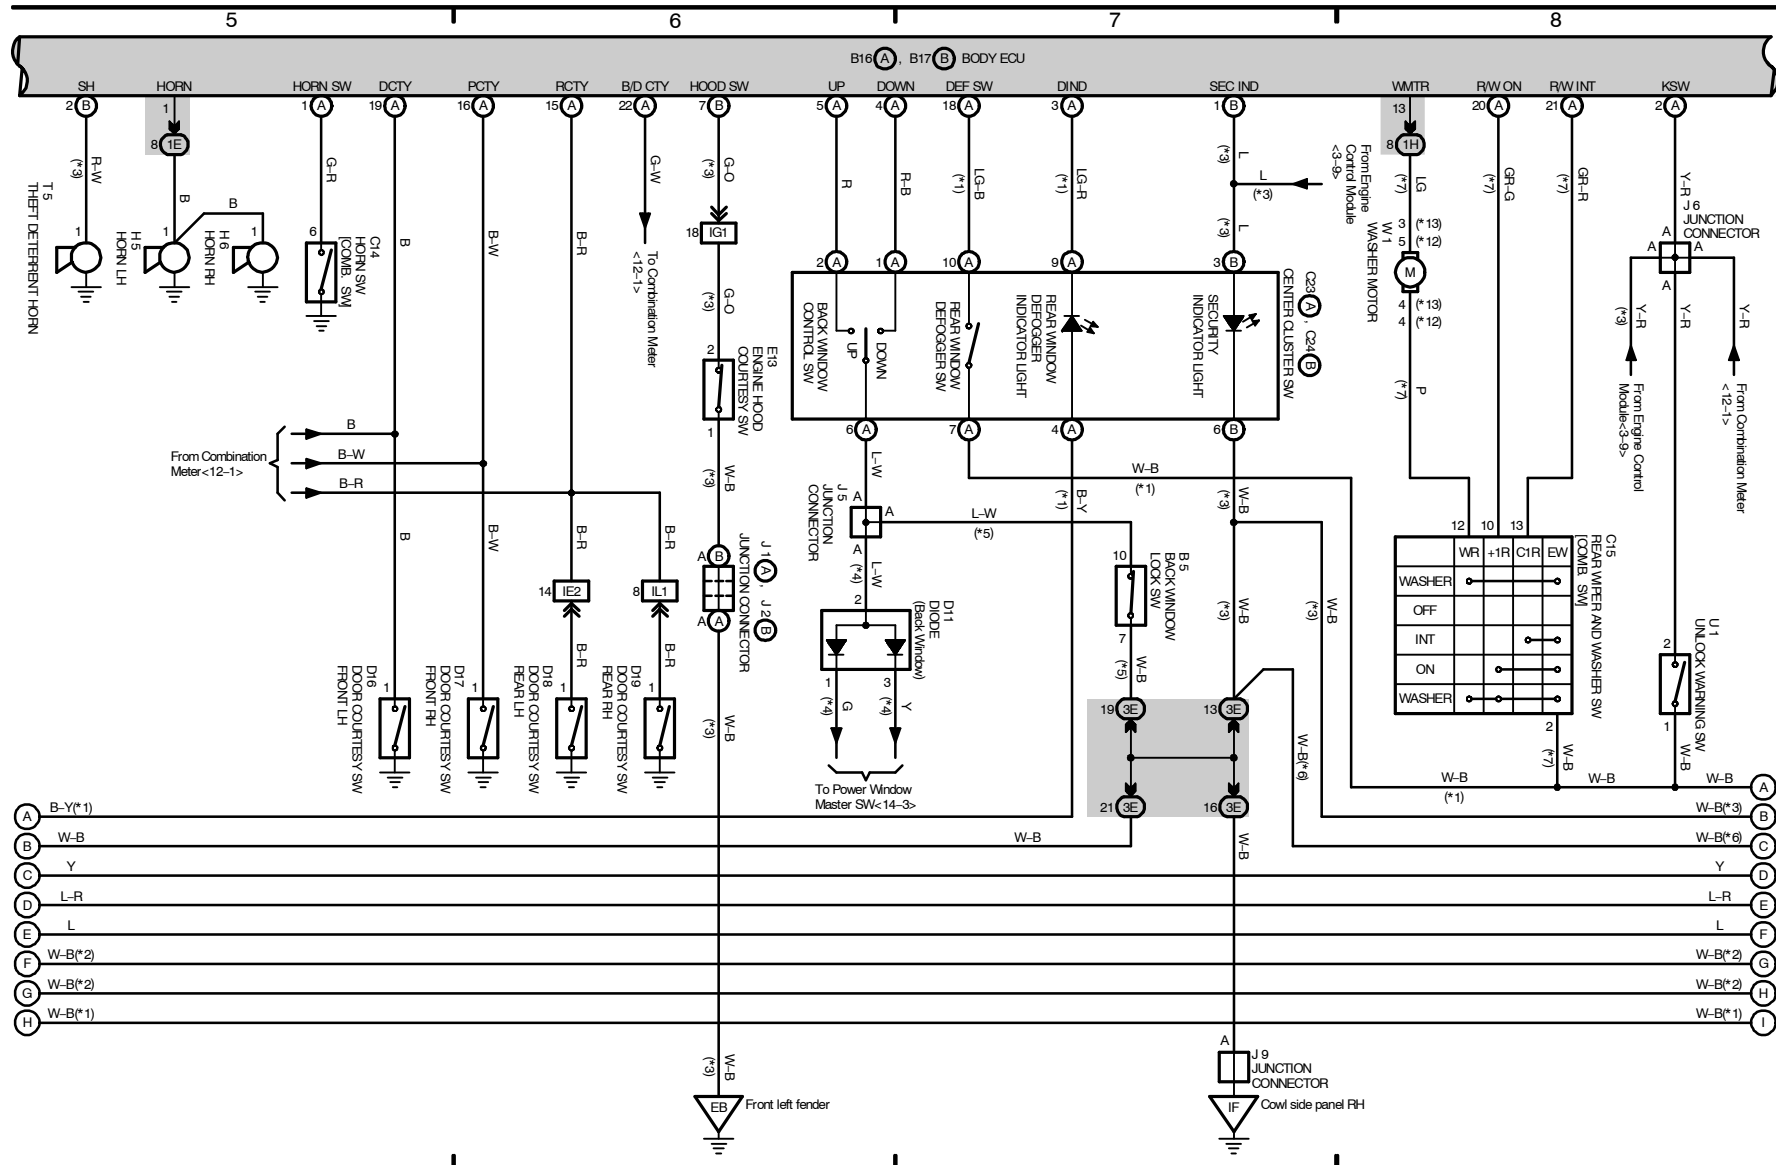


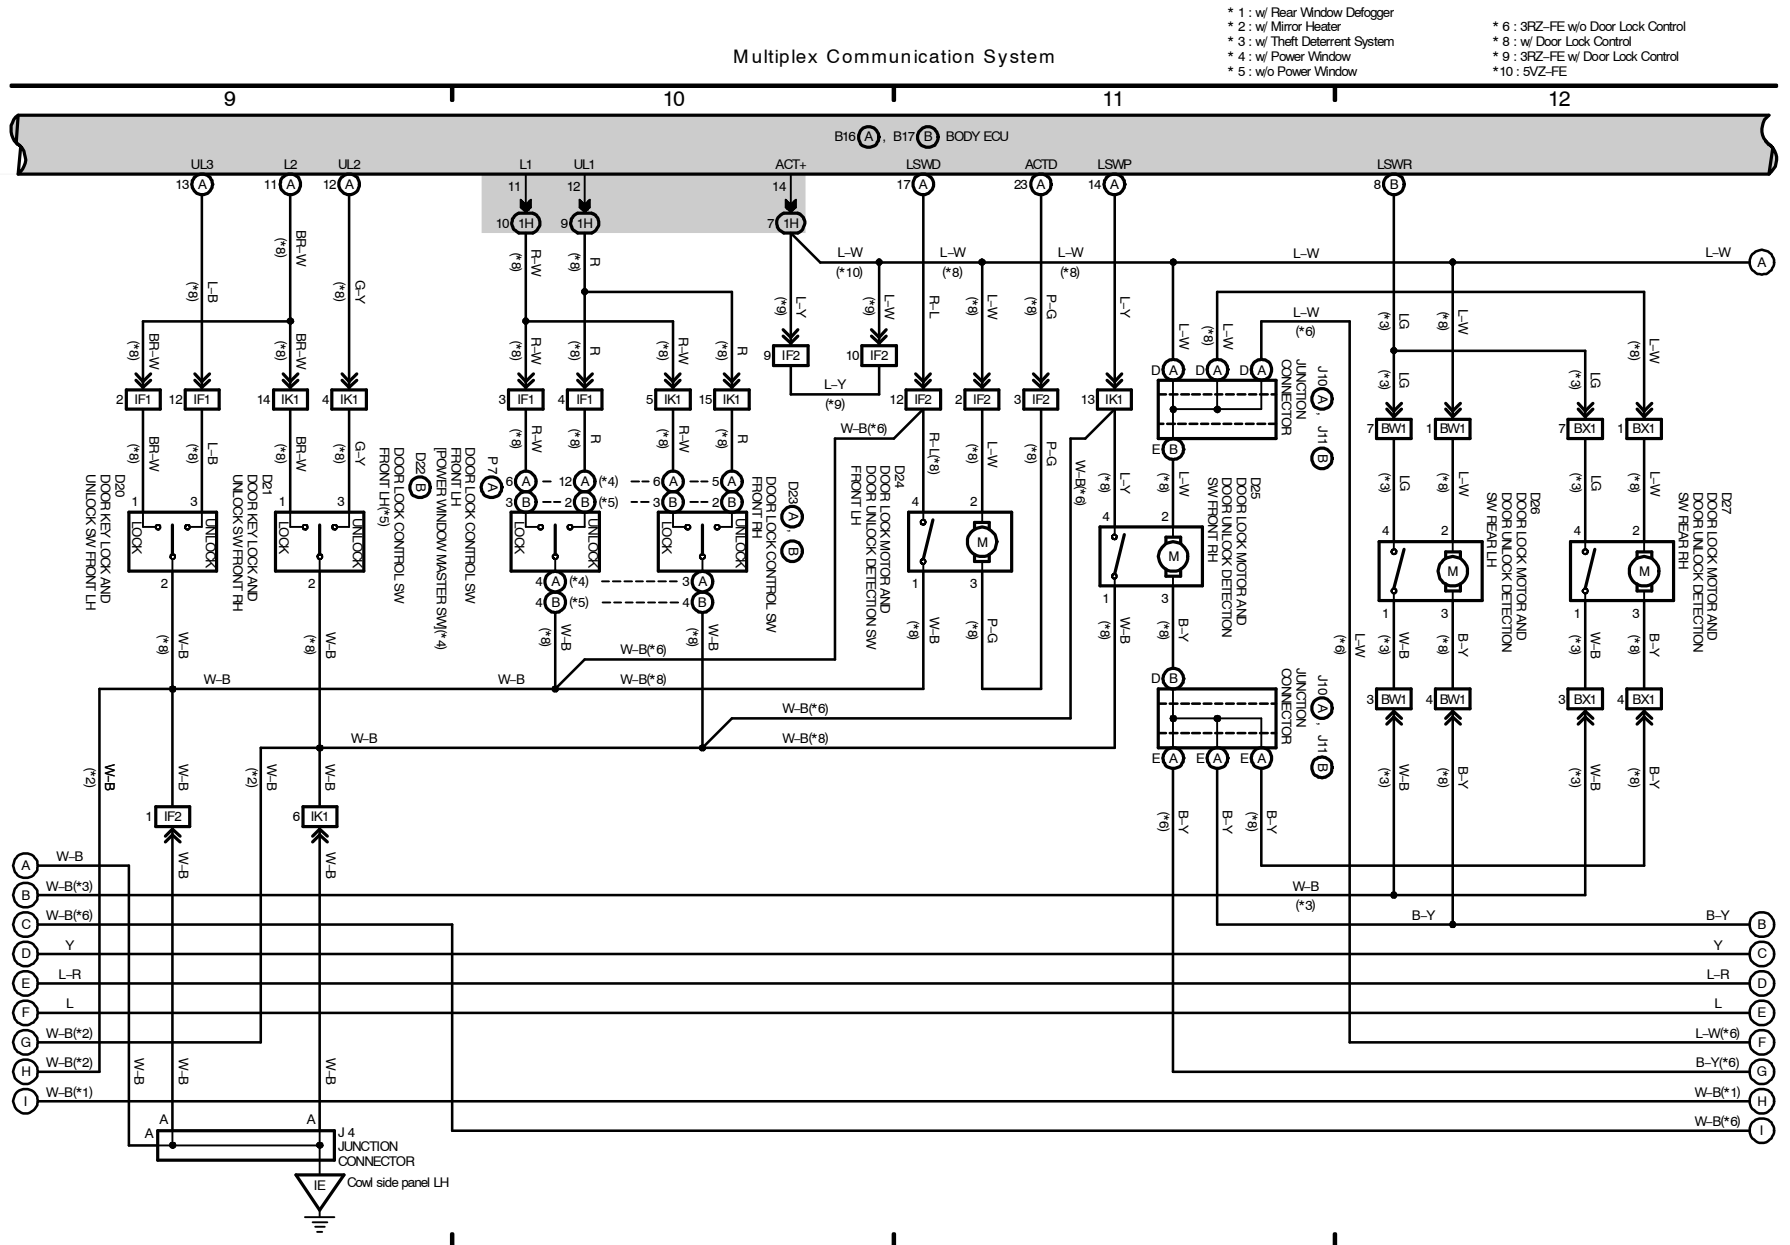


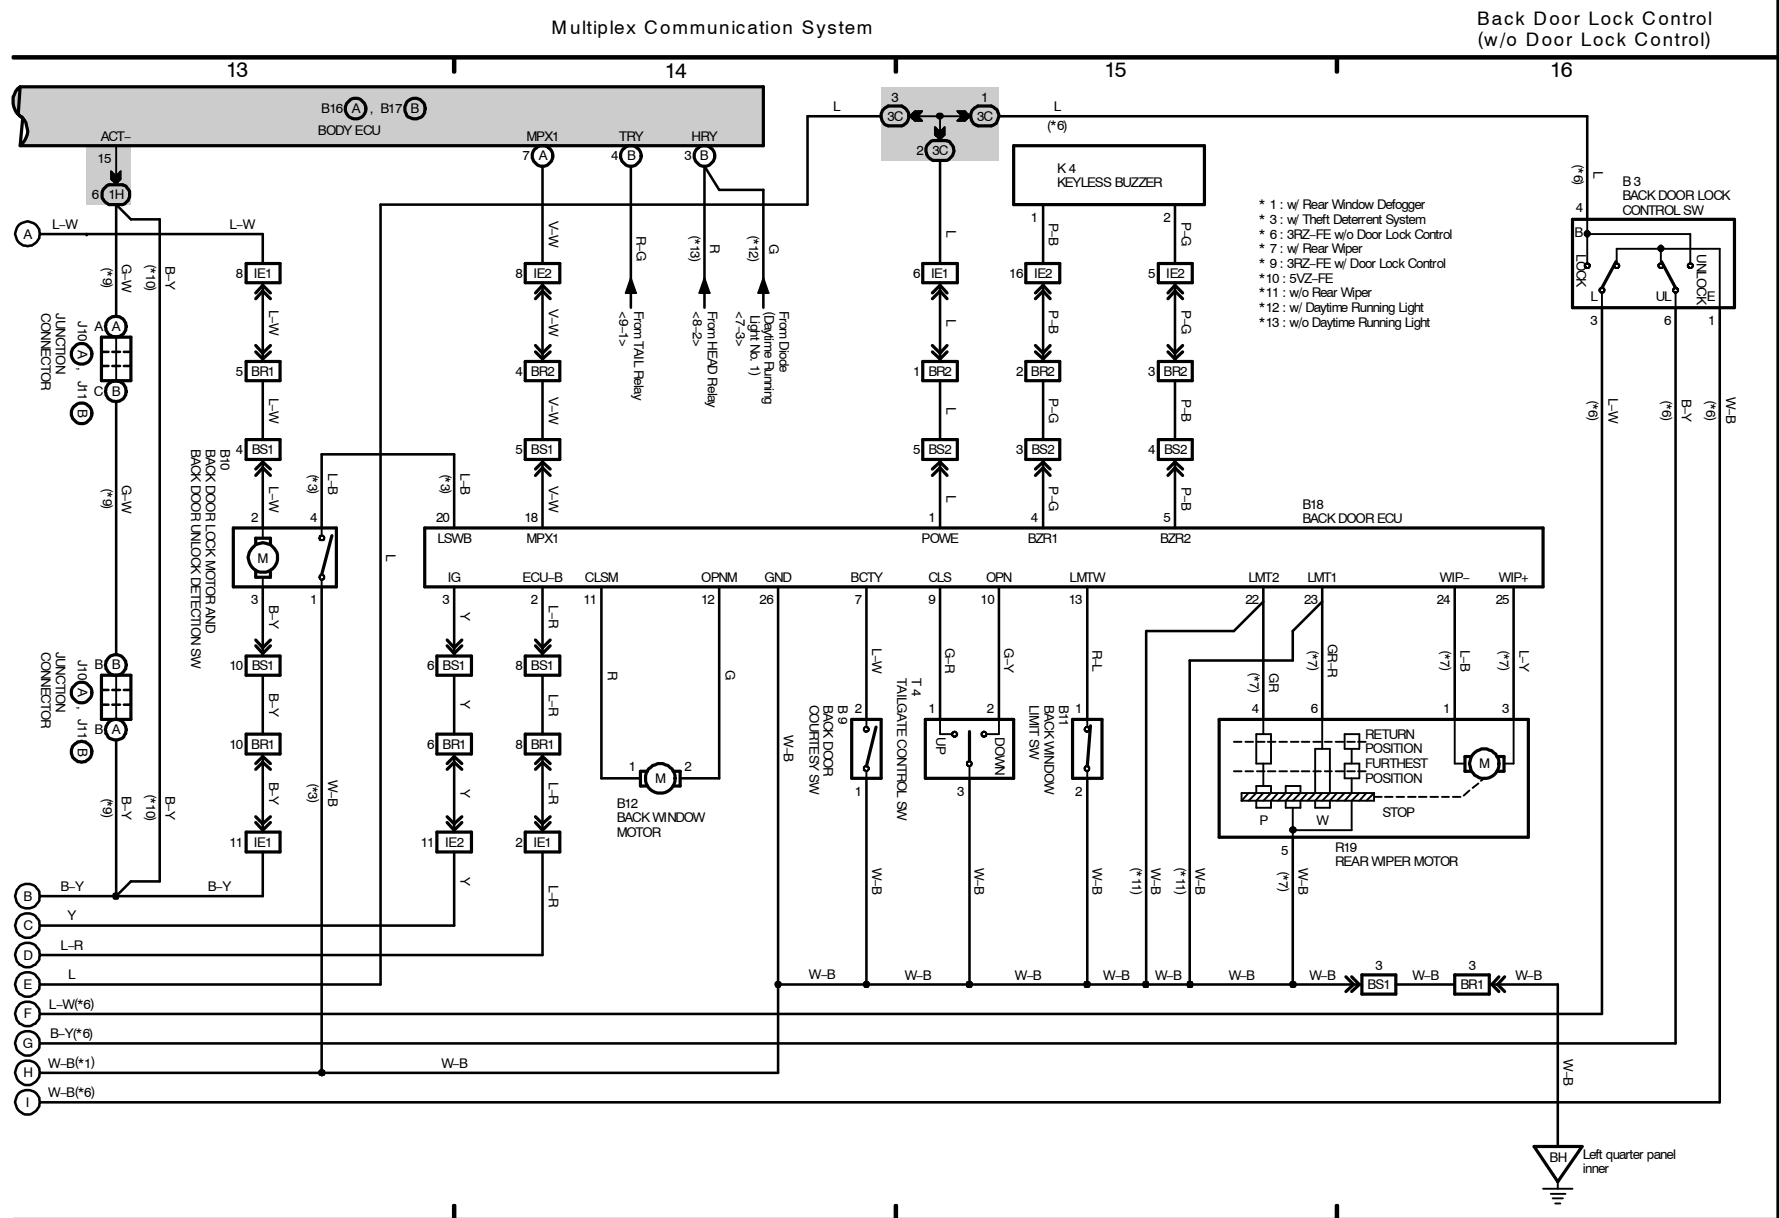


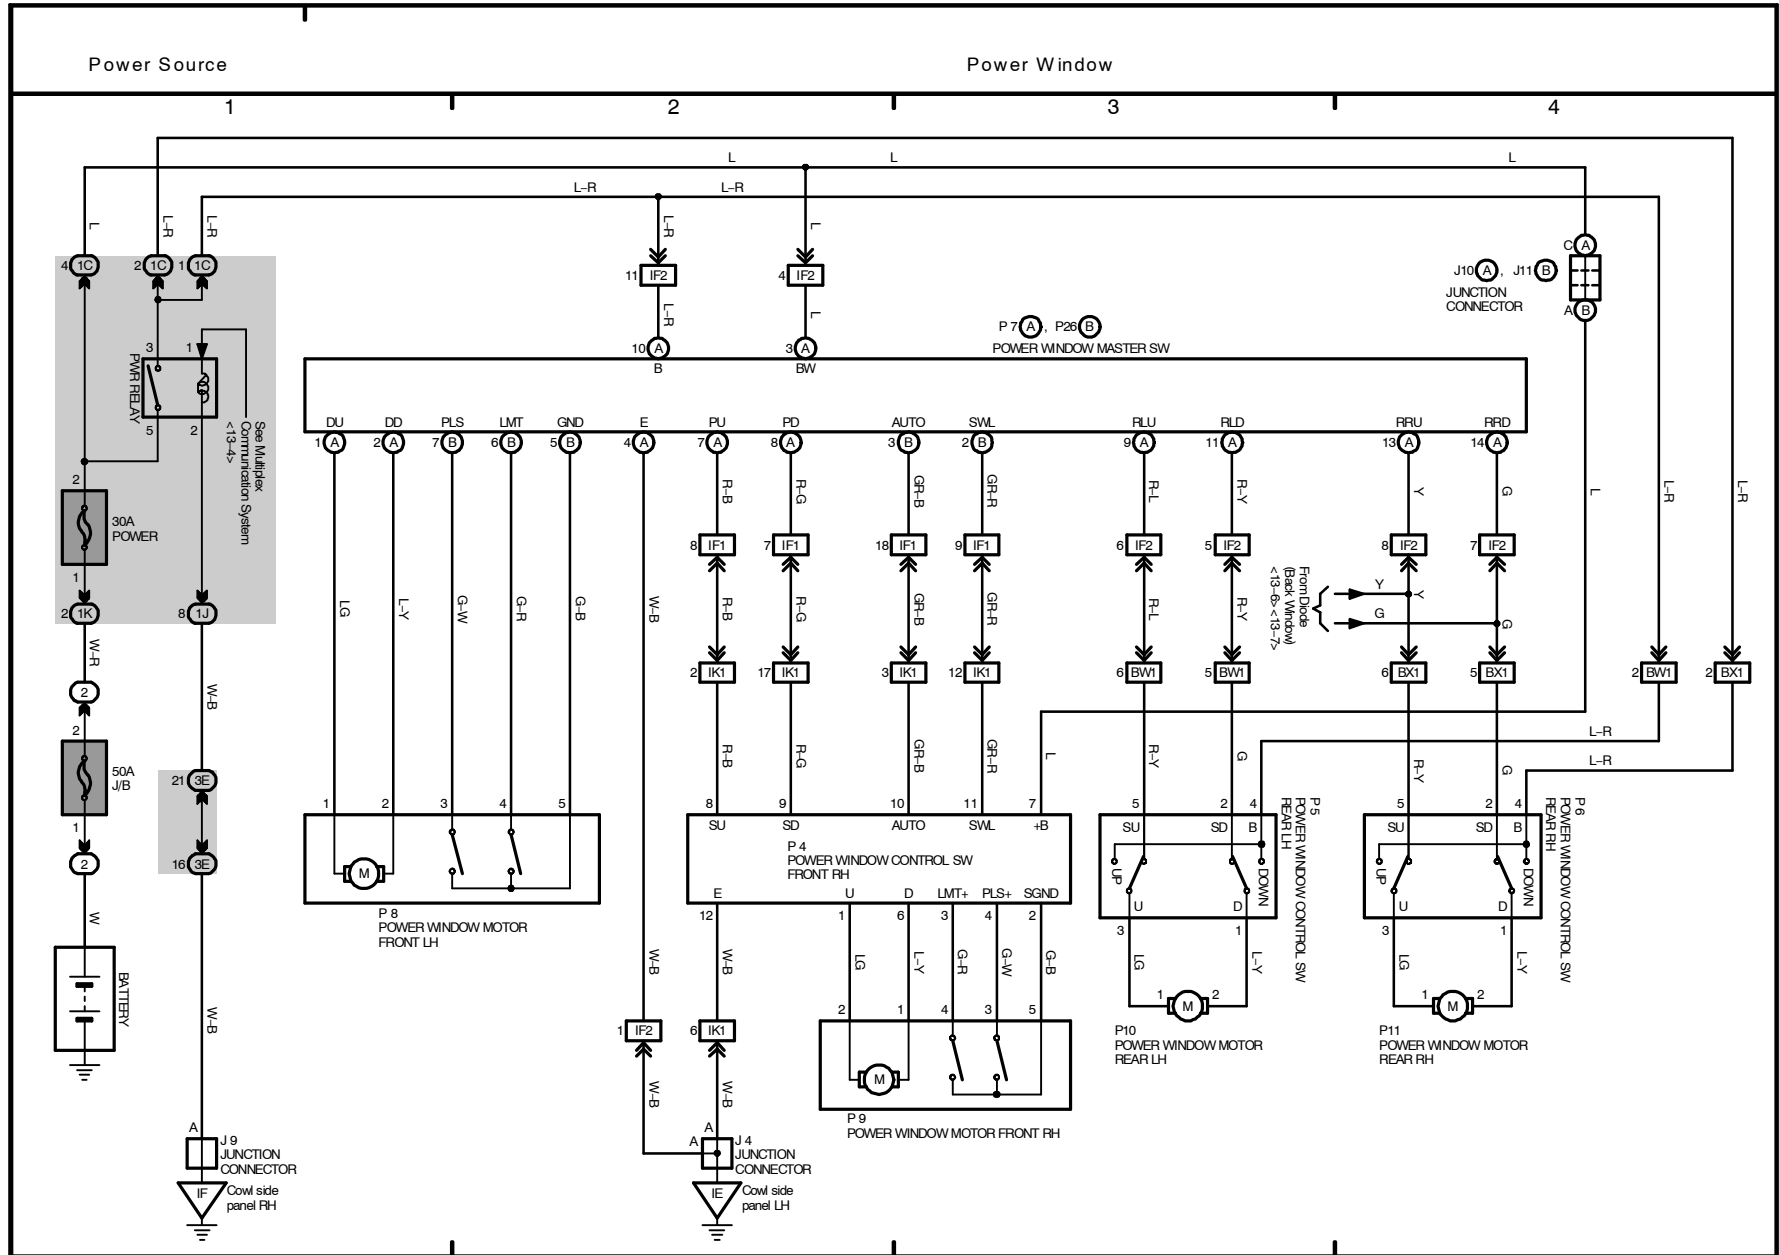


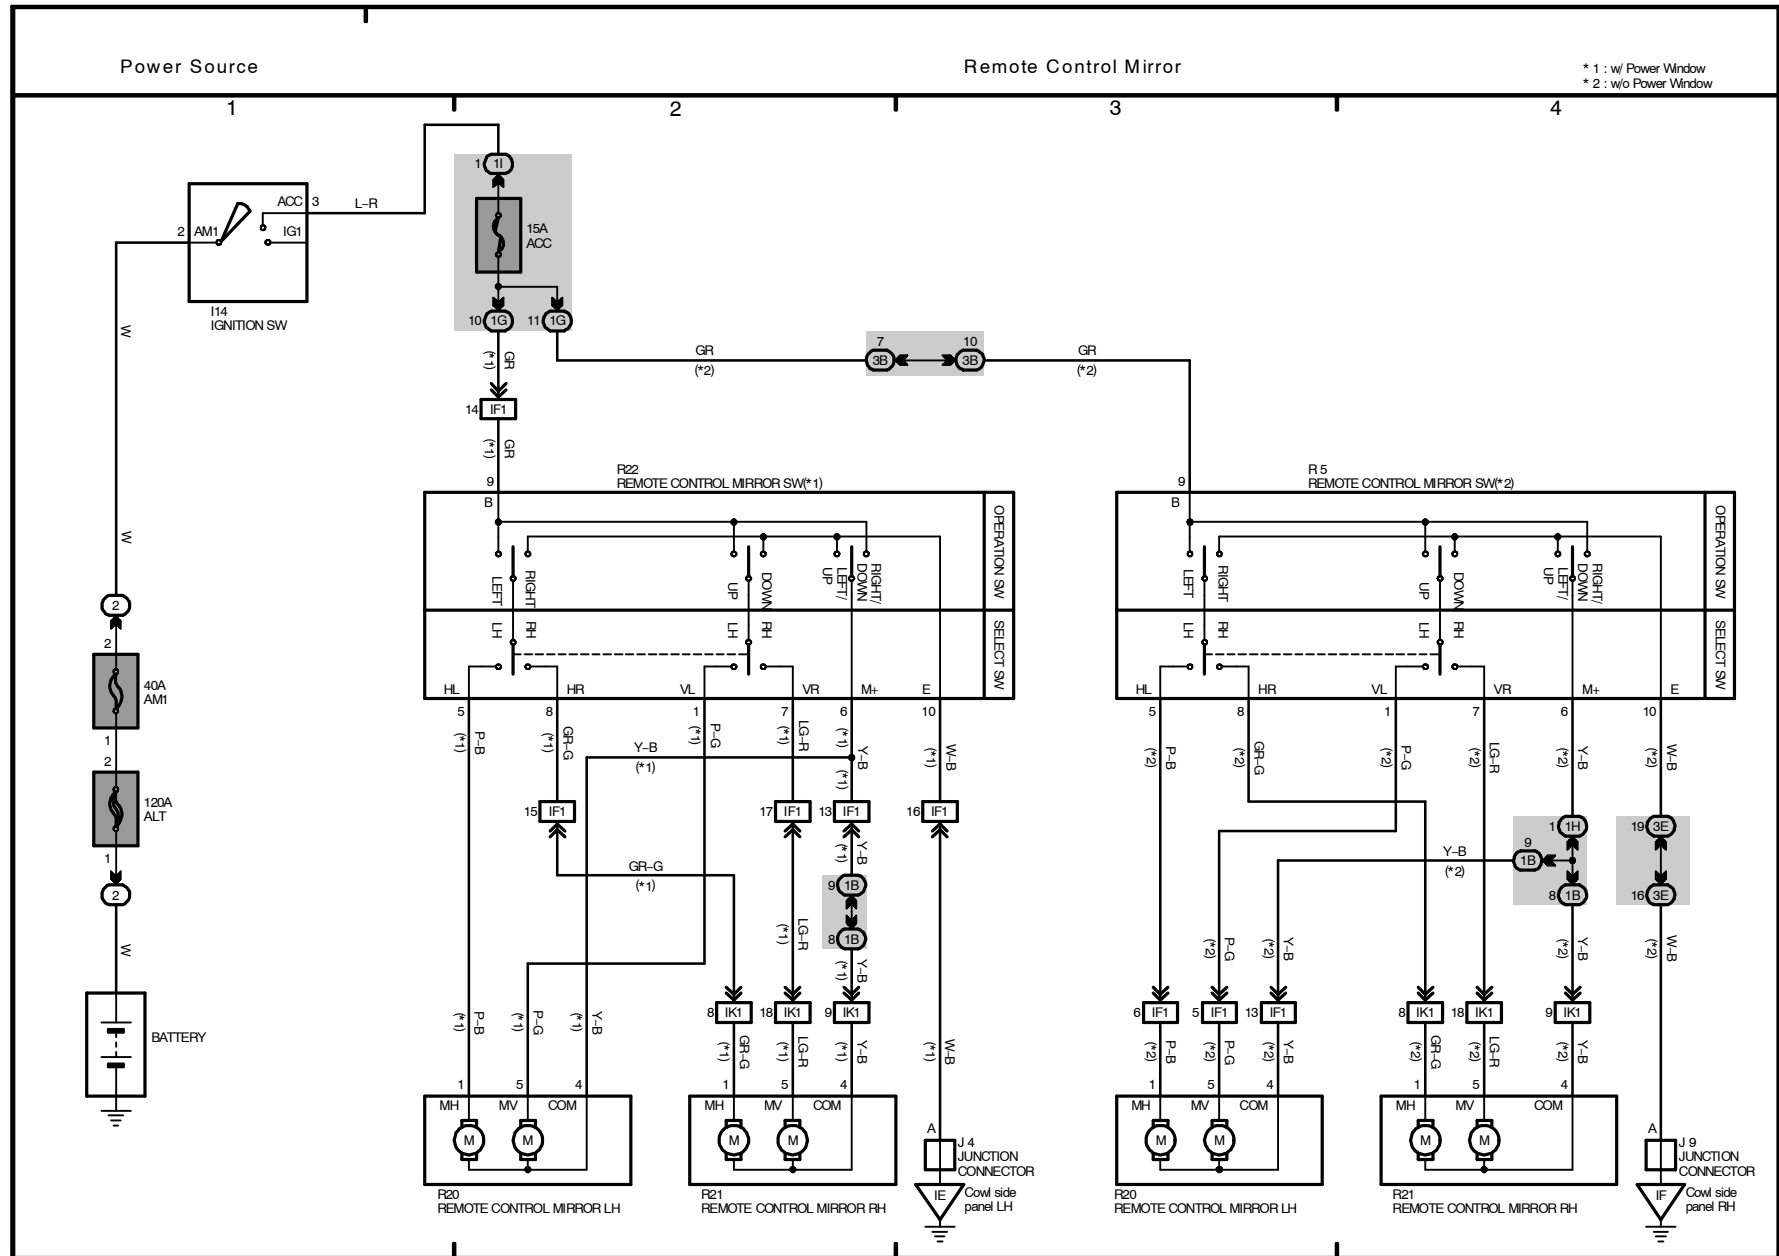


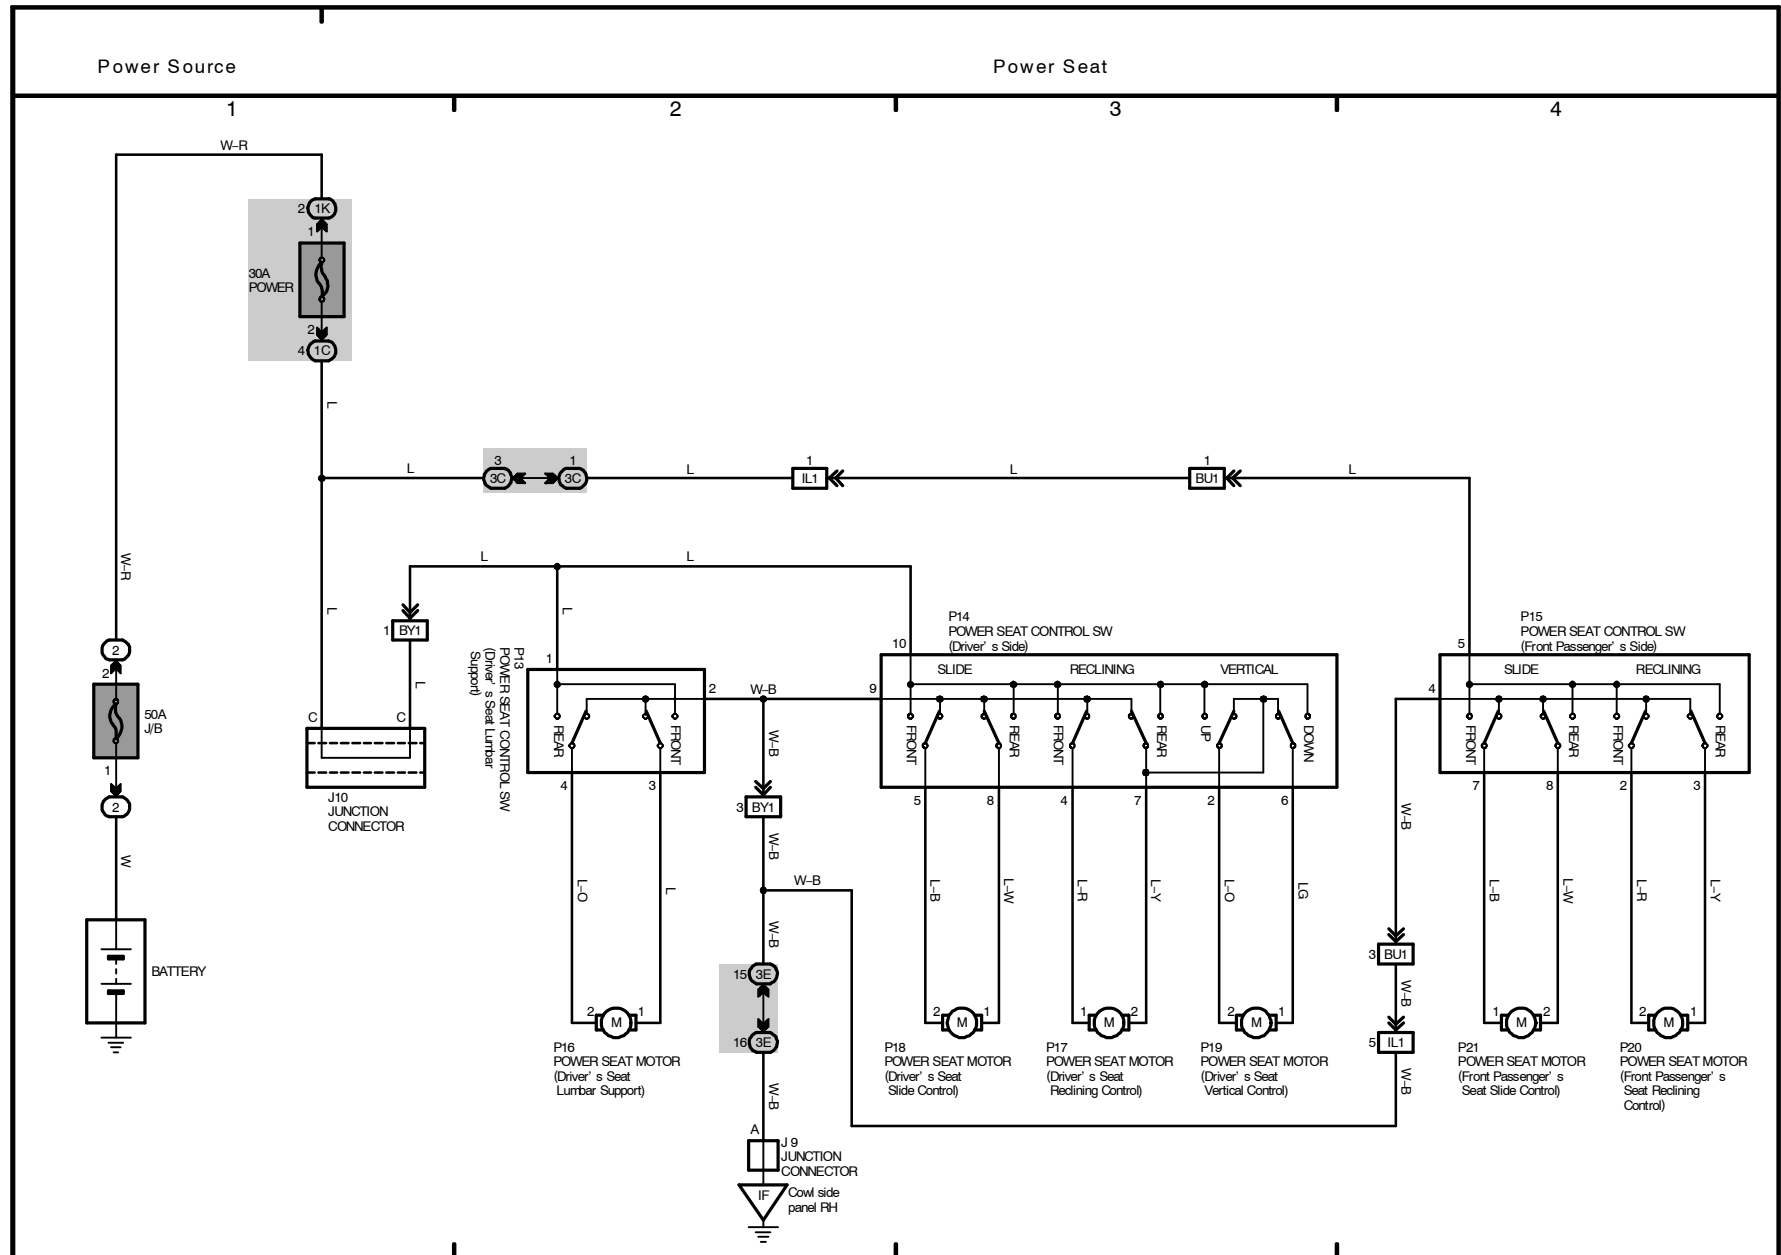


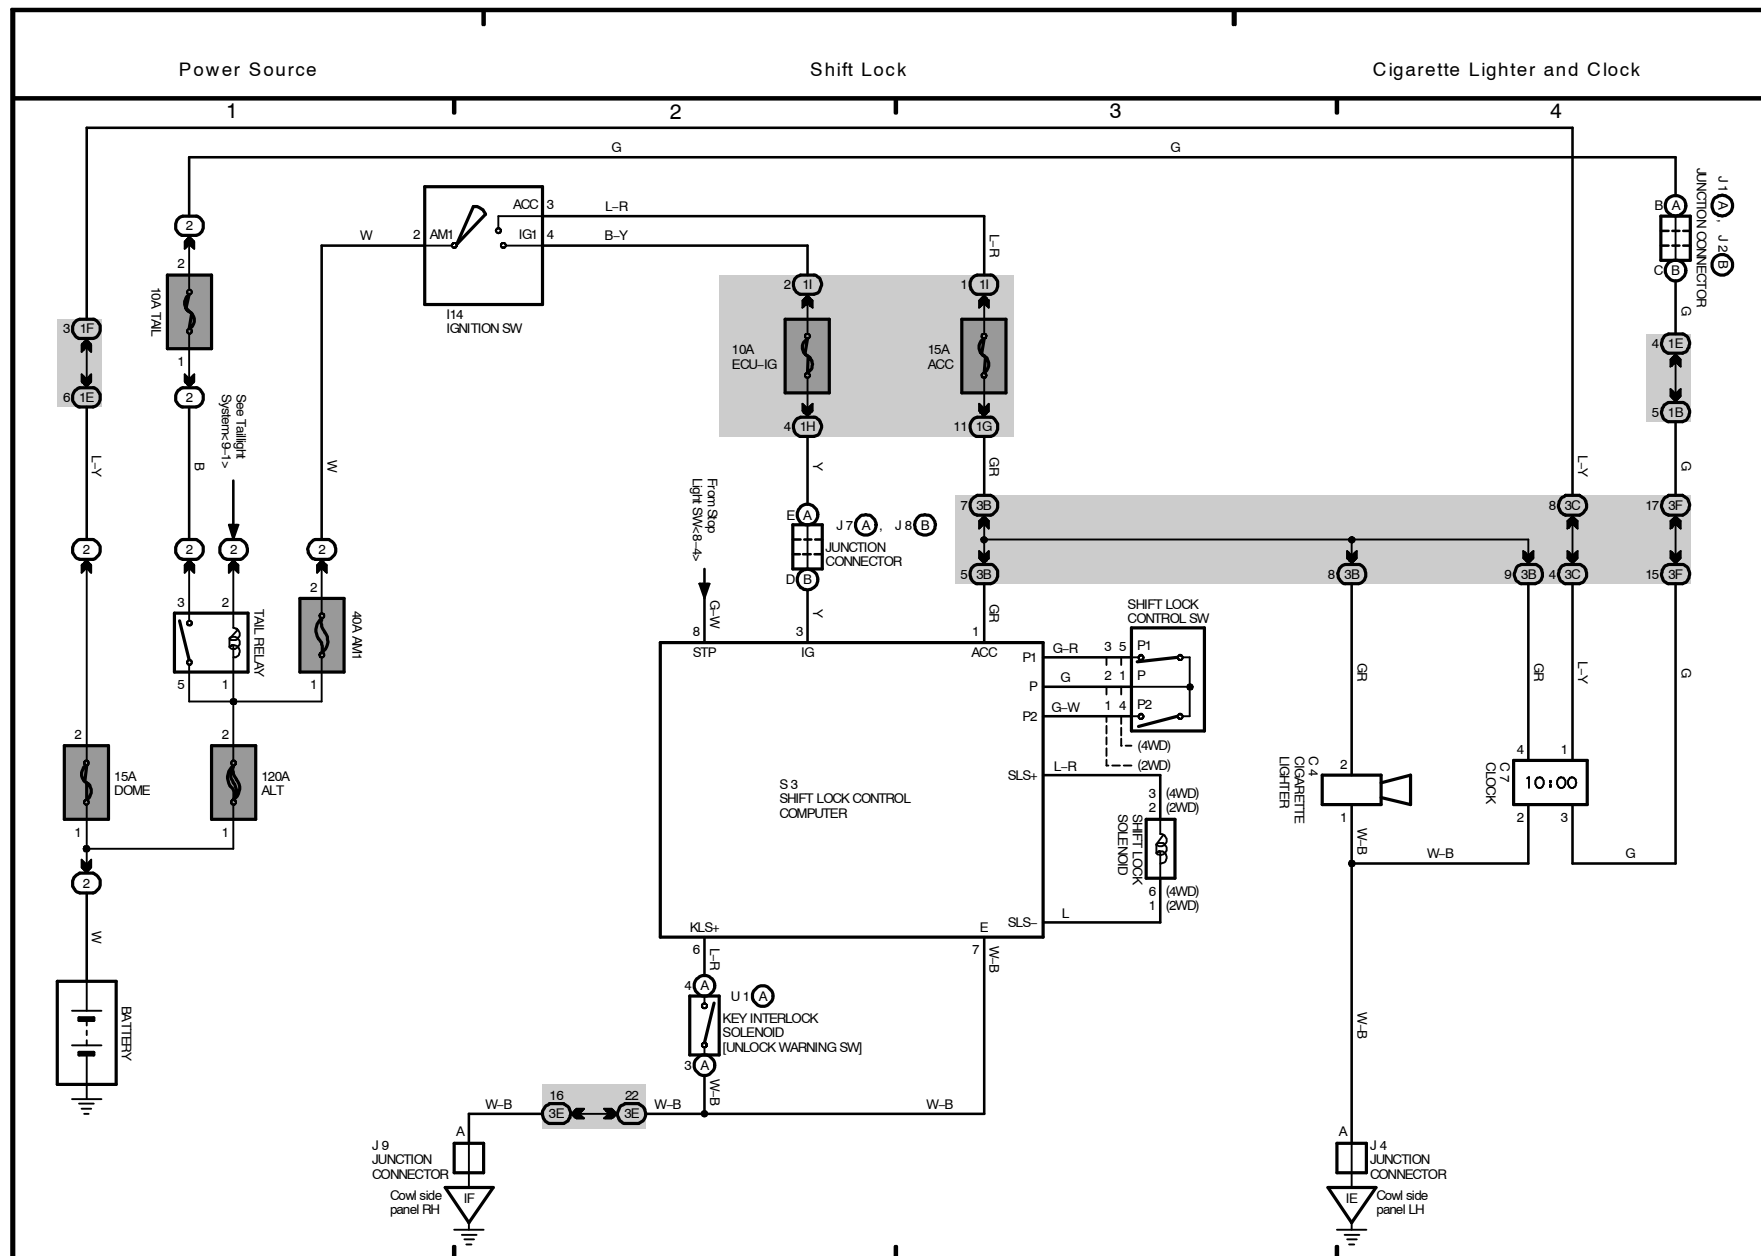


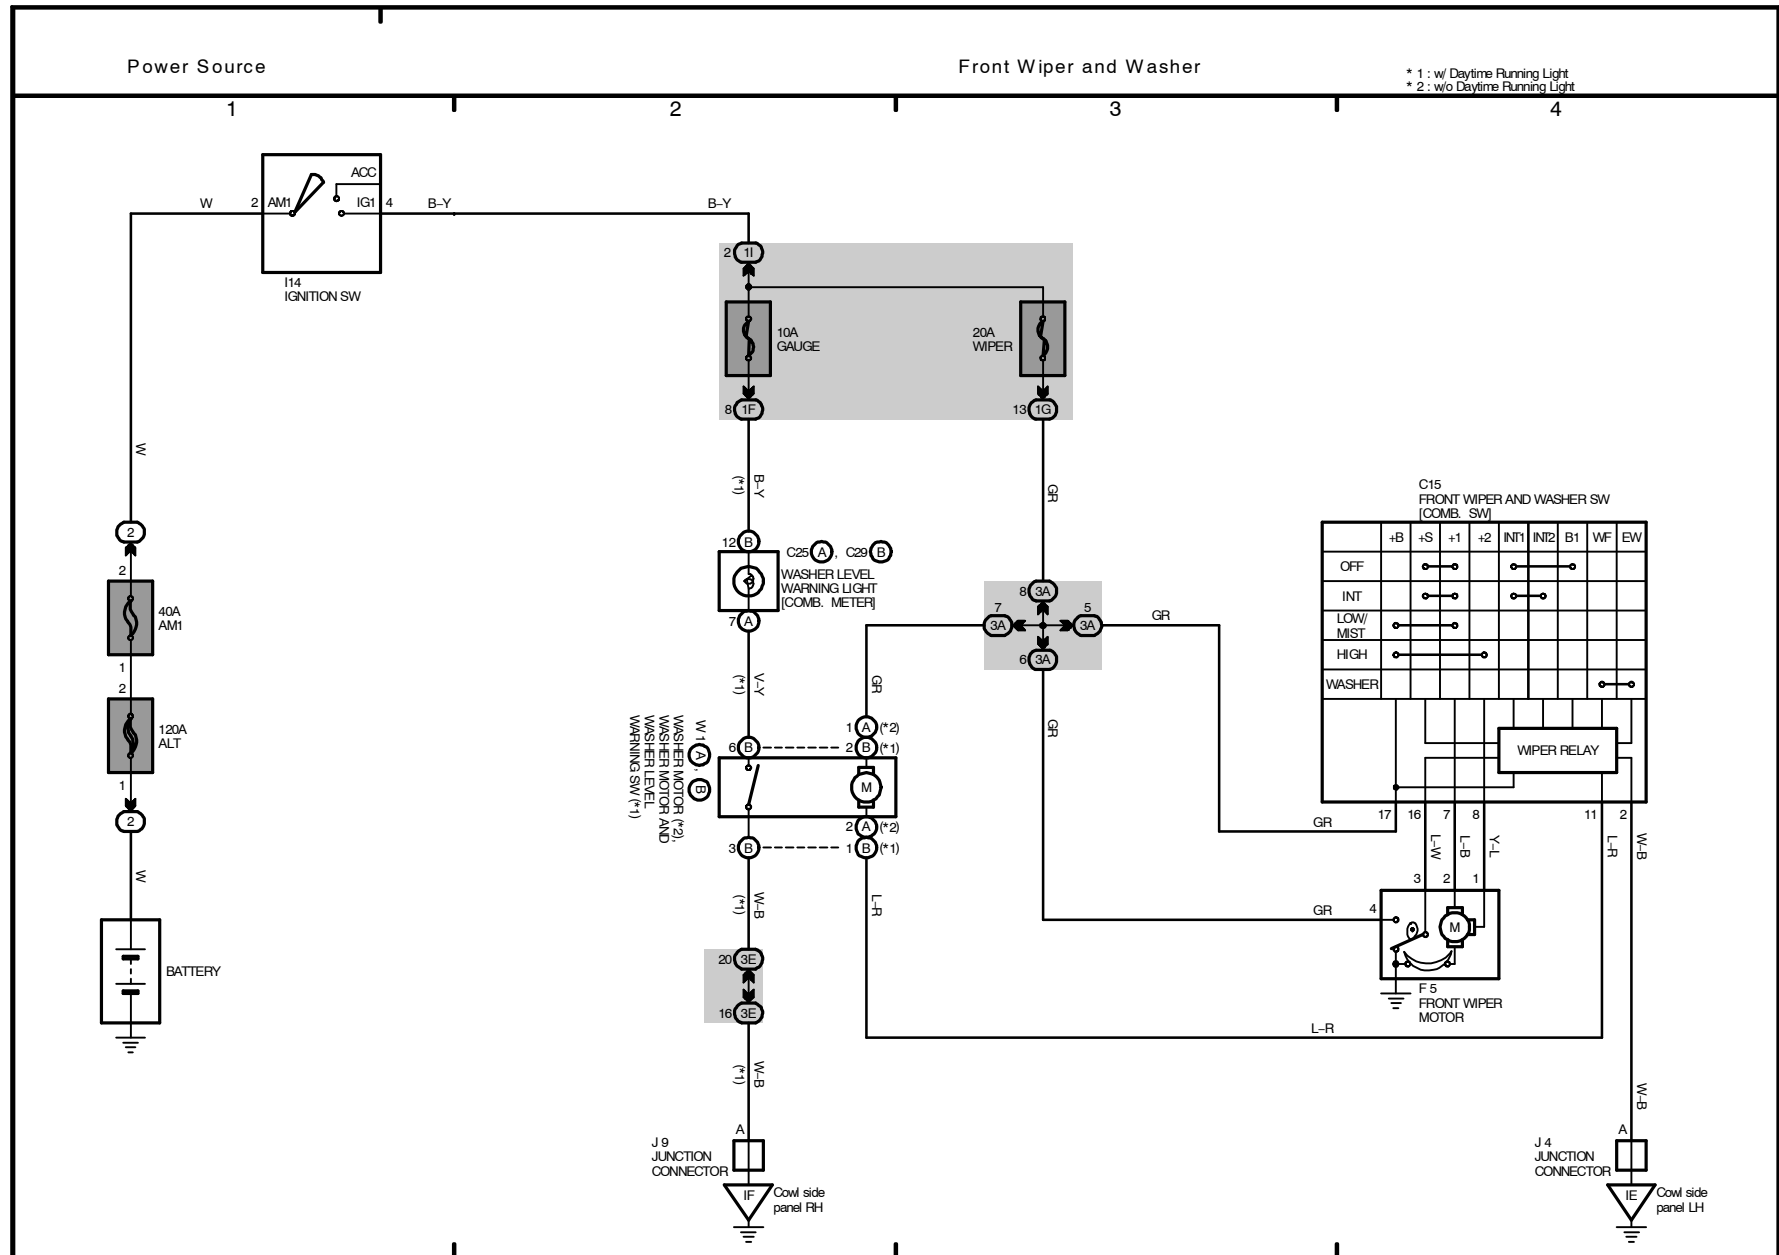


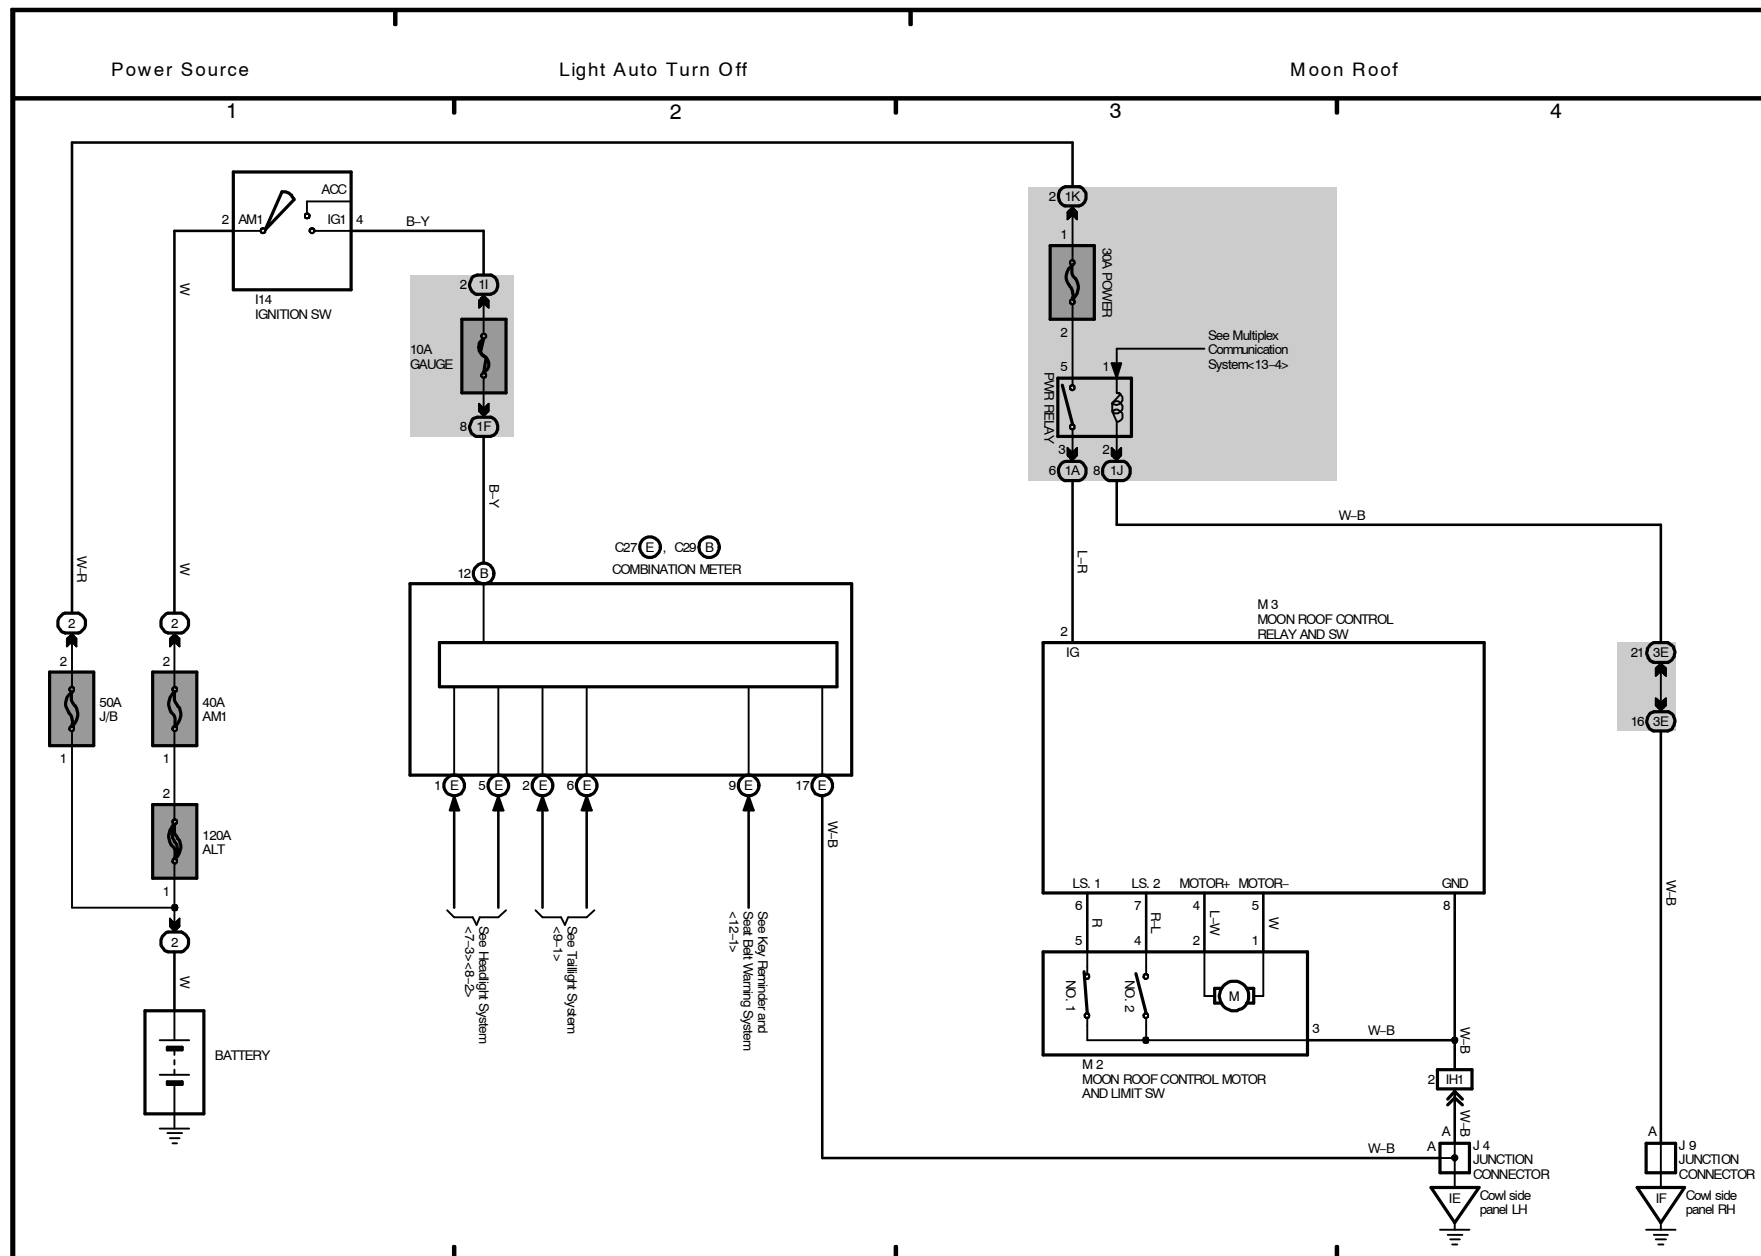


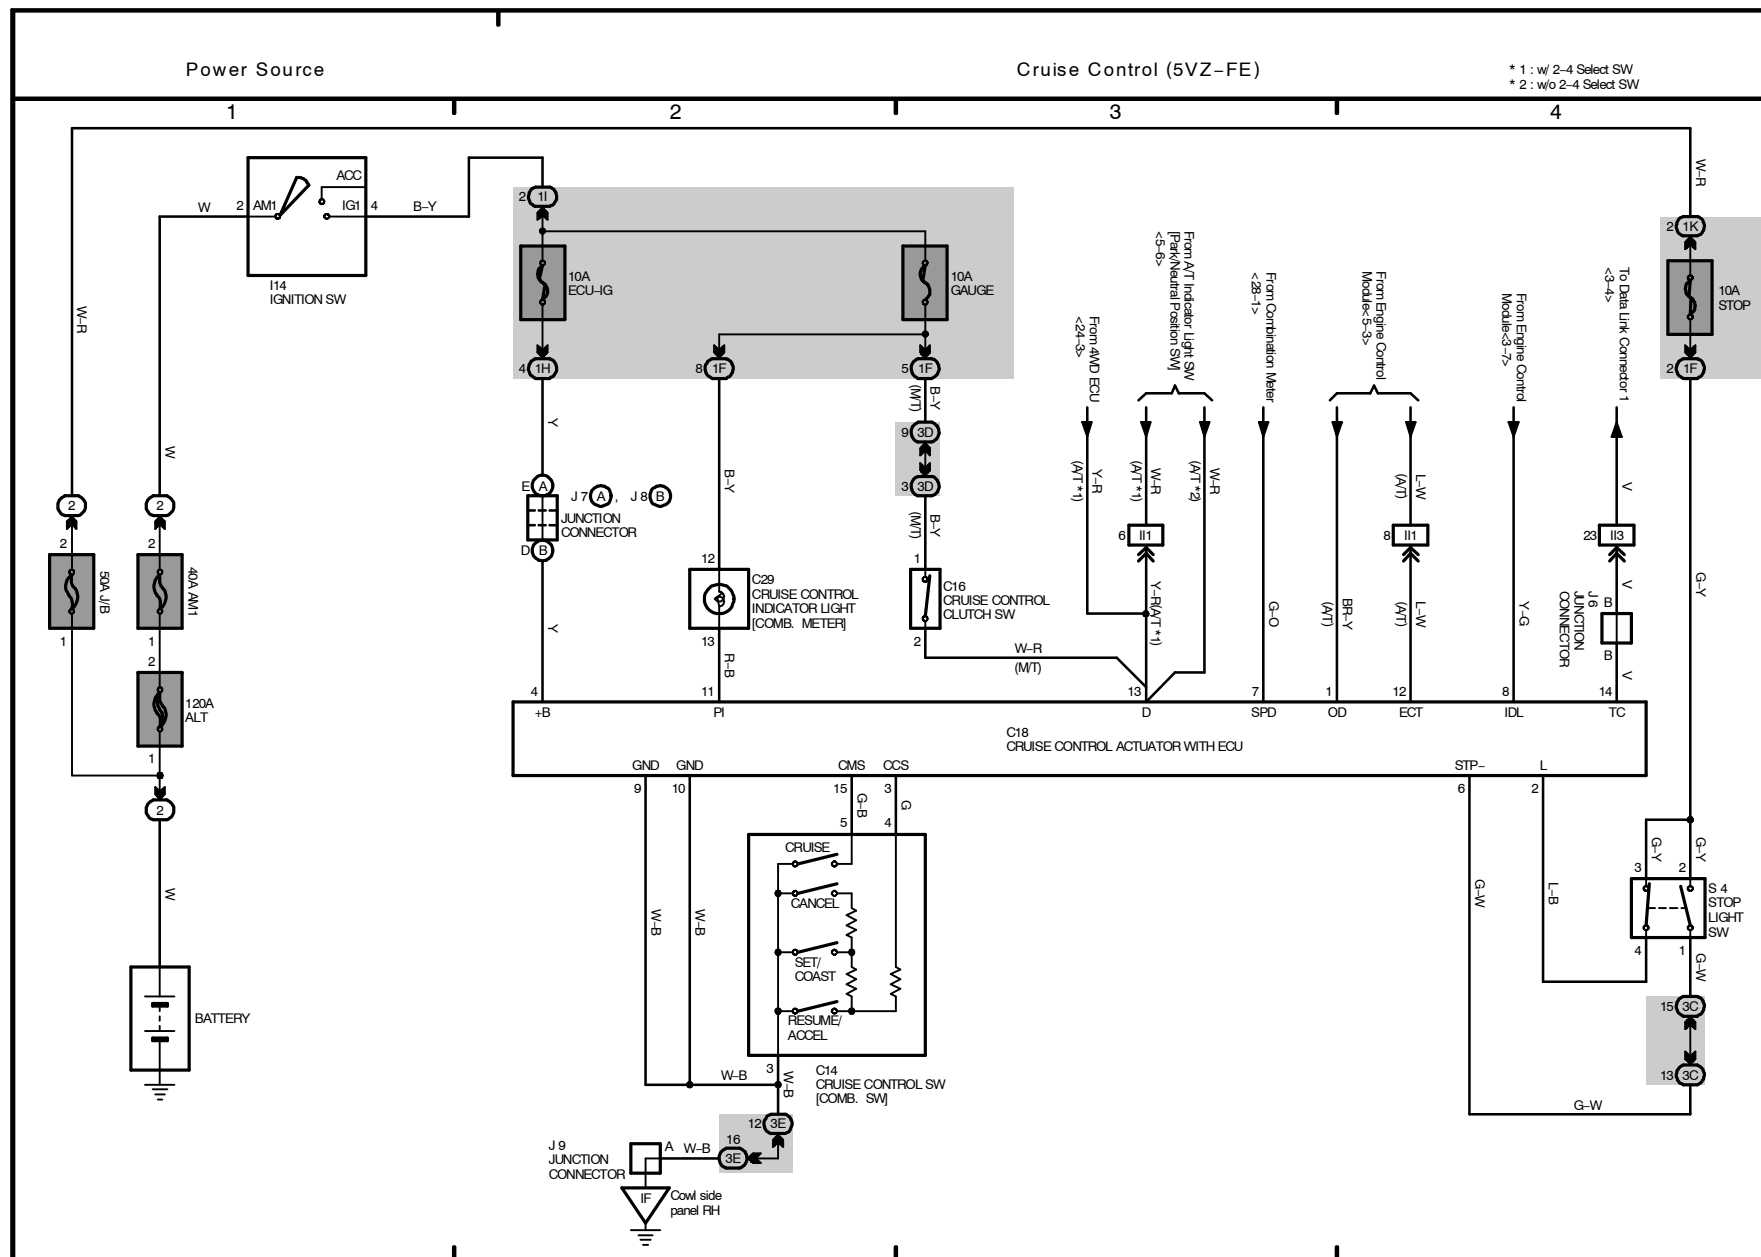

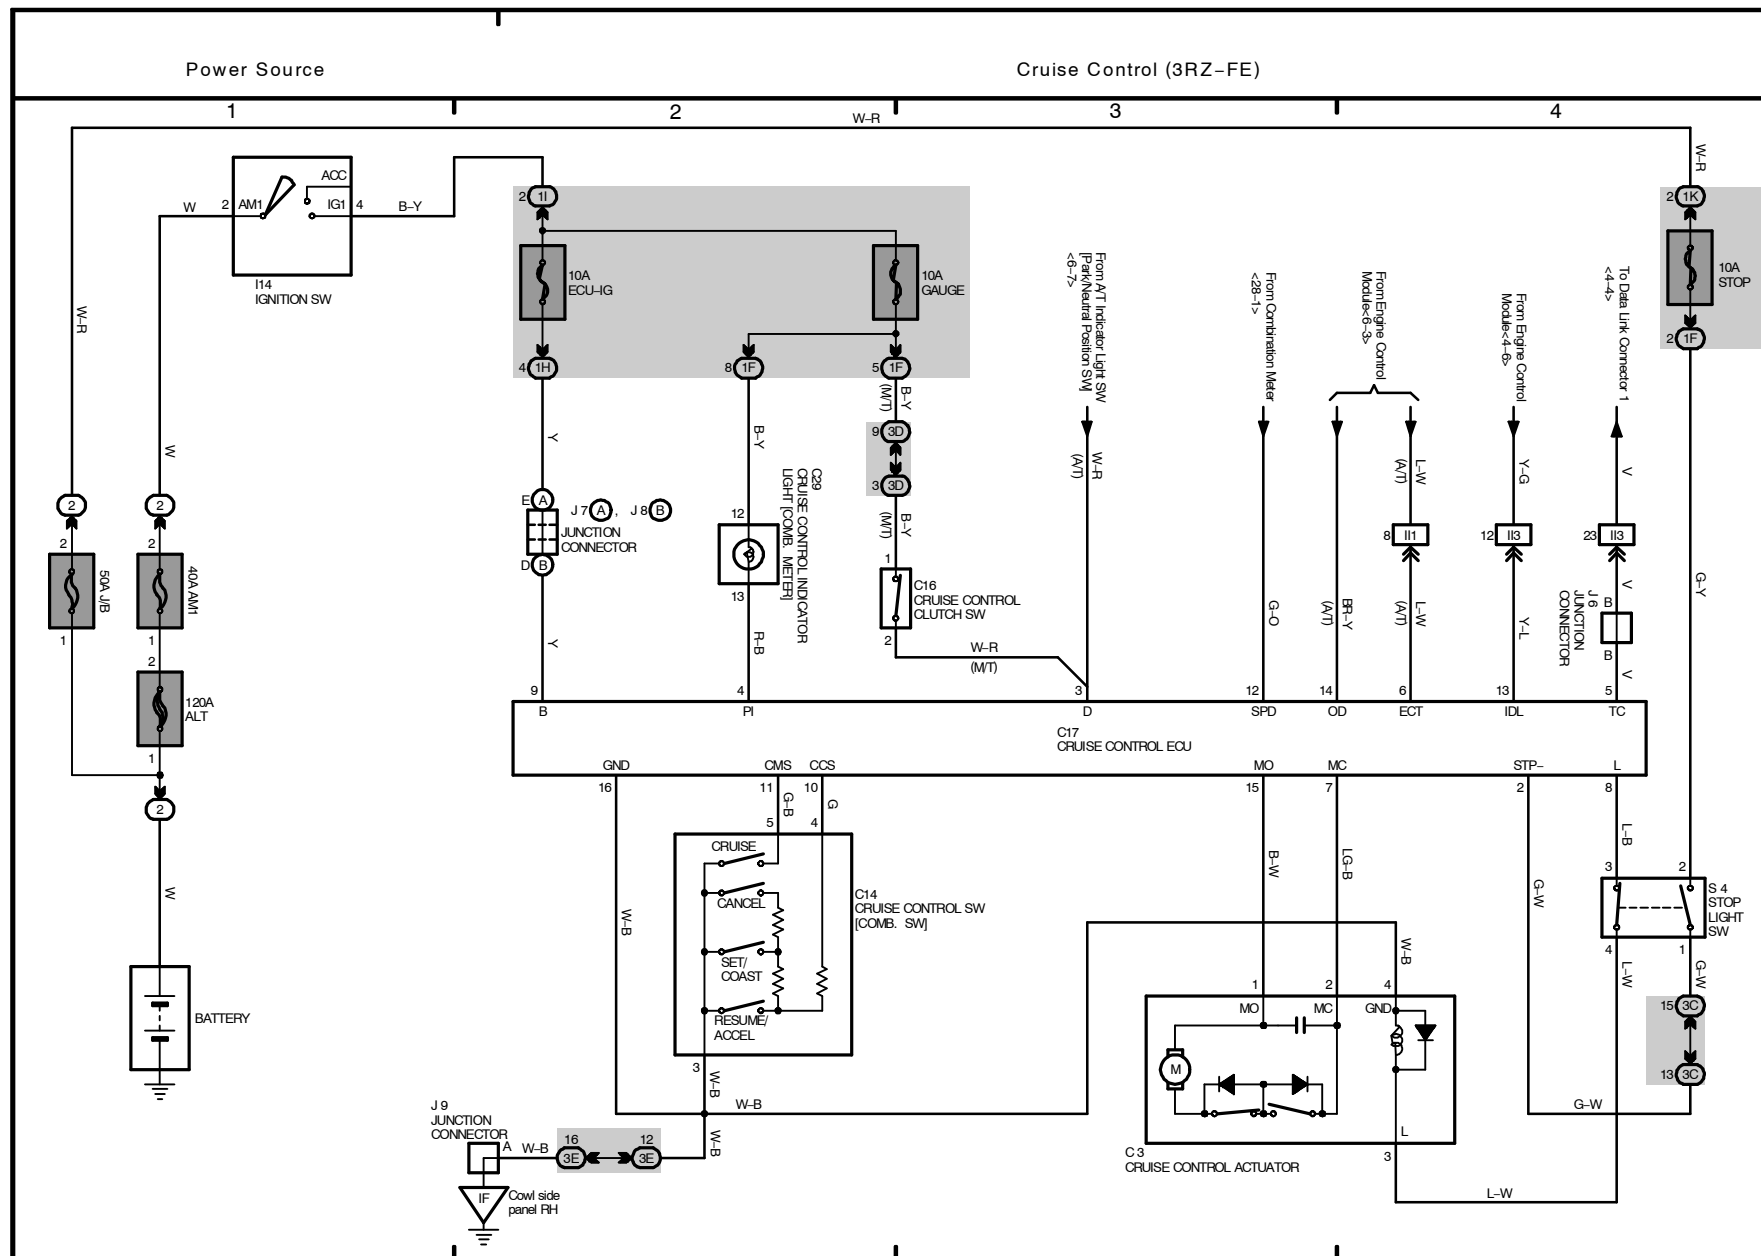


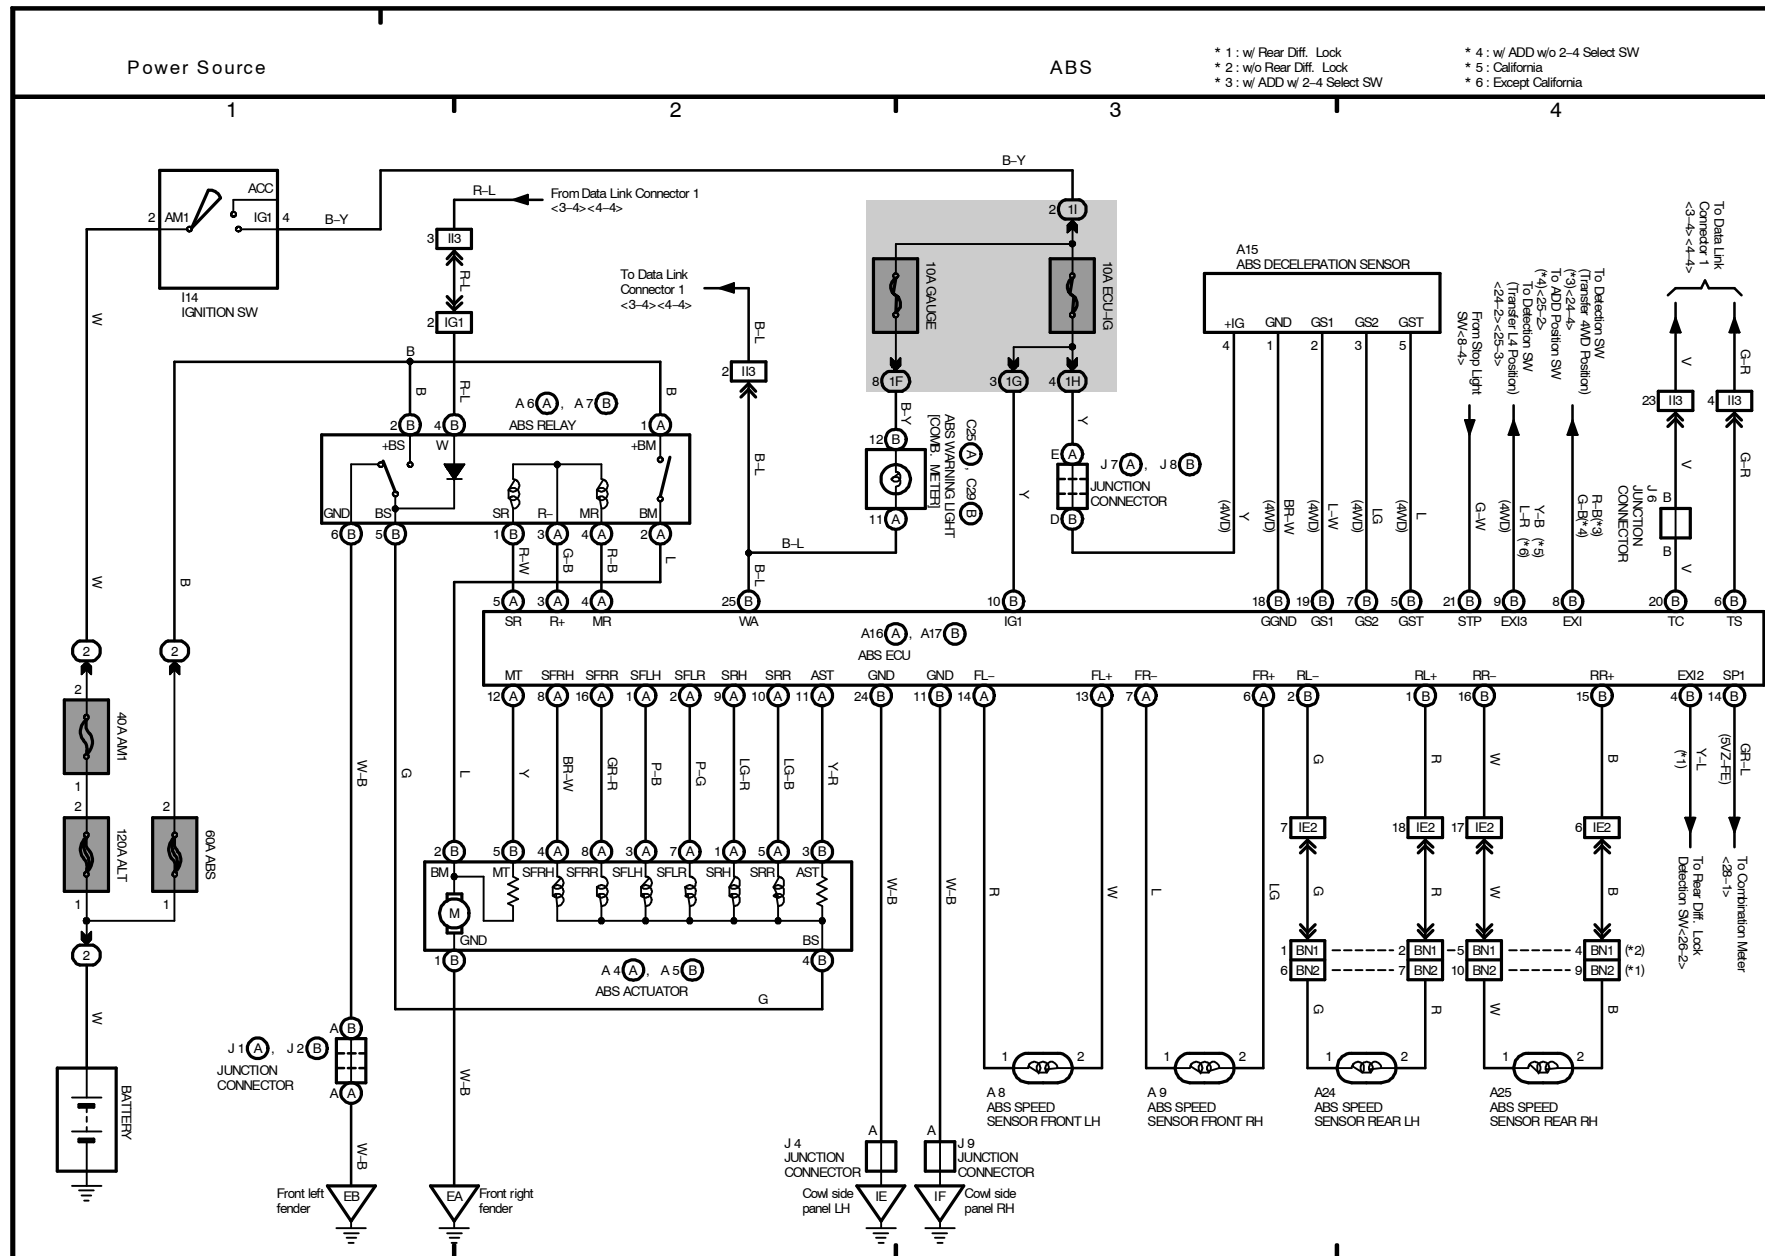

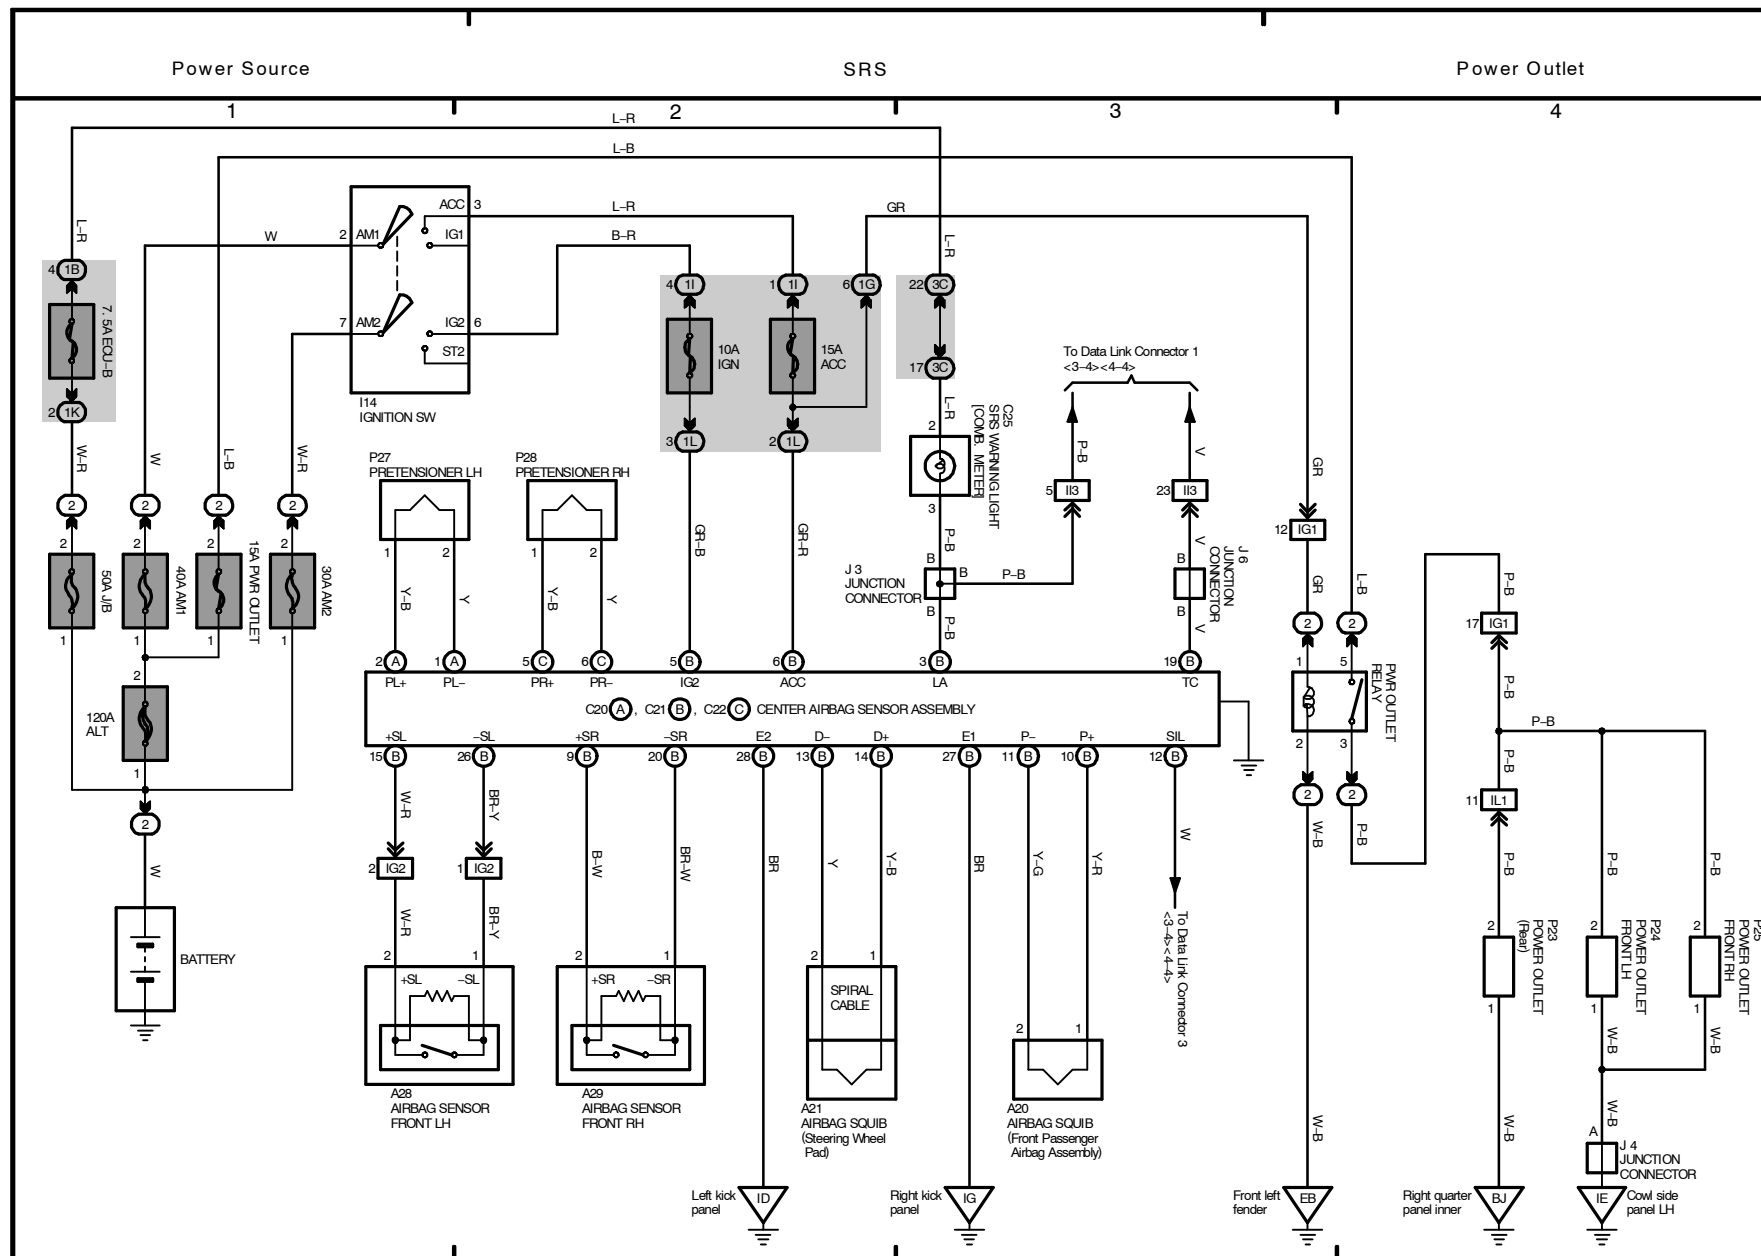


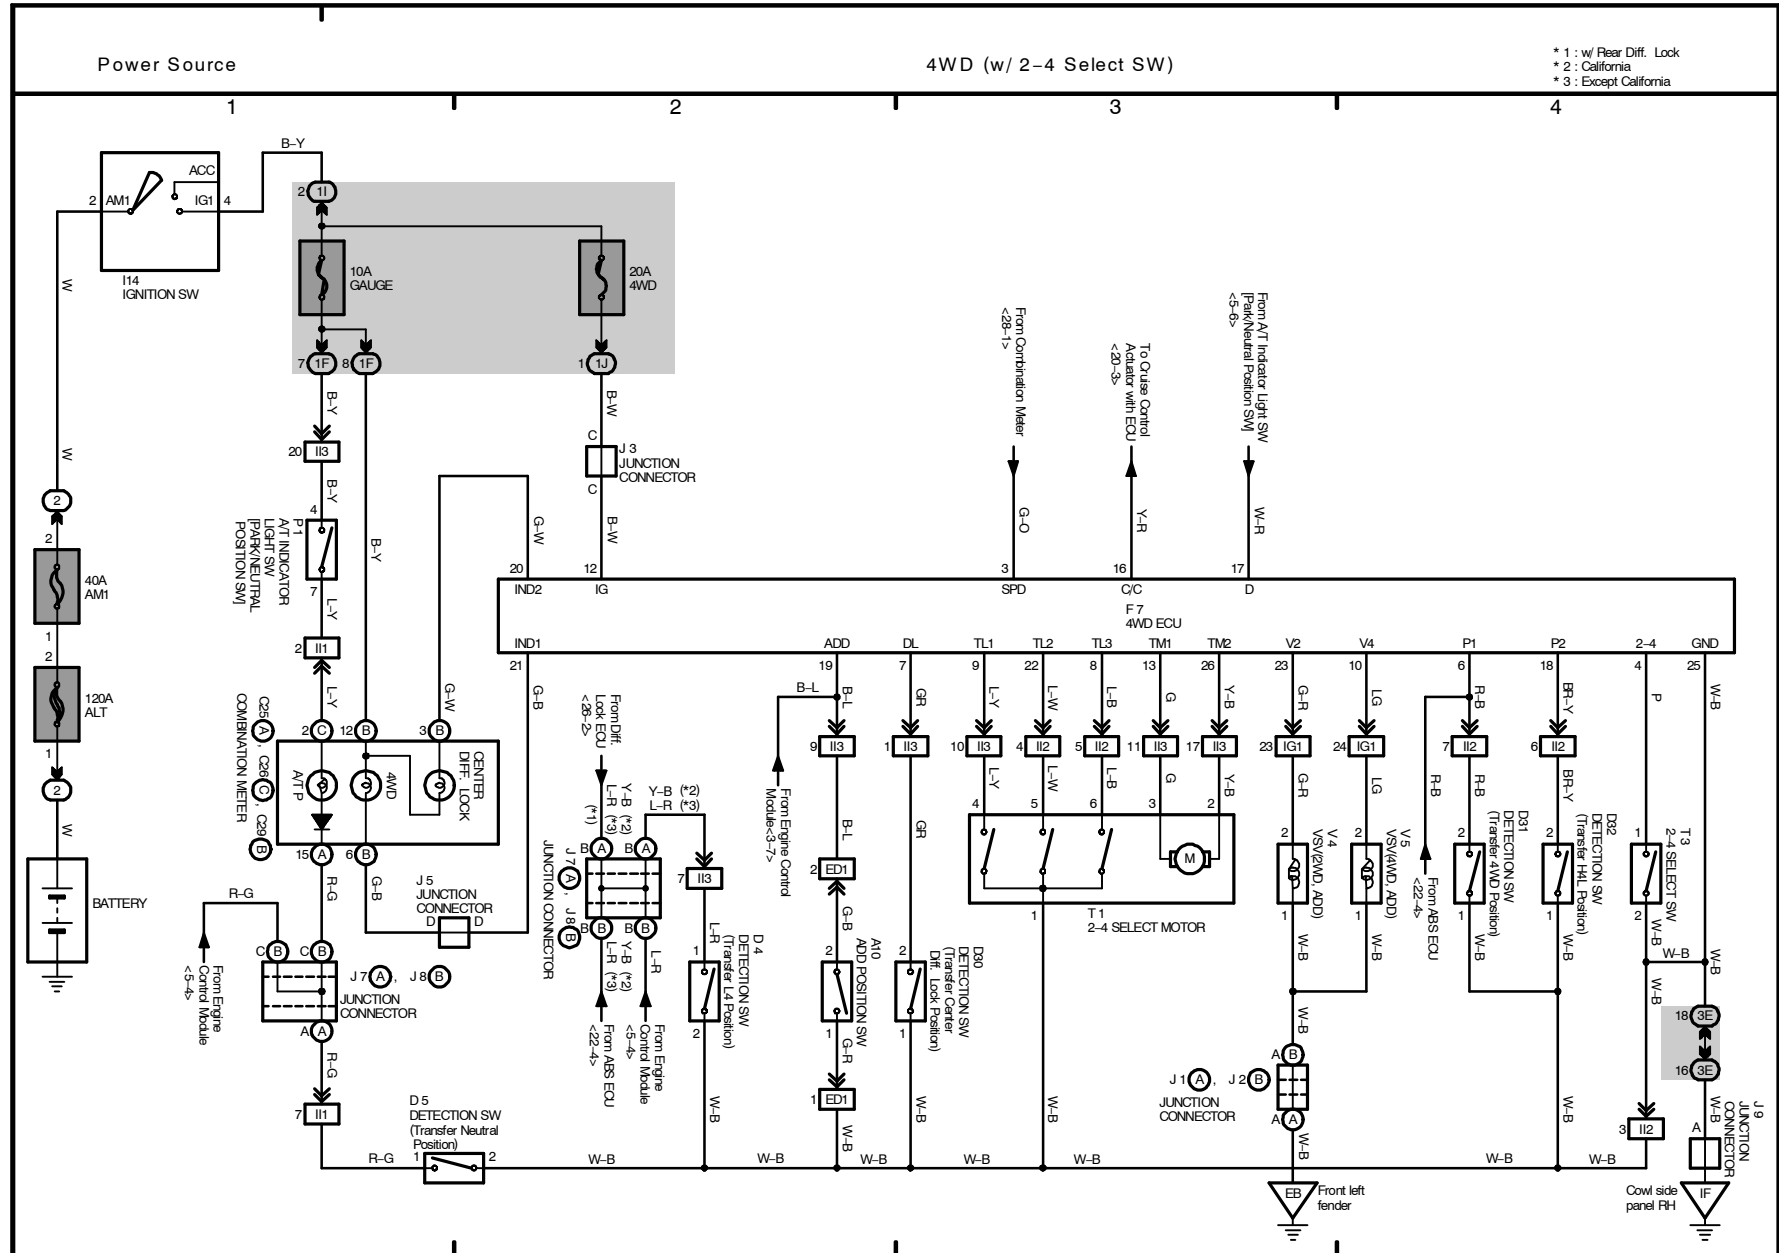




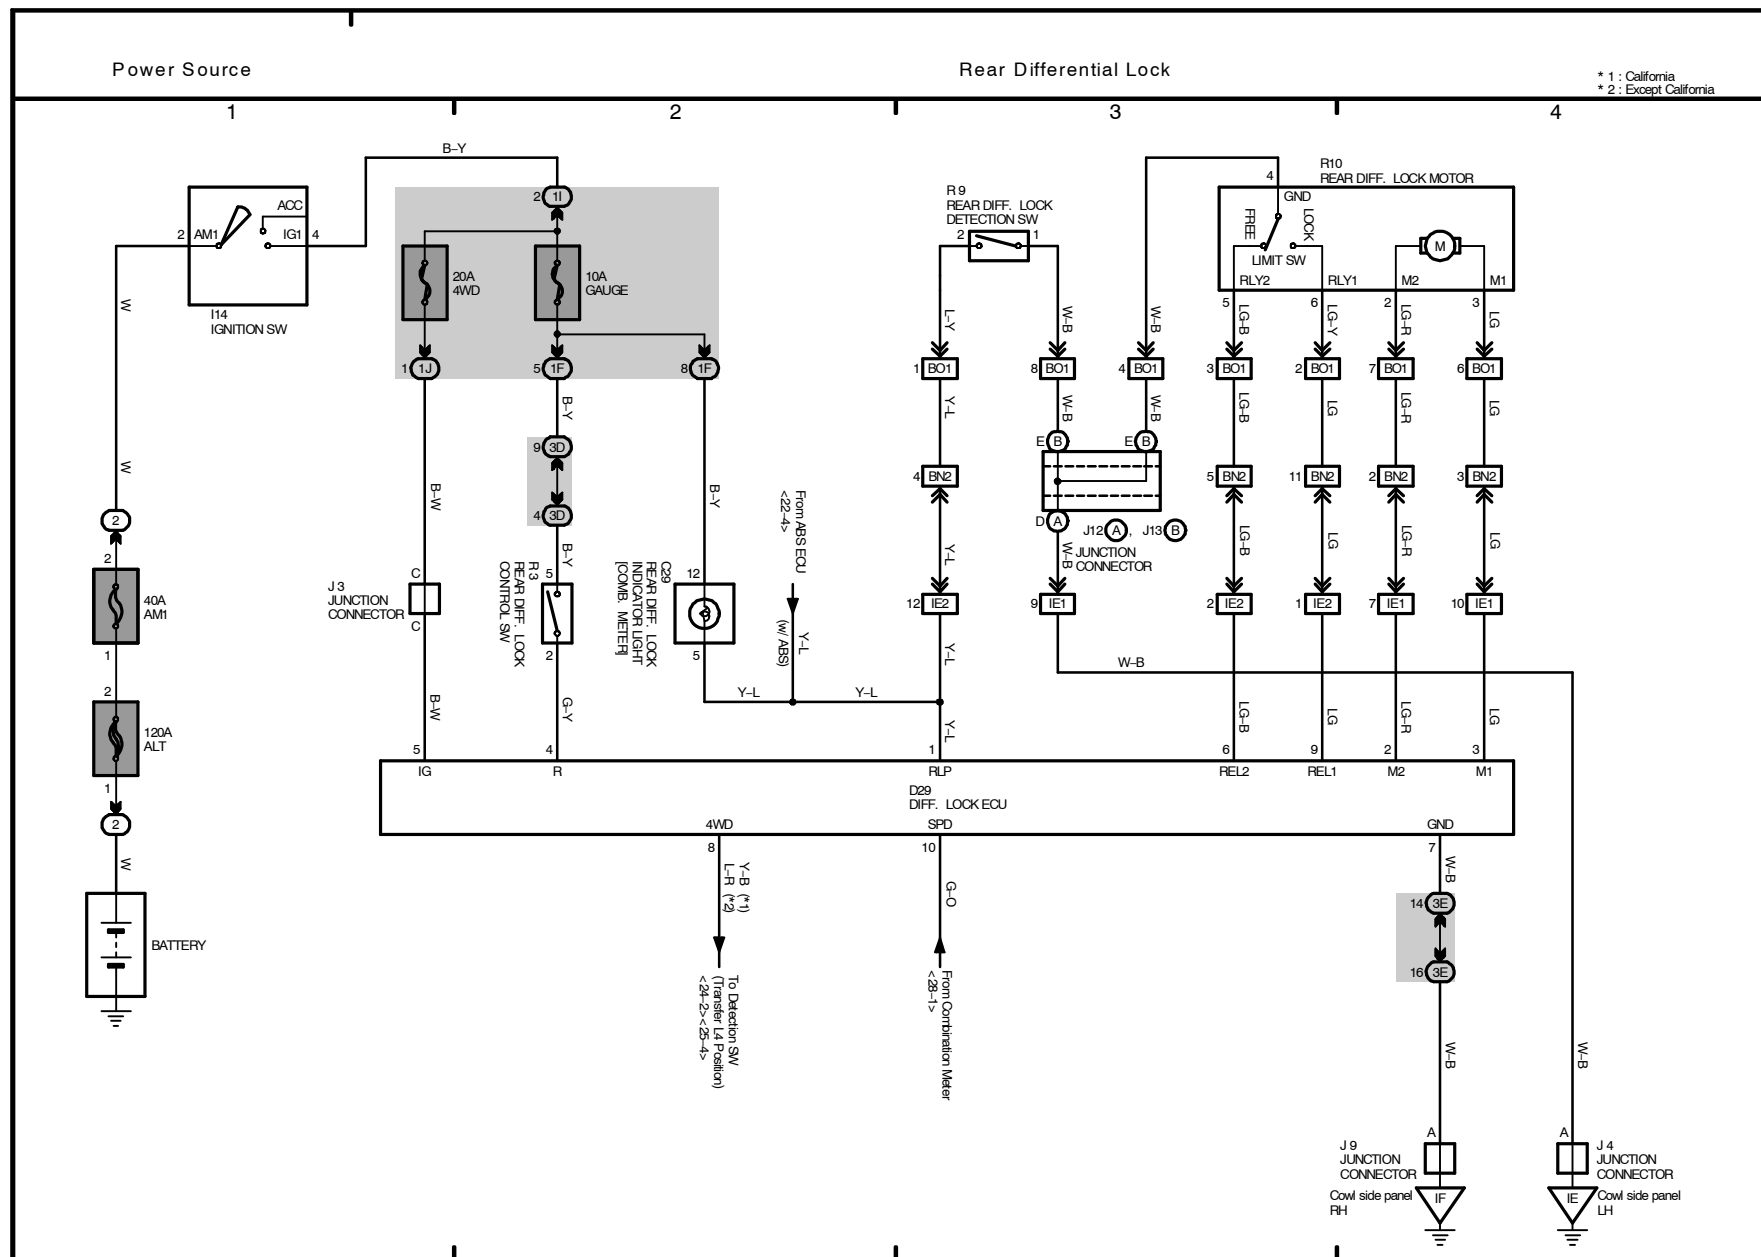



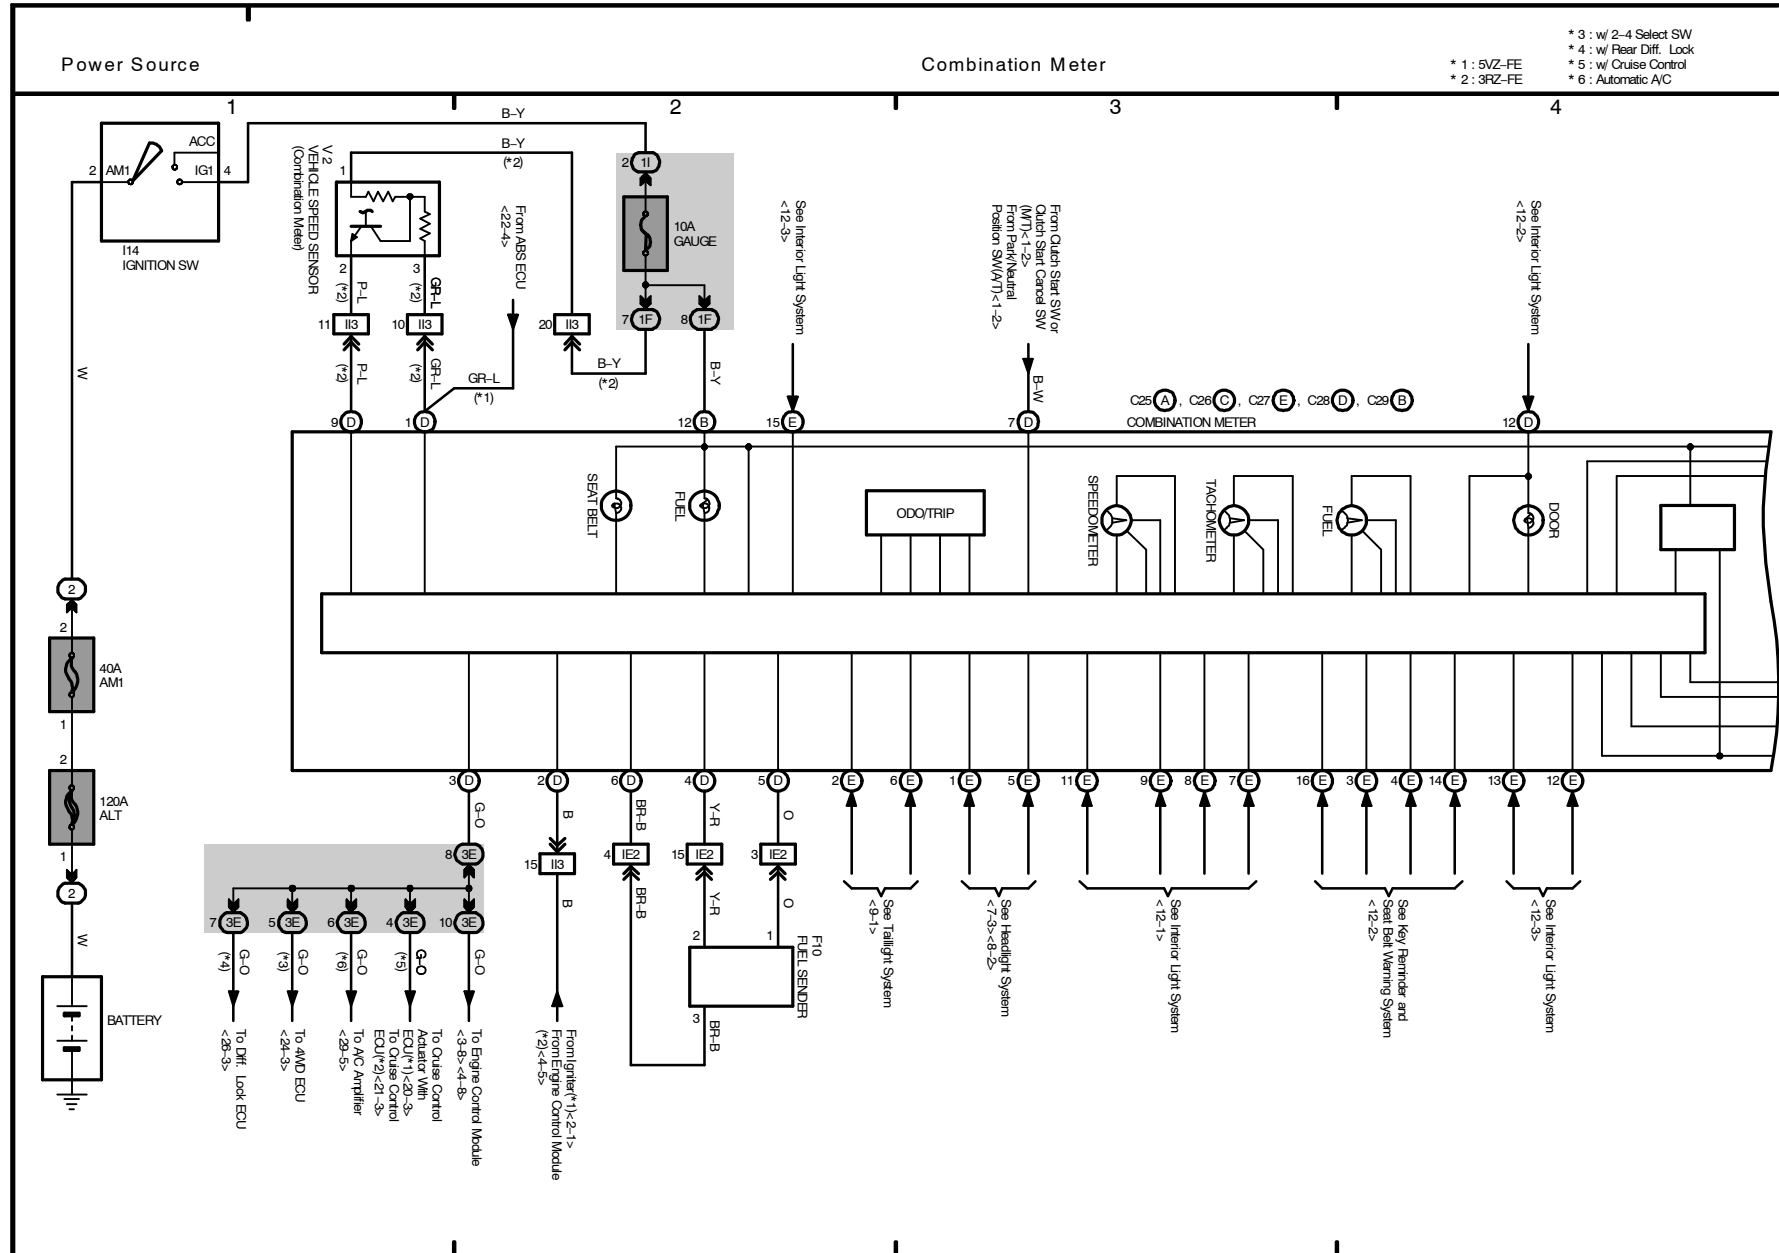

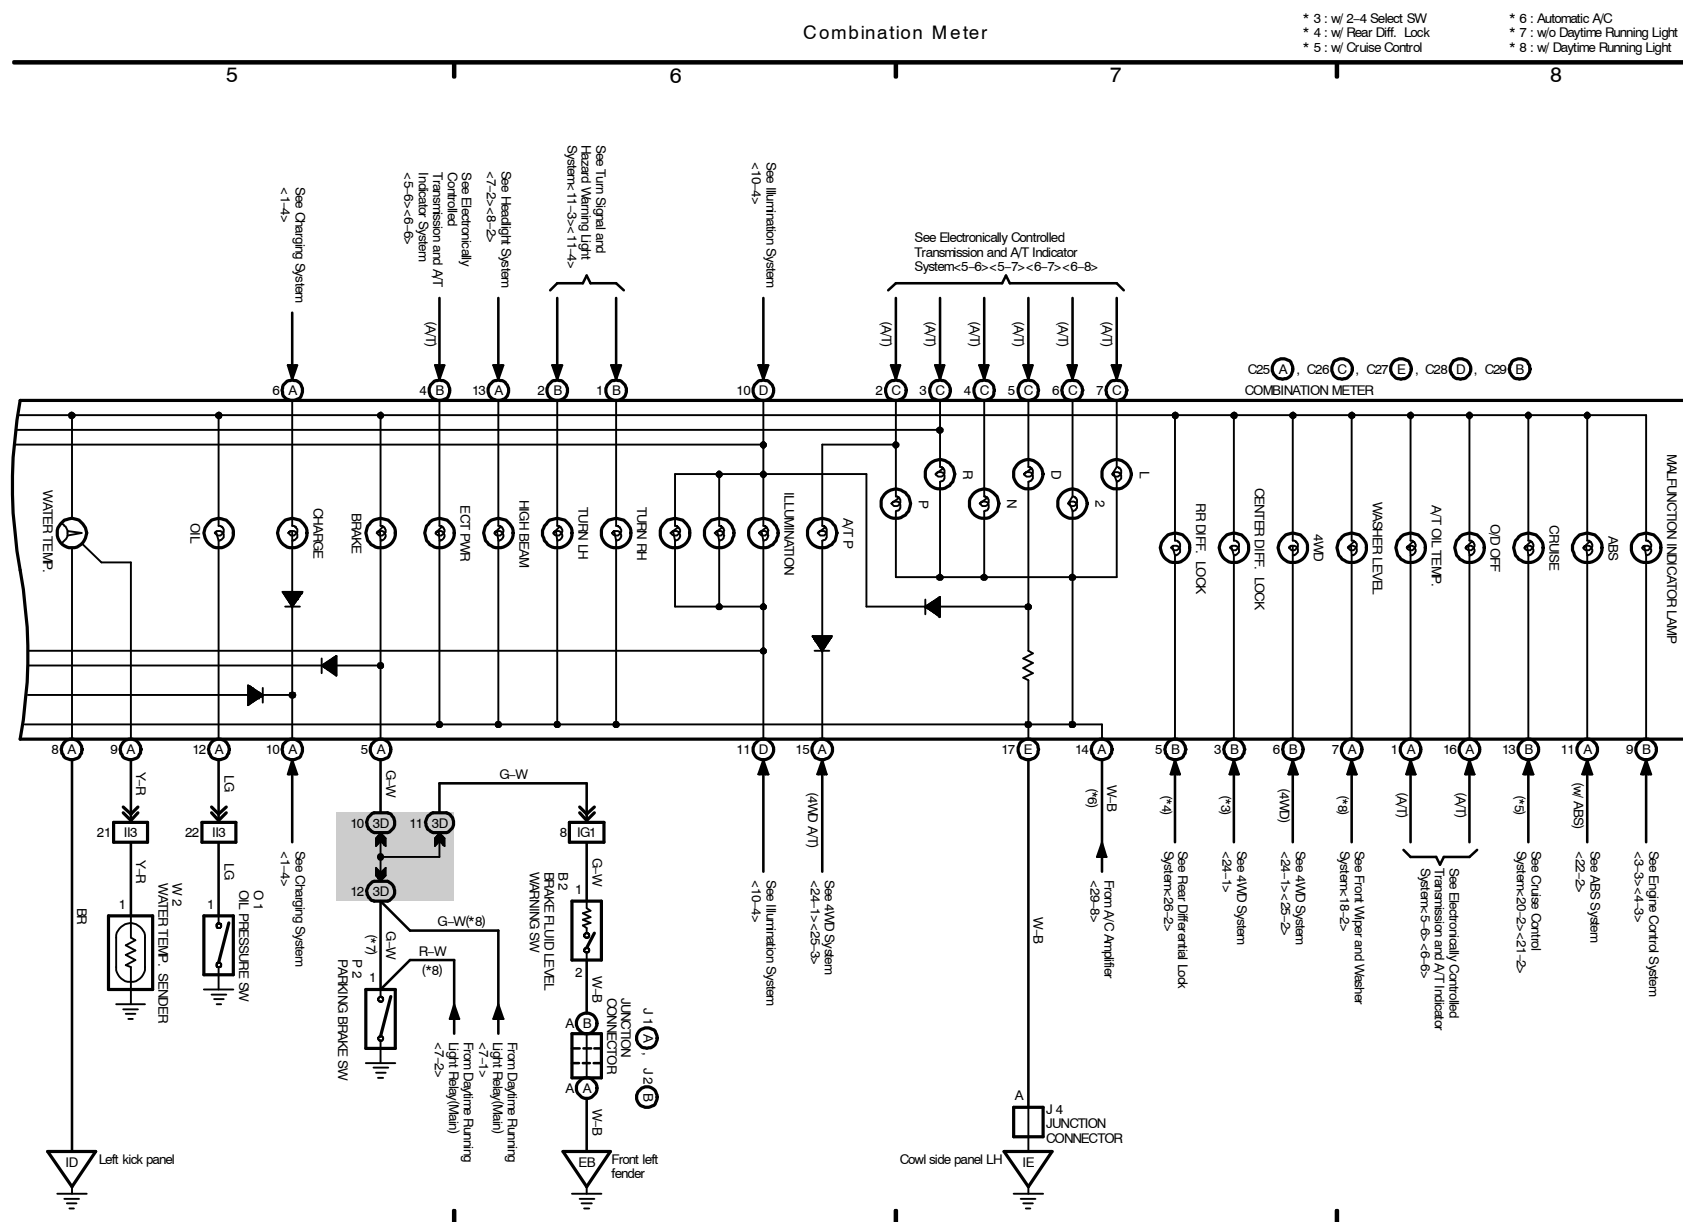

Power Source

Automatic Air Conditioning

Legend:

Wire Color	Terminal
L-R	(A)
B-Y	(B)
Y-R	(C)
R-Y	(D)
G-B	(E)
R-W	(F)
B-Y	(G)
W-B	(H)

Components and Connections:

- Power Source:** Battery, 120A ALT, 50A J/B, 7 SA EQU-B, 10A GAUGE, 114 IGNITION SW, 115 HEATER RELAY, 116 BLOWER MOTOR, 117 BLOWER MOTOR LINEAR CONTROLLER, 118 JUNCTION CONNECTOR, 119 JUNCTION CONNECTOR, 120 JUNCTION CONNECTOR.
- Automatic Air Conditioning:** 10A GAUGE, 115 HEATER RELAY, 116 BLOWER MOTOR, 117 BLOWER MOTOR LINEAR CONTROLLER, 118 JUNCTION CONNECTOR, 119 JUNCTION CONNECTOR, 120 JUNCTION CONNECTOR.

