



## IMPORTANT NOTICE


### 9.5XP WINCH FEET FORWARD MOUNTING

When mounting the 9.5XP Winch feet forward refer to the illustration below and follow the instructions for removing and replacing the sealant for motor drain slots.

#### **STEP -1-**

Remove motor from drum support

Remove the existing sealant from the drain slot in the drum support

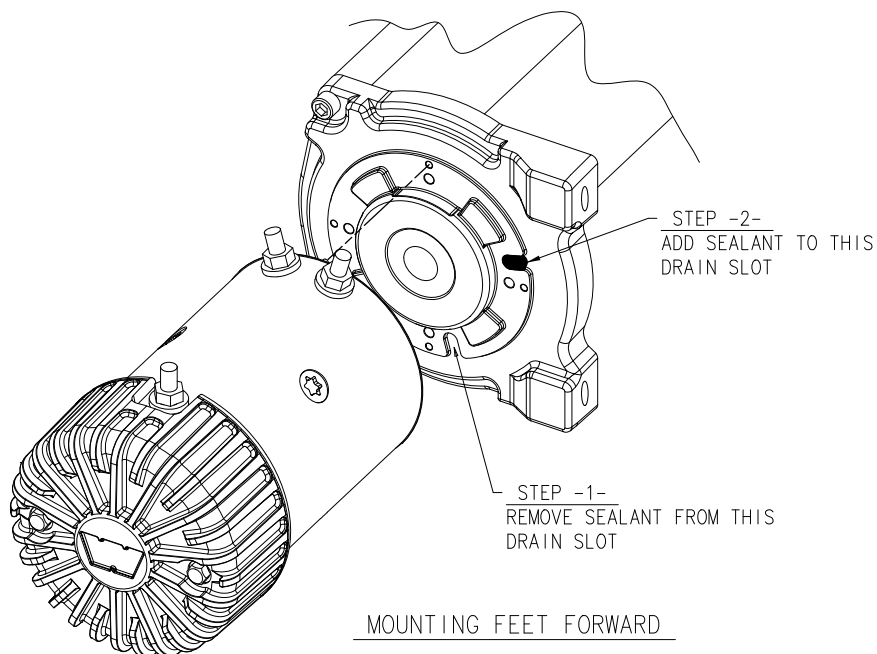

#### **STEP -2-**

Add sealant (Silicone Sealant DC737 recommended) to the top drain slot in the drum support as shown.

Add a drop of LOCTITE #271 to threads of each motor bolt, rotate motor if desired as shown, and then replace motor to drum support.

80381 REV A0